

DMX CONTROL

MODE 4 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	WHITE 0~100%	000 - 255

MODE 6 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	STROBE No function Strobe Slow to Fast	000 - 010 011 - 255

MODE 10 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	STROBE No function Strobe Slow to Fast	000 - 010 011 - 255
7	COLOR MACRO + WHITE BALANCE No Function R: 100% / G: 0-100% / B: 0% R: 100-0% / G: 100% / B: 0% R: 0% / G: 100% / B: 0-100% R: 0% / G: 100-0% / B: 100% R: 0-100% / G: 0% / B: 100% R: 100% / G: 0% / B: 100-0% R: 100% / G: 0-100% / B: 0-100% R: 100-0% / G: 100-0% / B: 100% R: 100% / G: 100% / B: 100% / W: 100% White 1 White 2 White 3 White 4 White 5 White 6 White 7 White 8 White 9 White 10 White 11	000 - 010 011 - 030 031 - 050 051 - 070 071 - 090 091 - 110 111 - 130 131 - 150 151 - 170 171 - 200 201 - 205 206 - 210 211 - 215 216 - 220 221 - 225 226 - 230 231 - 235 236 - 240 241 - 245 246 - 250 251 - 255
8	AUTO PROGRAMS No Function Auto program 1 Auto program 2 Auto program 3 Auto program 4 Auto program 5	000 - 010 011 - 028 029 - 046 047 - 064 065 - 082 083 - 100

MODE 10 Ch	FUNCTION	DMX Value
8	Auto program 6	101 - 118
	Auto program 7	119 - 136
	Auto program 8	137 - 154
	Auto program 9	155 - 172
	Auto program 10	173 - 190
	Auto program 11	191 - 208
	Auto program 12	209 - 226
	Auto program 13	227 - 244
	Auto program 0	245 - 255
9	AUTO SPEED Auto speed slow to fast	000 - 255
10	DIMMER SPEED Preset dimmer speed from display menu	000 - 051
	Dimmer speed mode off	052 - 101
	Dimmer speed mode1 (fast speed)	102 - 152
	Dimmer speed mode2 (middle speed)	153 - 203
	Dimmer speed mode3 (slow speed)	204 - 255

MODE 48 Ch	FUNCTION	DMX Value
1	RED 1 0~100%	000 - 255
2	GREEN 1 0~100%	000 - 255
3	BLUE 1 0~100%	000 - 255
4	WHITE 1 0~100%	000 - 255
5	RED 2 0~100%	000 - 255
6	GREEN 2 0~100%	000 - 255
7	BLUE 2 0~100%	000 - 255
8	WHITE 2 0~100%	000 - 255
9	RED 3 0~100%	000 - 255
10	GREEN 3 0~100%	000 - 255
11	BLUE 3 0~100%	000 - 255
12	WHITE 3 0~100%	000 - 255
...
...
...
45	RED 12 0~100%	000 - 255
46	GREEN 12 0~100%	000 - 255
47	BLUE 12 0~100%	000 - 255
48	WHITE 12 0~100%	000 - 255

MODE 53 Ch	FUNCTION	DMX Value
1	RED 1 0~100%	000 - 255
2	GREEN 1 0~100%	000 - 255
3	BLUE 1 0~100%	000 - 255
4	WHITE 1 0~100%	000 - 255
5	RED 2 0~100%	000 - 255
6	GREEN 2 0~100%	000 - 255
7	BLUE 2 0~100%	000 - 255
8	WHITE 2 0~100%	000 - 255
9	RED 3 0~100%	000 - 255
10	GREEN 3 0~100%	000 - 255
11	BLUE 3 0~100%	000 - 255
12	WHITE 3 0~100%	000 - 255
...
...
...
45	RED 12 0~100%	000 - 255
46	GREEN 12 0~100%	000 - 255
47	BLUE 12 0~100%	000 - 255
48	WHITE 12 0~100%	000 - 255

MODE 53 Ch	FUNCTION	DMX Value
49	AUTO PROGRAMS No Function Auto program 1 Auto program 2 Auto program 3 Auto program 4 Auto program 5 Auto program 6 Auto program 7 Auto program 8 Auto program 9 Auto program 10 Auto program 11 Auto program 12 Auto program 13 Auto program 0	000 - 010 011 - 028 029 - 046 047 - 064 065 - 082 083 - 100 101 - 118 119 - 136 137 - 154 155 - 172 173 - 190 191 - 208 209 - 226 227 - 244 245 - 255
50	AUTO SPEED Auto speed slow to fast	000 - 255
51	DIMMER 0~100%	000 - 255
52	STROBE No function Strobe Slow to Fast	000 - 010 011 - 255
53	DIMMER SPEED Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255