

DMX CONTROL

1 CHANNEL

MODE 1 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255

2 CHANNELS

MODE 2 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	STROBE No function Strobe Slow to Fast No function Random strobe Slow to Fast No function	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255

5 CHANNELS

MODE 5 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	STROBE No function Strobe Slow to Fast No function Random strobe Slow to Fast No function	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255
3	AUTO PROGRAMM NO Function Auto program 1 Auto program 2 Auto program 3 Auto program 4	000 - 010 011 - 070 071 - 130 131 - 190 191 - 255
4	AUTO PROGRAMM SPEED Slow to Fast	000 - 255
5	DIMMER SPEED Preset from display menu Mode off Mode1 (fast speed) Mode2 (middle speed) Mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255