





STARKBAR1000

DMX CONTROL

WASH	FX	PIX-FX	STARKBAR1000 FUNCTIONS	DMX Value
13CH	23CH	91CH		
1	1	1	TILT Tilt coarse	000 - 255
2	2	2	TILT FINE Tilt fine	000 - 255
3	3	3	MOVMENT SPEED Fastest to slowest Movement with Blackout	000 - 250 251 - 255
4	4	4	SHUTTER Closed Strobe effect slow to fast Shutter open 1 Pulse-effect in sequences Shutter open 2 Random strobe effect slow to fast Shutter open 3	000 - 010 011 - 082 083 - 093 094 - 163 164 - 174 175 - 244 245 - 255
5	5	5	DIMMER Dimmer 0% ~ 100%	000 - 255
	6	6	DIMMER FADE Snap 0% to 100% fade out	000 - 255
6	7	7	VIRTUAL COLOR FUNCTION Normal Function White presets Forward Spin Reverse Spin Continuous TBD	000 - 015 016 - 031 032 - 047 048 - 063 064 - 079 080 - 255
7	8	8	VIRTUAL COLOR 1 White Presets White 2000K ~ 2700K White 2700K ~ 3200K White 3200K ~ 4200K White 4200K ~ 5600K White 5600K ~ 8000K White 8000K ~ 10000K Forward Spin Rainbow Effect (Slow to Fast) Reverse Spin Rainbow Effect (Slow to Fast) Continuous Black Red Green Blue White Pastel Red Pastel Green Pastel Blue Cyan Magenta Yellow Light Yellow Light Blue Light Magenta Full White Full White ~ White 3200K White 3200K ~ White 4200K White 4200K ~ White 5600K	000 - 155 156 - 175 176 - 195 196 - 215 216 - 235 236 - 255 000 - 255 000 - 255 000 - 000 001 - 013 014 - 027 028 - 041 042 - 055 056 - 069 070 - 083 084 - 097 098 - 111 112 - 125 126 - 139 140 - 153 154 - 167 168 - 181 182 - 195 196 - 225 226 - 235 236 - 255

STARKBAR1000

WASH	FX	PIX-FX	STARKBAR1000 FUNCTION	DMX Value
13CH	23CH	91CH		
8	9		RED 0~100% 	000 - 255
9	10		GREEN 0~100% 	000 - 255
10	11		BLUE 0~100% 	000 - 255
11	12		WHITE 0~100% 	000 - 255
12	13	9	ZOOM Big to Small	000 - 255
	14	10	PATTERN No Pattern	000 - 015
			Static Pattern Static mode	016 - 031
			Dynamic Pattern Selection	
			Dynamic Pattern 1	032 - 049
			Dynamic Pattern 2	050 - 058
			Dynamic Pattern 3	059 - 067
			Dynamic Pattern 4	068 - 076
			Dynamic Pattern 5	077 - 085
			Dynamic Pattern 6	086 - 094
			Dynamic Pattern 7	095 - 103
			Dynamic Pattern 8	104 - 112
			Dynamic Pattern 9	113 - 121
			Dynamic Pattern 10	122 - 130
			Dynamic Pattern 11	131 - 139
			Dynamic Pattern 12	140 - 148
			Dynamic Pattern 13	149 - 157
			Dynamic Pattern 14	158 - 166
			Dynamic Pattern 15	167 - 175
			Dynamic Pattern 16	176 - 184
			Dynamic Pattern 17	185 - 193
			Dynamic Pattern 18	194 - 202
			Dynamic Pattern 19	203 - 211
			Dynamic Pattern 20	212 - 220
			Dynamic Pattern 21	221 - 229
			Random Pattern Random	230 - 255
	15	11	PATTERN CONTROL Static Pattern No Function	000 - 002
			Static Selection (When static mode is active)	003 - 252
			No Function	253 - 255
			Dynamic Pattern (When dinamic patterns are active)	
			Index	000 - 037
			Forward spin	038 - 144
			Stop	145 - 148
			Reverse spin	149 - 255

STARKBAR1000

WASH	FX	PIX-FX	STARKBAR1000 FUNCTION	DMX Value
13CH	23CH	91CH		
	16	12	PATTERN TRANSITION Dimmer 0% ~ 100%	000 - 255
	17	13	FOREGROUND Foreground color (same as CONTINUOUS PRESETS)	000 - 255
	18	14	FOREGROUND DIMMER Dimmer 0% ~ 100%	000 - 255
	19	15	FOREGROUND SHUTTER Shutter closed Strobe effect slow to fast Shutter open 1 Random strobe effect slow to fast Shutter open 2	000 - 010 011 - 163 164 - 174 175 - 244 245 - 255
	20	16	BACKGROUND Background color (same as CONTINUOUS PRESETS)	000 - 255
	21	17	BACKGROUND DIMMER Dimmer 0% ~ 100%	000 - 255
	22	18	BACKGROUND SHUTTER Shutter closed Strobe effect slow to fast Shutter open 1 Random strobe effect slow to fast Shutter open 2	000 - 010 011 - 163 164 - 174 175 - 244 245 - 255
13	23	19	CONTROL Normal Reset All Tilt Reset TBD Other Reset Display Off Display On TBD TBD Hibernation TBD	000 - 007 008 - 015 016 - 023 024 - 047 048 - 055 056 - 063 064 - 071 072 - 079 080 - 087 088 - 095 096 - 255
		20	RED 1 0~100%	000 - 255
		21	GREEN 1 0~100%	000 - 255
		22	BLUE 1 0~100%	000 - 255
		23	WHITE 1 0~100%	000 - 255
		
		88	RED 18 0~100%	000 - 255
		89	GREEN 18 0~100%	000 - 255
		90	BLUE 18 0~100%	000 - 255
		91	WHITE 18 0~100%	000 - 255