

DMX CONTROL

THEATER - 1 CHANNEL

MODE 1 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
NOTE - CHOOSE THE COLOR PRESET IN WHITE CALIBRATION		

THEATER - 3 CHANNELS

MODE 3 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	WHITE PRESET White 2700K White 3200K White 4200K White 5000K White 5500K White 6000K White 7000K White 8000K White 9000K White 10000K	000 - 026 027 - 051 052 - 076 077 - 101 102 - 126 127 - 151 152 - 176 177 - 201 202 - 226 227 - 255
3	DIMMER FADE 0~100% (0-1,5 s)	000 - 255

THEATER - 5 CHANNELS

MODE 5 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	LIME 0~100%	000 - 255

TOUR - 4 CHANNELS

MODE 4 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	LIME 0~100%	000 - 255

TOUR - 8 CHANNELS

MODE 8 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	LIME 0~100%	000 - 255
6	COLOR PRESET	
	No Function	000 - 003
	Red	004 - 015
	Green	016 - 027
	Blue	028 - 039
	Lime	040 - 051
	Cyan	052 - 063
	Magenta	064 - 075
	Yellow	076 - 087
	Orange	088 - 099
	Light Yellow	100 - 111
	Light Blue	112 - 123
	Light Pink	124 - 135
	White 2700K	136 - 147
	White 3200K	148 - 159
	White 4200K	160 - 171
	White 5000K	172 - 183
	White 5500K	184 - 195
	White 6000K	196 - 207
	White 7000K	208 - 219
	White 8000K	220 - 231
	White 9000K	232 - 243
	White 10000K	244 - 255
7	STROBE No Function Strobe slow to fast	000 - 010 011 - 255
8	DIMMER FADE 0~100% (0-1,5 s)	000 - 255

TOUR - 11 CHANNELS

MODE 11 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	DIMMER FINE 0~100%	000 - 255
3	RED 0~100%	000 - 255
4	RED FINE 0~100%	000 - 255
5	GREEN 0~100%	000 - 255
6	GREEN FINE 0~100%	000 - 255
7	BLUE 0~100%	000 - 255
8	BLUE FINE 0~100%	000 - 255
9	LIME 0~100%	000 - 255
10	LIME FINE 0~100%	000 - 255
11	STROBE No Function Strobe slow to fast	000 - 010 011 - 255

THEATER - 17 CHANNELS

MODE 17 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	DIMMER FINE 0~100%	000 - 255
3	STROBE No Function shutter open Strobe effect slow to fast No Function shutter open Random strobe effect slow to fast No Function shutter open	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255
4	CTO 2700K - 3200K 3200K - 4200K 4200K - 5000K 5000K - 5500K 5500K - 6000K 6000K - 7000K 7000K - 8000K 8000K - 9000K 9000K - 10000K	000 - 027 028 - 055 056 - 083 084 - 111 112 - 139 140 - 167 168 - 195 196 - 223 224 - 255
5	HUE -25 to 0 No Function 0 to +25	000 - 126 127 - 127 128 - 255
6	CROSSFADE 0~100%	000 - 255

THEATER - 17 CHANNELS

MODE 17 Ch	FUNCTION	DMX Value
7	RED 0~100%	000 - 255
8	RED FINE 0~100%	000 - 255
9	GREEN 0~100%	000 - 255
10	GREEN FINE 0~100%	000 - 255
11	BLUE 0~100%	000 - 255
12	BLUE FINE 0~100%	000 - 255
13	LIME 0~100%	000 - 255
14	LIME FINE 0~100%	000 - 255
15	COLOR MACRO No Function Amber Shift on Color Macro	000 - 002 003 - 005 006 - 255
16	CTO 0~100%	000 - 255
17	DIMMER FADE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255