

CHANNELS DMX

4 CHANNELS

MODE 4 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	WHITE 0~100%	000 - 255

6 CHANNELS

MODE 6 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	STROBE NO Function Strobe Slow to Fast	000 - 010 011 - 255

11 CHANNELS

MODE 11 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	STROBE NO Function Strobe Slow to Fast	000 - 010 011 - 255

11 CHANNELS

MODE 11 Ch	FUNCTION	DMX Value
7	COLOR MACRO No Function R 100%, G 0~100%, B 0% R 100%~0%, G 100%, B 0% R 0%, G 100%, B 0~100% R 0% G 100%~0% B 100% R 0%~100% G 0% B 100% R 100% G 0% B 100%~0% R 100% G 0%~100% B 0%~100% R 100%~0% G 100%~0% B 100% R 100% G 100% B 100%	000 - 010 011 - 030 031 - 050 051 - 070 071 - 090 091 - 110 111 - 130 131 - 150 151 - 170 171 - 200 201 - 205
	Color2	206 - 210
	Color3	211 - 215
	Color4	216 - 220
	Color5	221 - 225
	Color6	226 - 230
	Color7	231 - 235
	Color8	236 - 240
	Color9	241 - 245
	Color10	246 - 250
	Color11	251 - 255
8	COLOR TEMPERATURE NO function 3000k 4000k 5000k 6000k 7000k 8000k 9000k 10000k NO function	000 - 005 006 - 039 040 - 069 070 - 099 100 - 129 130 - 159 160 - 189 190 - 219 220 - 250 251 - 255
	AUTO PROGRAMS No Function Auto Program 1 Auto Program 2 Auto Program 3 Auto Program 4 Auto Program 5(Auto Program1- 4)	000 - 010 011 - 060 061 - 110 111 - 160 161 - 210 211 - 255
	AUTO SPEED Auto speed slow to fast	000 - 255
	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255