

CHANNELS DMX

1 CHANNEL

MODE 1 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255

3 CHANNELS

MODE 3 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255
2	<b>SHUTTER</b> NO Function (shutter open) Strobe effect slow fast No function (shutter open) Pulse-effect in sequences (slow ti fast) NO Function (shutter open) Random strobe effect slow to fast NO Function (shutter open)	000 - 010 011 - 082 083 - 093 094 - 163 164 - 174 175 - 244 245 - 255
3	<b>DIMMER FADE</b> Preset dimmer speed from display menu Dimmer snap to fade	000 - 000 001 - 255