

DMX CHARTS

Channel	EASY 1CH	BASIC 2CH 1	BASIC 2CH 2	BASIC 3CH	STANDARD 5CH
1	DIMMER	DIMMER	DIMMER	DIMMER	DIMMER
2		DIMMER FINE	STROBE	DIMMER FINE	STROBE
3				STROBE	AUTO PROGRAMS
4					AUTO SPEED
5					DIMMER SPEED MODE

EASY 1CH	BASIC 2CH 1	BASIC 2CH 2	BASIC 3CH	STANDARD 5CH	Function	DMX Value	Default
1	1	1	1	1	DIMMER 0~100%	000 ÷ 255	000
	2		2		DIMMER FINE 0~100%	000 ÷ 255	000
		2	3	2	STROBE No Function Strobe Slow to Fast	000 ÷ 010 011 ÷ 255	255
				3	AUTO PROGRAMS No Function Auto Program 1 Auto Program 2 Auto Program 3 Auto Program 4	000 - 010 011 - 070 071 - 130 131 - 190 191 - 255	000
				4	AUTO SPEED Auto speed slow to fast	000 ÷ 255	000
				6	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255	255