

DMX CONTROL

MODE 6 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	AMBER 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	PURPLE 0~100%	000 - 255

MODE 8 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	AMBER 0~100%	000 - 255
6	WHITE 0~100%	000 - 255
7	PURPLE 0~100%	000 - 255
8	STROBE No function Strobe Slow to Fast	000 - 010 011 - 255

MODE 12 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	AMBER 0~100%	000 - 255
6	WHITE 0~100%	000 - 255
7	PURPLE 0~100%	000 - 255
8	STROBE No function Strobe Slow to Fast	000 - 010 011 - 255
9	COLOR MACRO + WHITE BALANCE No Function R: 100% / G: 0-100% / B: 0% R: 100-0% / G: 100% / B: 0% R: 0% / G: 100% / B: 0-100% R: 0% / G: 100-0% / B: 100% R: 0-100% / G: 0% / B: 100% R: 100% / G: 0% / B: 100-0% R: 100% / G: 0-100% / B: 0-100% R: 100-0% / G: 100-0% / B: 100% R: 100% / G: 100% / B: 100% / W: 100% Color temperature 1 Color temperature 2 Color temperature 3 Color temperature 4 Color temperature 5 Color temperature 6 Color temperature 7 Color temperature 8 Color temperature 9 Color temperature 10 Color temperature 11	000 - 010 011 - 030 031 - 050 051 - 070 071 - 090 091 - 110 111 - 130 131 - 150 151 - 170 171 - 200 201 - 205 206 - 210 211 - 215 216 - 220 221 - 225 226 - 230 231 - 235 236 - 240 241 - 245 246 - 250 251 - 255
10	AUTO PROGRAMS No Function Auto program 1	000 - 010 011 - 027

MODE 12 Ch	FUNCTION	DMX Value
10	Auto programs 2	028 - 044
	Auto programs 3	045 - 061
	Auto programs 4	062 - 078
	Auto programs 5	079 - 095
	Auto programs 6	096 - 112
	Auto programs 7	113 - 129
	Auto programs 8	130 - 146
	Auto programs 9	147 - 163
	Auto programs 10	164 - 180
	Auto programs 11	181 - 197
	Auto programs 12	198 - 214
	Fade programs	215 - 231
	Auto programs 0 (Auto 1-12)	232 - 255
11	AUTO SPEED	
	Auto speed slow to fast	000 - 255
12	DIMMER SPEED	
	Preset dimmer speed from display menu	000 - 051
	Dimmer speed mode off	052 - 101
	Dimmer speed mode1 (fast speed)	102 - 152
	Dimmer speed mode2 (middle speed)	153 - 203
	Dimmer speed mode3 (slow speed)	204 - 255

MODE 48 Ch	FUNCTION	DMX Value
1	RED1	000 - 255
2	GREEN1	000 - 255
3	BLUE1	000 - 255
4	AMBER1	000 - 255
5	WHITE1	000 - 255
6	PURPLE1	000 - 255
7	RED2	000 - 255
8	GREEN2	000 - 255
9	BLUE2	000 - 255
10	AMBER2	000 - 255
11	WHITE2	000 - 255
12	PURPLE2	000 - 255
13	RED3	000 - 255
14	GREEN3	000 - 255
15	BLUE3	000 - 255
16	AMBER3	000 - 255
17	WHITE3	000 - 255
18	PURPLE3	000 - 255
19	RED4	000 - 255
20	GREEN4	000 - 255
21	BLUE4	000 - 255

MODE 48 Ch	FUNCTION	DMX Value
22	AMBER4	000 - 255
23	WHITE4	000 - 255
24	PURPLE4	000 - 255
25	RED5	000 - 255
26	GREEN5	000 - 255
27	BLUE5	000 - 255
28	AMBER5	000 - 255
29	WHITE5	000 - 255
30	PURPLE5	000 - 255
31	RED6	000 - 255
32	GREEN6	000 - 255
33	BLUE6	000 - 255
34	AMBER6	000 - 255
35	WHITE6	000 - 255
36	PURPLE6	000 - 255
37	RED7	000 - 255
38	GREEN7	000 - 255
39	BLUE7	000 - 255
40	AMBER7	000 - 255
41	WHITE7	000 - 255
42	PURPLE7	000 - 255

MODE 48 Ch	FUNCTION	DMX Value
43	RED8	000 - 255
44	GREEN8	000 - 255
45	BLUE8	000 - 255
46	AMBER8	000 - 255
47	WHITE8	000 - 255
48	PURPLE8	000 - 255

MODE 53 Ch	FUNCTION	DMX Value
1	RED1	000 - 255
2	GREEN1	000 - 255
3	BLUE1	000 - 255
4	AMBER1	000 - 255
5	WHITE1	000 - 255
6	PURPLE1	000 - 255
...
43	RED8	000 - 255
44	GREEN8	000 - 255
45	BLUE8	000 - 255
46	AMBER8	000 - 255
47	WHITE8	000 - 255
48	PURPLE8	000 - 255
49	AUTO PROGRAMS No Function Auto program 1 Auto programs 2 Auto programs 3 Auto programs 4 Auto programs 5 Auto programs 6 Auto programs 7 Auto programs 8 Auto programs 9 Auto programs 10 Auto programs 11 Auto programs 12 Fade programs Auto programs 0 (Auto 1-12)	000 - 010 011 - 027 028 - 044 045 - 061 062 - 078 079 - 095 096 - 112 113 - 129 130 - 146 147 - 163 164 - 180 181 - 197 198 - 214 215 - 231 232 - 255

MODE 53 Ch	FUNCTION	DMX Value
50	AUTO SPEED Auto speed slow to fast	000 - 255
51	DIMMER 0~100%	000 - 255
52	STROBE No function Strobe Slow to Fast	000 - 010 011 - 255
53	DIMMER SPEED Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255

MODE 3 Ch	FUNCTION	DMX Value
1	HUE	000 - 255
2	SATURATION	000 - 255
3	VALUE (BRIGHTNESS)	000 - 255

MODE 3 Ch	FUNCTION	DMX Value
1	HUE	000 - 255
2	SATURATION	000 - 255
3	INTENSITY	000 - 255