


DMX CONTROL

5 CHANNELS

MODE 5 Ch	FUNCTION	DMX Value
1	DIMMER 0 - 100%	000 - 255
2	STROBE No Function Slow to fast	000 - 010 011 - 255
3	AUTO PROGRAMS No Function Auto 1 Auto 2 Auto 3 Auto 4 Auto 5 Auto 6 Auto 7 Auto 8 Auto 0	000 - 010 011 - 038 039 - 066 067 - 094 095 - 122 123 - 150 151 - 178 179 - 206 207 - 234 235 - 255
4	AUTO SPEED Slow to Fast	000 - 255
5	DIM MODE Menu setting dimmer mode Dimmer mode off Dimmer mode 1 Dimmer mode 2 Dimmer mode 3	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255

8 CHANNELS

MODE 8 Ch	FUNCTION	DMX Value
1	DIMMER 0 - 100%	000 - 255
2	STROBE No Function Slow to fast	000 - 010 011 - 255
3	FOREGROUND DIMMER 0 - 100%	000 - 255
4	BACKGROUND DIMMER 0 - 100%	000 - 255
5	ALPHANUMERIC No Function Numeric Characters 1 - 0 Alpha Characters A - Z	000 - 000 001 - 127 128 - 255
6	GOBO MAPS No Function Simple Cross (gobo 1) Simple Box (gobo 2) Square Imploder (gobo 3) Square Exploder (gobo 4) Diamond Imploder (gobo 5) Diamond Exploder (gobo 6) 2 Line Spinner (gobo 7) Triangle Spinner (gobo 8) Tri-Downer (gobo 9) Tri-Upper (gobo 10) Bowtie Spinner (gobo 11) One-Liner (gobo 12) Line Hop UP (gobo 13) Line Hop DOWN (gobo 14) Line Hop UP DOWN (gobo 15) T-Spin (gobo 16) Upside Down T-Spin (gobo 17) Diamond Spoke Spin (gobo 18) Line Hop LEFT (gobo 19) Line Hop RIGHT (gobo 20) Line Hop LEFT RIGHT (gobo 21) Double Verticals (gobo 22) Double Horizontals (gobo 23) Diagonal Right (gobo 24) Diagonal Left (gobo 25) Moving Squares (gobo 26) Clock (gobo 27)	000-010 011-020 021-029 030-038 039-047 048-056 057-065 066-074 075-083 084-092 093-101 102-110 111-119 120-128 129-137 138-146 147-155 156-164 165-173 174-182 183-191 192-200 201-209 210-218 219-227 228-236 237-246 247-255

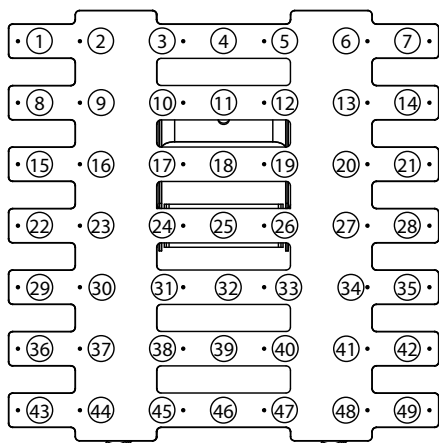

MODE 8 Ch	FUNCTION	DMX Value
7	GOBO SPEED	
	No function (stop)	000-010
	Gobo index	011-100
	No function	101-149
	Gobo speed (CW)	150-202
	Gobo Speed (CCW)	203-255
	ALPHANUMERIC ROTATION	
	0°	000-063
	90°	064-127
	180°	128-191
	270°	192-255
8	DIM MODE	
	Menu setting dimmer mode	000 - 051
	Dimmer mode off	052 - 101
	Dimmer mode 1	102 - 152
	Dimmer mode 2	153 - 203
	Dimmer mode 3	204 - 255

49 CHANNELS

MODE 49 Ch	FUNCTION	DMX Value
1	WHITE 1 0 - 100%	000 - 255
2	WHITE 2 0 - 100%	000 - 255
3	WHITE 3 0 - 100%	000 - 255
4	WHITE 4 0 - 100%	000 - 255
5	WHITE 5 0 - 100%	000 - 255
6	WHITE 6 0 - 100%	000 - 255
7	WHITE 7 0 - 100%	000 - 255
8	WHITE 8 0 - 100%	000 - 255

MODE 49 Ch	FUNCTION	DMX Value
9	WHITE 9 0 - 100%	000 - 255
10	WHITE 10 0 - 100%	000 - 255
...
41	WHITE 41 0 - 100%	000 - 255
42	WHITE 42 0 - 100%	000 - 255
43	WHITE 43 0 - 100%	000 - 255
44	WHITE 44 0 - 100%	000 - 255
45	WHITE 45 0 - 100%	000 - 255
46	WHITE 46 0 - 100%	000 - 255
47	WHITE 47 0 - 100%	000 - 255
48	WHITE 48 0 - 100%	000 - 255
49	WHITE 49 0 - 100%	000 - 255

54 CHANNELS

MODE 54 Ch	FUNCTION	DMX Value
1	WHITE 1 0 - 100%	000 - 255
2	WHITE 2 0 - 100%	000 - 255
3	WHITE 3 0 - 100%	000 - 255
4	WHITE 4 0 - 100%	000 - 255

MODE 54 Ch	FUNCTION	DMX Value
5	WHITE 5 0 - 100%	000 - 255
6	WHITE 6 0 - 100%	000 - 255
7	WHITE 7 0 - 100%	000 - 255
8	WHITE 8 0 - 100%	000 - 255
9	WHITE 9 0 - 100%	000 - 255
10	WHITE 10 0 - 100%	000 - 255
...
41	WHITE 41 0 - 100%	000 - 255
42	WHITE 42 0 - 100%	000 - 255
43	WHITE 43 0 - 100%	000 - 255
44	WHITE 44 0 - 100%	000 - 255
45	WHITE 45 0 - 100%	000 - 255
46	WHITE 46 0 - 100%	000 - 255
47	WHITE 47 0 - 100%	000 - 255
48	WHITE 48 0 - 100%	000 - 255
49	WHITE 49 0 - 100%	000 - 255
50	AUTO PROGRAMS No Function Auto 1 Auto 2 Auto 3 Auto 4	000 - 010 011 - 038 039 - 066 067 - 094 095 - 122

MODE 54 Ch	FUNCTION	DMX Value
50	Auto 5 Auto 6 Auto 7 Auto 8 Auto 0	123 - 150 151 - 178 179 - 206 207 - 234 235 - 255
51	AUTO SPEED Slow to Fast	000 - 255
52	DIMMER 0 - 100%	000 - 255
53	STROBE No Function Slow to fast	000 - 010 011 - 255
54	DIM MODE Menu setting dimmer mode Dimmer mode off Dimmer mode 1 Dimmer mode 2 Dimmer mode 3	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255

57 CHANNELS

MODE 57 Ch	FUNCTION	DMX Value
1	WHITE 1 0 - 100%	000 - 255
2	WHITE 2 0 - 100%	000 - 255
3	WHITE 3 0 - 100%	000 - 255
4	WHITE 4 0 - 100%	000 - 255
5	WHITE 5 0 - 100%	000 - 255
6	WHITE 6 0 - 100%	000 - 255
7	WHITE 7 0 - 100%	000 - 255
8	WHITE 8 0 - 100%	000 - 255

MODE 57 Ch	FUNCTION	DMX Value
9	WHITE 9 0 - 100%	000 - 255
10	WHITE 10 0 - 100%	000 - 255
...
41	WHITE 41 0 - 100%	000 - 255
42	WHITE 42 0 - 100%	000 - 255
43	WHITE 43 0 - 100%	000 - 255
44	WHITE 44 0 - 100%	000 - 255
45	WHITE 45 0 - 100%	000 - 255
46	WHITE 46 0 - 100%	000 - 255
47	WHITE 47 0 - 100%	000 - 255
48	WHITE 48 0 - 100%	000 - 255
49	WHITE 49 0 - 100%	000 - 255
50	FOREGROUND DIMMER 0 - 100%	000 - 255
51	BACKGROUND DIMMER 0 - 100%	000 - 255
52	ALPHANUMERIC No Function Numeric Characters 1 - 0 Alpha Characters A - Z	000 - 000 001 - 127 128 - 255
53	GOBO MAPS No Function Simple Cross (gobo 1) Simple Box (gobo 2) Square Imploder (gobo 3) Square Exploder (gobo 4) Diamond Imploder (gobo 5)	000-010 011-020 021-029 030-038 039-047 048-056

MODE 57 Ch	FUNCTION	DMX Value
53	Diamond Exploder (gobo 6) 2 Line Spinner (gobo 7) Triangle Spinner (gobo 8) Tri-Downer (gobo 9) Tri-Upper (gobo 10) Bowtie Spinner (gobo 11) One-Liner (gobo 12) Line Hop UP (gobo 13) Line Hop DOWN (gobo 14) Line Hop UP DOWN (gobo 15) T-Spin (gobo 16) Upside Down T-Spin (gobo 17) Diamond Spoke Spin (gobo 18) Line Hop LEFT (gobo 19) Line Hop RIGHT (gobo 20) Line Hop LEFT RIGHT (gobo 21) Double Verticals (gobo 22) Double Horizontals (gobo 23) Diagonal Right (gobo 24) Diagonal Left (gobo 25) Moving Squares (gobo 26) Clock (gobo 27)	057-065 066-074 075-083 084-092 093-101 102-110 111-119 120-128 129-137 138-146 147-155 156-164 165-173 174-182 183-191 192-200 201-209 210-218 219-227 228-236 237-246 247-255
54	GOBO SPEED No function (stop) Gobo index No function Gobo speed (CW) Gobo Speed (CCW) ALPHANUMERIC ROTATION 0° 90° 180° 270°	000-010 011-100 101-149 150-202 203-255 000-063 064-127 128-191 192-255
55	DIMMER 0 - 100%	000 - 255
56	STROBE No Function Slow to fast	000 - 010 011 - 255
57	DIM MODE Menu setting dimmer mode Dimmer mode off Dimmer mode 1 Dimmer mode 2 Dimmer mode 3	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255