

## DMX CONTROL

## 3 CHANNELS

MODE 3 Ch	FUNCTION	DMX Value
1	<b>RED</b> 0~100%	000 - 255
2	<b>GREEN</b> 0~100%	000 - 255
3	<b>BLUE</b> 0~100%	000 - 255

## 5 CHANNELS

MODE 5 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255
2	<b>RED</b> 0~100%	000 - 255
3	<b>GREEN</b> 0~100%	000 - 255
4	<b>BLUE</b> 0~100%	000 - 255
5	<b>STROBE</b> No function Strobe Slow to Fast	000 - 010 011 - 255

## 8 CHANNELS

MODE 8 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255
2	<b>RED</b> 0~100%	000 - 255
3	<b>GREEN</b> 0~100%	000 - 255
4	<b>BLUE</b> 0~100%	000 - 255
5	<b>STROBE</b> No Function Slow to fast <b>SPEED</b> Slow to fast	000 - 010 011 - 255 000 - 255
6	<b>COLOR MACROS</b> No Function Color Macros (overrides CH 1~3)	000-015 016-255
7	<b>MODE</b> RGB mode Pulse effect 0~100% Pulse effect 100%~0 Pulse effect 100%~0~100% Auto fade transition Auto snap transition (3 colors) Auto snap transition (7 colors)	000-010 011-050 051-090 091-130 131-170 171-210 211-255
8	<b>DIMMER SPEED</b> Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed) High Reactive	000-051 052-101 102-152 153-203 204-229 230-255