

DMX CONTROL

4 Ch

MODE 4 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	WARM WHITE 0~100%	000 - 255
3	COLD WHITE 0~100%	000 - 255
4	STROBE No function Strobe Slow to Fast No function Random strobe Slow to Fast No function	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255

5 Ch

MODE 5 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	DIMMER FINE 0~100%	000 - 255
3	CCT 2800 K 3000 K 3200 K 3500 K 4000 K 5000 K 5600 K 6000 K Reserved Reserved	000 - 010 011 - 036 037 - 062 063 - 088 089 - 114 115 - 140 141 - 166 167 - 192 193 - 218 219 - 255
4	STROBE No function Strobe Slow to Fast No function Random strobe Slow to Fast No function	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255
5	DIMMER SPEED Preset from display menu Mode off Mode1 (fast speed) Mode2 (middle speed) Mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255

2 Ch

MODE 2 Ch	FUNCTION	DMX Value
1	WARM WHITE 0~100%	000 - 255
2	COLD WHITE 0~100%	000 - 255

7 Ch

MODE 7 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	WARM WHITE 0~100%	000 - 255
3	COLD WHITE 0~100%	000 - 255
4	STROBE No function Strobe Slow to Fast No function Random strobe Slow to Fast No function	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255
5	AUTO PROGRAMM NO Function Auto program 1 Auto program 2 Auto program 3 Auto program 4 Auto program 5	000 - 010 011 - 060 061 - 110 111 - 160 161 - 210 211 - 255
6	AUTO PROGRAMM SPEED Slow to Fast	000 - 255
7	DIMMER SPEED Preset from display menu Mode off Mode1 (fast speed) Mode2 (middle speed) Mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255