

DMX CONTROL

4 CHANNELS

| MODE 4 Ch | FUNCTION | DMX Value |
|--------------|------------------------|--------------|
| 1 | RED 0~100% | 000 - 255 |
| 2 | GREEN 0~100% | 000 - 255 |
| 3 | BLUE 0~100% | 000 - 255 |
| 4 | WHITE 0~100% | 000 - 255 |

6 CHANNELS

| MODE 6 Ch | FUNCTION | DMX Value |
|--------------|-----------------------------------------------------|------------------------|
| 1 | DIMMER 0~100% | 000 - 255 |
| 2 | RED 0~100% | 000 - 255 |
| 3 | GREEN 0~100% | 000 - 255 |
| 4 | BLUE 0~100% | 000 - 255 |
| 5 | WHITE 0~100% | 000 - 255 |
| 6 | STROBE No function Strobe Slow to Fast | 000 - 010 011 - 255 |

11 CHANNELS

| MODE 11 Ch | FUNCTION | DMX Value |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | DIMMER 0~100% | 000 - 255 |
| 2 | RED 0~100% | 000 - 255 |
| 3 | GREEN 0~100% | 000 - 255 |
| 4 | BLUE 0~100% | 000 - 255 |
| 5 | WHITE 0~100% | 000 - 255 |
| 6 | STROBE No function Strobe Slow to Fast | 000 - 010 011 - 255 |
| 7 | COLOR MACRO No Function R 100%, G 0~100%, B 0 % R 100%~0 %, G 100%, B 0 % R 0 %, G 100%, B 0~100% R 0 %, G 100~0 %, B 100% R 0~100%, G 0 %, B 100% R 100%, G 0 %, B 100~0 % R 100%, G 0~100%, B 0~100% R 100~0 %, G 100~0 %, B 100% R 100%, G 100%, B 100%, W 100% Color 1 Color 2 Color 3 Color 4 Color 5 Color 6 Color 7 Color 8 Color 9 Color 10 Color 11 | 000 - 010 011 - 030 031 - 050 051 - 070 071 - 090 091 - 110 111 - 130 131 - 150 151 - 170 171 - 200 201 - 205 206 - 210 211 - 215 216 - 220 221 - 225 226 - 230 231 - 235 236 - 240 241 - 245 246 - 250 251 - 255 |

11 CHANNELS

| MODE 11 Ch | FUNCTION | DMX Value |
|---------------|---------------------------------------|--------------|
| 8 | COLOR TEMPERATURE | |
| | NO Function | 000 - 005 |
| | RGB W 3000K | 006 - 039 |
| | RGB W 4000K | 040 - 069 |
| | RGB W 5000K | 070 - 099 |
| | RGB W 6000K | 100 - 129 |
| | RGB W 7000K | 130 - 159 |
| | RGB W 8000K | 160 - 189 |
| | RGB W 9000K | 190 - 219 |
| | RGB W 10000K | 220 - 250 |
| | NO Function | 251 - 255 |
| 9 | AUTO PROGRAMS | |
| | NO Function | 000 - 010 |
| | Auto Program 1 | 011 - 060 |
| | Auto Program 2 | 061 - 110 |
| | Auto Program 3 | 111 - 160 |
| | Auto Program 4 | 161 - 210 |
| | Auto Program 5 | 211 - 255 |
| 10 | AUTO SPEED | |
| | Auto speed slow to fast | 000 - 255 |
| 11 | DIMMER SPEED MODE | |
| | Preset dimmer speed from display menu | 000 - 051 |
| | Dimmer speed mode off | 052 - 101 |
| | Dimmer speed mode 1 (fast speed) | 102 - 152 |
| | Dimmer speed mode 2 (middle speed) | 153 - 203 |
| | Dimmer speed mode 3 (slow speed) | 204 - 255 |