

3.12 DMX CONTROL

1 CHANNEL

MODE 1 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255

2 CHANNELS

MODE 2 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	STROBE No function Strobe Slow to Fast	000 - 010 011 - 255

5 CHANNELS

MODE 5 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	STROBE No Function Slow to fast	000 - 010 011 - 255
3	AUTO PROGRAMS No Function Auto Program 1 Auto Program 2 Auto Program 3	000-010 011-090 091-170 171-255
4	AUTO SPEED Slow to fast	000 - 255
5	DIMMER SPEED Preset dimmer speed from display menu No Function Linear dimmer Nonlinear dimming curve1(fastest) Nonlinear dimming curve2 Nonlinear dimming curve1(slowest)	000-010 031-051 052-101 102-152 153-203 204-255