

## CANALI DMX

## 1 CANALE

| MODE<br>1 Ch | FUNCTION                | DMX<br>Value |
|--------------|-------------------------|--------------|
| 1            | <b>DIMMER</b><br>0~100% | 000 - 255    |

## 2 CANALI

| MODE<br>2 Ch | FUNCTION  | DMX<br>Value           |
|--------------|---|------------------------|
| 1            | <b>DIMMER</b><br>0~100%                             | 000 - 255              |
| 2            | <b>STROBE</b><br>No Function<br>Strobe slow to fast | 000 - 011<br>011 - 255 |

## 5 CANALI

| MODE<br>5 Ch | FUNCTION   | DMX<br>Value  |
|--------------|--|---|
| 1            | <b>DIMMER</b><br>0~100%  | 000 - 255   |
| 2            | <b>STROBE</b><br>No Function<br>Strobe slow to fast  | 000 - 011<br>011 - 255  |
| 3            | <b>AUTO PROGRAMS</b><br>No Function<br>Auto Program 1<br>Auto Program 2<br>Auto Program 3<br>Auto Program 0  | 000 - 010<br>011 - 070<br>071 - 130<br>131 - 190<br>191 - 255 |
| 4            | <b>AUTO SPEED</b><br>0~100%  | 000 - 255   |
| 5            | <b>DIMMER SPEED</b><br>Preset dimmer speed from display menu<br>Dimer speed mode off<br>Dimmer speed mode 1 (fast speed)<br>Dimmer speed mode 2 (middle speed)<br>Dimmer speed mode 3 (slow speed) | 000 - 051<br>052 - 101<br>102 - 152<br>153 - 203<br>204 - 255 |