

## CANALI DMX

### 3 CANALI

MODE 3 Ch	FUNCTION	DMX Value
1	<b>RED</b> 0~100%	000 - 255
2	<b>GREEN</b> 0~100%	000 - 255
3	<b>BLUE</b> 0~100%	000 - 255

### 5 CANALI

MODE 5 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255
2	<b>RED</b> 0~100%	000 - 255
3	<b>GREEN</b> 0~100%	000 - 255
4	<b>BLUE</b> 0~100%	000 - 255
5	<b>STROBE</b> No Function Strobe slow to fast	000 - 010 011 - 255

### 8 CANALI

MODE 8 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255
2	<b>RED</b> 0~100%	000 - 255
3	<b>GREEN</b> 0~100%	000 - 255
4	<b>BLUE</b> 0~100%	000 - 255
5	<b>STROBE/AUTO SPEED</b> No Function Strobe slow to fast	000 - 010 011 - 255
	<b>AUTO SPEED SLOW TO FAST</b> Speed slow to fast	000 - 255
6	<b>COLOR</b> No Function Color Macros	000 - 015 016 - 255
7	<b>AUTO MODE</b> RGB mode Pulse effect 0-100% Pulse effect 100%-0 Pulse effect 100%-0-100% Auto fade transition Auto snap transition (3 colors) Auto snap transition (7 colors)	000 - 010 011 - 050 051 - 090 091 - 130 131 - 170 171 - 210 211 - 255
8	<b>DIMMER SPEED MODE</b> Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode 1 (fast speed) Dimmer speed mode 2 (middle speed) Dimmer speed mode 3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255