

CANALI DMX

4 CANALI

MODE 4 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	WHITE 0~100%	000 - 255

6 CANALI

MODE 6 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	STROBE No Function Strobe slow to fast	000 - 010 011 - 255

10 CANALI

MODE 10 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255

MODE 10 Ch	FUNCTION	DMX Value
5	WHITE 0~100%	000 - 255
6	STROBE/AUTO SPEED No Function Strobe slow to fast	000 - 010 011 - 255
7	COLOR MACRO No Function R: 100% / G: 0-100% / B: 0% R: 100-0% / G: 100% / B: 0% R: 0% / G: 100% / B: 0-100% R: 0% / G: 100-0% / B: 100% R: 0-100% / G: 0% / B: 100% R: 100% / G: 0% / B: 100-0% R: 100% / G: 0-100% / B: 0-100% R: 100-0% / G: 100-0% / B: 100% R: 100% / G: 100% / B: 100% / W: 100% Color 1 Color 2 Color 3 Color 4 Color 5 Color 6 Color 7 Color 8 Color 9 Color 10 Color 11	000 - 010 011 - 030 031 - 050 051 - 070 071 - 090 091 - 110 111 - 130 131 - 150 151 - 170 171 - 200 201 - 205 206 - 210 211 - 215 216 - 220 221 - 225 226 - 230 231 - 235 236 - 240 241 - 245 246 - 250 251 - 255
8	AUTO PROGRAMS No Function Auto Program 1 Auto Program 2 Auto Program 3 Auto Program 4 Auto Program 5 Auto Program 6 Auto Program 7 Auto Program 8 Auto Program 9 Auto Program 10 Auto Program 11 Auto Program 12 Auto Program 13 Auto Program 14	000 - 010 011 - 027 028 - 044 045 - 061 062 - 078 079 - 095 096 - 112 113 - 129 130 - 146 147 - 163 164 - 180 181 - 197 198 - 214 215 - 231 232 - 255

MODE 10 Ch	FUNCTION	DMX Value
9	AUTO SPEED Speed slow to fast	000 - 255
10	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode 1 (fast speed) Dimmer speed mode 2 (middle speed) Dimmer speed mode 3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255

32 CANALI

MODE 32 Ch	FUNCTION	DMX Value
1	RED 1 0~100%	000 - 255
2	GREEN 1 0~100%	000 - 255
3	BLUE 1 0~100%	000 - 255
4	WHITE 1 0~100%	000 - 255
5	RED 2 0~100%	000 - 255
6	GREEN 2 0~100%	000 - 255
7	BLUE 2 0~100%	000 - 255
8	WHITE 2 0~100%	000 - 255
9	RED 3 0~100%	000 - 255
10	GREEN 3 0~100%	000 - 255
11	BLUE 3 0~100%	000 - 255
12	WHITE 3 0~100%	000 - 255
13	RED 4 0~100%	000 - 255

MODE 32 Ch	FUNCTION	DMX Value
14	GREEN 4 0~100%	000 - 255
15	BLUE 4 0~100%	000 - 255
16	WHITE 4 0~100%	000 - 255
17	RED 5 0~100%	000 - 255
18	GREEN 5 0~100%	000 - 255
19	BLUE 5 0~100%	000 - 255
20	WHITE 5 0~100%	000 - 255
21	RED 6 0~100%	000 - 255
22	GREEN 6 0~100%	000 - 255
23	BLUE 6 0~100%	000 - 255
24	WHITE 6 0~100%	000 - 255
25	RED 7 0~100%	000 - 255
26	GREEN 7 0~100%	000 - 255
27	BLUE 7 0~100%	000 - 255
28	WHITE 7 0~100%	000 - 255
29	RED 8 0~100%	000 - 255
30	GREEN 8 0~100%	000 - 255
31	BLUE 8 0~100%	000 - 255
32	WHITE 8 0~100%	000 - 255

37 CANALI

MODE 37 Ch	FUNCTION	DMX Value
1	RED 1 0~100%	000 - 255
2	GREEN 1 0~100%	000 - 255
3	BLUE 1 0~100%	000 - 255
4	WHITE 1 0~100%	000 - 255
5	RED 2 0~100%	000 - 255
6	GREEN 2 0~100%	000 - 255
7	BLUE 2 0~100%	000 - 255
8	WHITE 2 0~100%	000 - 255
9	RED 3 0~100%	000 - 255
10	GREEN 3 0~100%	000 - 255
11	BLUE 3 0~100%	000 - 255
12	WHITE 3 0~100%	000 - 255
13	RED 4 0~100%	000 - 255
14	GREEN 4 0~100%	000 - 255
15	BLUE 4 0~100%	000 - 255
16	WHITE 4 0~100%	000 - 255
17	RED 5 0~100%	000 - 255
18	GREEN 5 0~100%	000 - 255
19	BLUE 5 0~100%	000 - 255

MODE 37 Ch	FUNCTION	DMX Value
20	WHITE 5 0~100%	000 - 255
21	RED 6 0~100%	000 - 255
22	GREEN 6 0~100%	000 - 255
23	BLUE 6 0~100%	000 - 255
24	WHITE 6 0~100%	000 - 255
25	RED 7 0~100%	000 - 255
26	GREEN 7 0~100%	000 - 255
27	BLUE 7 0~100%	000 - 255
28	WHITE 7 0~100%	000 - 255
29	RED 8 0~100%	000 - 255
30	GREEN 8 0~100%	000 - 255
31	BLUE 8 0~100%	000 - 255
32	WHITE 8 0~100%	000 - 255
33	AUTO PROGRAMS No Function Auto Program 1 Auto Program 2 Auto Program 3 Auto Program 4 Auto Program 5 Auto Program 6 Auto Program 7 Auto Program 8 Auto Program 9 Auto Program 10 Auto Program 11	000 - 010 011 - 027 028 - 044 045 - 061 062 - 078 079 - 095 096 - 112 113 - 129 130 - 146 147 - 163 164 - 180 181 - 197

MODE 37 Ch	FUNCTION	DMX Value
33	Auto Program 12 Auto Program 13 Auto Program 14	198 - 214 215 - 231 232 - 255
34	AUTO SPEED Speed slow to fast	000 - 255
35	STROBE No Function Strobe slow to fast	000 - 010 011 - 255
36	DIMMER 0~100%	000 - 255
37	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode 1 (fast speed) Dimmer speed mode 2 (middle speed) Dimmer speed mode 3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255