

CANALI DMX

STANDARD 12 ch	EXTENDED 15 ch	FUNCTION	DMX Value
1	1	PAN	000 - 255
	2	PAN Fine	000 - 255
2	3	TILT	000 - 255
	4	TILT Fine	000 - 255
3	5	MOVEMENT SPEED Fastest to slowest	000 - 255
4	6	SHUTTER Shutter closed No function (shutter open) Strobe effect slow to fast No function (shutter open) Pulse-effect in sequences No function (shutter open) Random strobe effect slow to fast No function (shutter open)	000 - 010 011 - 030 031 - 085 086 - 105 106 - 160 161 - 180 181 - 235 236 - 255
5	7	DIMMER Dimmer (close to open)	000 - 255
6	8	COLOR WHEEL Selection Open Open+DARK RED DARK RED DARK RED + DARK BLUE DARK BLUE DARK BLUE + YELLOW YELLOW YELLOW + GREEN GREEN GREEN + LIGHT ORANGE LIGHT ORANGE LIGHT ORANGE + MAGENTA MAGENTA MAGENTA + CTO CTO CTO+UV UV UV+Open Forward Spin Stop to fast Reverse Spin Fast to Stop Continuous Positioning from OPEN to OPEN	000 - 003 004 - 007 008 - 010 011 - 014 015 - 017 018 - 021 022 - 024 025 - 028 029 - 031 032 - 035 036 - 038 039 - 042 043 - 045 046 - 049 050 - 052 053 - 056 057 - 059 060 - 063 064 - 095 096 - 127 128 - 255

STANDARD 12 ch	EXTENDED 15 ch	FUNCTION	DMX Value
7	9	GOB01 Selection Open Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 7 Shake Gobo 1 (shake from slow to fast) Gobo 2 (shake from slow to fast) Gobo 3 (shake from slow to fast) Gobo 4 (shake from slow to fast) Gobo 5 (shake from slow to fast) Gobo 6 (shake from slow to fast) Gobo 7 (shake from slow to fast) Forward Spin Stop to fast Reverse Spin Fast to stop	000 - 005 006 - 010 011 - 015 016 - 020 021 - 025 026 - 030 031 - 035 036 - 040 041 - 055 056 - 070 071 - 085 086 - 100 101 - 115 116 - 130 131 - 145 146 - 200 201 - 255
8	10	GOB01 ROTATION Indexing Gobo 1 (index rotation from 0° to 360°) Forward Spin Stop to fast Stop Reverse Spin Fast to stop	000 - 191 192 - 221 222 - 225 226 - 255
9	11	FIXED GOBOS Selection Open Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 7 Gobo 8	000 - 005 006 - 009 010 - 013 014 - 017 018 - 021 022 - 025 026 - 029 030 - 033 034 - 037

STANDARD 12 ch	EXTENDED 15 ch	FUNCTION	DMX Value
9	11	Shake Gobo 1 (shake from slow to fast) Gobo 2 (shake from slow to fast) Gobo 3 (shake from slow to fast) Gobo 4 (shake from slow to fast) Gobo 5 (shake from slow to fast) Gobo 6 (shake from slow to fast) Gobo 7 (shake from slow to fast) Gobo 8 (shake from slow to fast) Forward Spin Slow to fast Reverse Spin Fast to slow	038 - 051 052 - 065 066 - 079 080 - 093 094 - 107 108 - 121 122 - 135 136 - 149 150 - 202 203 - 255
10	12	PRISM Open Indexing Positioning from 0° to 360° Forward Spin Slow to fast Reverse Spin Fast to Slow	000 - 005 006 - 191 192 - 223 224 - 255
11	13	FOCUS	000 - 255
	14	FOCUS Fine	000 - 255
12	15	CONTROL No function Enable blackout while Pan/Tilt move (Hold 3 Second) Disable blackout while Pan/Tilt move (Hold 3 Second) Enable blackout while color change (Hold 3 Second) Disable blackout while color change (Hold 3 Second) Enable blackout while gobo change (Hold 3 Second) Disable blackout while gobo change (Hold 3 Second) Pan Reset (Hold 3 Second) Tilt Reset (Hold 3 Second) Color Reset (Hold 3 Second) Gobo1 Reset (Hold 3 Second) Gobo2 Reset (Hold 3 Second) Prism Reset (Hold 3 Second) Focus Reset(Hold 3 Second) No function Reset all (Hold 3 Second) No function	000 - 039 040 - 049 050 - 059 060 - 069 070 - 079 080 - 089 090 - 099 100 - 109 110 - 119 120 - 129 130 - 139 140 - 149 150 - 159 160 - 169 170 - 199 200 - 209 210- 255