

## CANALI DMX

BAS-8 8ch	BAS-16 10ch	FUNCTION	DMX Value
1	1	<b>PAN</b> Pan Coarse	000 - 255
	2	<b>PAN FINE</b> Pan Fine	000 - 255
2	3	<b>TILT</b> Tilt Coarse	000 - 255
	4	<b>TILT FINE</b> Tilt Fine	000 - 255
3	5	<b>MOVEMENT SPEED</b> Fastest to slowest	000 - 255
4	6	<b>SHUTTER</b> Shutter closed No function (shutter open) Strobe effect slow to fast No function (shutter open) Pulse-effect in sequences No function (shutter open) Random strobe effect slow to fast No function (shutter open)	000 - 010 011 - 030 031 - 085 086 - 105 106 - 160 161 - 180 181 - 235 236 - 255
5	7	<b>DIMMER</b> Dimmer (close to open)	000 - 255
6	8	<b>COLOR Indexed</b> Open Open+DARK RED DARK RED DARK RED + DARK BLUE DARK BLUE DARK BLUE + YELLOW YELLOW YELLOW + GREEN GREEN GREEN + LIGHT ORANGE LIGHT ORANGE LIGHT ORANGE + MAGENTA MAGENTA MAGENTA + C.T.B C.T.B C.T.B + C.T.O. C.T.O. C.T.O. + UV FILTER UV FILTER UV FILTER + Open	000 - 006 007 - 012 013 - 019 020 - 025 026 - 031 032 - 038 039 - 044 045 - 050 051 - 057 058 - 063 064 - 069 070 - 076 077 - 082 083 - 088 089 - 095 096 - 101 102 - 107 108 - 114 115 - 120 121 - 127

BAS-8	BAS-16	FUNCTION	DMX Value
8ch	10ch		
6	8	<b>Forward Spin</b>	
		Stop to fast	128 - 189
		<b>Stop roation</b>	
		Stop	190 - 193
		<b>Reverse Spin</b>	
		Fast to Stop	194 - 255
7	9	<b>GOBO</b>	
		<b>Index</b>	
		Open	000 - 006
		Gobo 1	007 - 012
		Gobo 2	013 - 018
		Gobo 3	019 - 025
		Gobo 4	026 - 031
		Gobo 5	032 - 037
		Gobo 6	038 - 044
		Gobo 7	045 - 050
		Gobo 8	051 - 056
		Gobo 9	057 - 063
		Gobo Shake 1 (slow to fast)	064 - 071
		Gobo Shake 2 (slow to fast)	072 - 078
		Gobo Shake 3 (slow to fast)	079 - 085
		Gobo Shake 4 (slow to fast)	086 - 092
		Gobo Shake 5 (slow to fast)	093 - 099
		Gobo Shake 6 (slow to fast)	100 - 106
		Gobo Shake 7 (slow to fast)	107 - 113
		Gobo Shake 8 (slow to fast)	114 - 120
		Gobo Shake 9 (slow to fast)	121 - 127
		<b>Forward Spin</b>	
		Slow to fast	128 - 191
		<b>Reverse Spin</b>	
		Fast to Slow	192 - 255
8	10	<b>CONTROL</b>	
		No function	000 - 039
		Enable blackout while Pan/Tilt move (Hold 3 Second)	040 - 049
		Disable blackout while Pan/Tilt move (Hold 3 Second)	050 - 059
		Enable blackout while color change (Hold 3 Second)	060 - 069
		Disable blackout while color change (Hold 3 Second)	070 - 079
		Enable blackout while gobo change (Hold 3 Second)	080 - 089
		Disable blackout while gobo change (Hold 3 Second)	090 - 099
		Pan Reset (Hold 3 Second)	100 - 109
		Tilt Reset (Hold 3 Second)	110 - 119
		Color Reset (Hold 3 Second)	120 - 129
		Gobo Reset (Hold 3 Second)	130 - 139
		No function	140 - 199
		Reset all (Hold 3 Second)	200 - 209
		No function	210 - 255