

CANALI DMX

BAS-8	BAS-16	FUNCTION	DMX Value
8 ch	10 ch		
1	1	PAN Pan Coarse	000 - 255
	2	PAN FINE Pan Fine	000 - 255
2	3	TILT Tilt Coarse	000 - 255
	4	TILT FINE Til Fine	000 - 255
3	5	MOVEMENT SPEED Fastest to slowest	000 - 255
4	6	SHUTTER Shutter closed No function (shutter open) Strobe effect slow to fast No function (shutter open) Pulse-effect in sequences No function (shutter open) Random strobe effect slow to fast No function (shutter open)	000 - 010 011 - 030 031 - 085 086 - 105 106 - 160 161 - 180 181 - 235 236 - 255
5	7	DIMMER Dimmer (close to open)	000 - 255
6	8	COLOR Indexed Open Open+DARK RED DARK RED DARK RED + DARK BLUE DARK BLUE DARK BLUE + YELLOW YELLOW YELLOW + GREEN GREEN GREEN + LIGHT ORANGE LIGHT ORANGE LIGHT ORANGE + MAGENTA MAGENTA MAGENTA + CYAN CYAN CYAN + C.T.O. C.T.O. C.T.O. + JADE JADE JADE + C.T.B	000 - 004 005 - 008 009 - 012 013 - 016 017 - 021 022 - 025 026 - 029 030 - 033 034 - 038 039 - 042 043 - 046 047 - 050 051 - 055 056 - 059 060 - 063 064 - 067 068 - 071 072 - 076 077 - 080 081 - 084

BAS-8	BAS-16	FUNCTION	DMX Value
8 ch	10 ch		
6	8	C.T.B	085 - 088
		C.T.B + PINK	089 - 093
		PINK	094 - 097
		PINK + LIGHT GREEN	098 - 101
		LIGHT GREEN	102 - 105
		LIGHT GREEN + DARK ORANGE	106 - 110
		DARK ORANGE	111 - 114
		DARK ORANGE + UV FILTER	115 - 118
		UV FILTER	119 - 122
		UV FILTER + Open	123 - 127
		Forward Spin	
		Stop to fast	128 - 189
		Stop roation	
		Stop	190 - 193
		Reverse Spin	
		Fast to Stop	194 - 255
7	9	PRISM ROT	
		Open	000 - 005
		Indexing	
		Insertion and positioning from 0-360 degrees	006 - 191
		Forward Spin	
8	10	Stop to fastest	192 - 223
		Reverse Spin	
		fastest to stop	224 - 255
		CONTROL	
		No function	000 - 039
		Enable blackout while Pan/Tilt move (Hold 3 Second)	040 - 049
		Disable blackout while Pan/Tilt move (Hold 3 Second)	050 - 059
		Enable blackout while color change (Hold 3 Second)	060 - 069
		Disable blackout while color change (Hold 3 Second)	070 - 079
		Pan Reset (Hold 3 Second)	080 - 089
		Tilt Reset (Hold 3 Second)	090 - 099
		Color Reset (Hold 3 Second)	100 - 109
		Prism Reset (Hold 3 Second)	110 - 119
		No function	120 - 199
		Reset all (Hold 3 Second)	200 - 209
		No function	210 - 255