

CANALI DMX

4 CANALI

MODE 4 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	WHITE 0~100%	000 - 255

MODE 8 Ch	FUNCTION	DMX Value
5	RED 2 0~100%	000 - 255
6	GREEN 2 0~100%	000 - 255
7	BLUE 2 0~100%	000 - 255
8	WHITE 2 0~100%	000 - 255

6 CANALI

MODE 6 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	STROBE No Function Strobe slow to fast	000 - 010 011 - 255

14 CANALI

MODE 14 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 1 0~100%	000 - 255
3	GREEN 1 0~100%	000 - 255
4	BLUE 1 0~100%	000 - 255
5	WHITE 1 0~100%	000 - 255
6	RED 2 0~100%	000 - 255
7	GREEN 2 0~100%	000 - 255
8	BLUE 2 0~100%	000 - 255
9	WHITE 2 0~100%	000 - 255
10	STROBE No Function Strobe slow to fast	000 - 010 011 - 255
11	COLOR MACRO + COLOR TEMPERATURE No Function R: 100% / G: 0-100% / B: 0% R: 100-0% / G: 100% / B: 0% R: 0% / G: 100% / B: 0-100%	000 - 010 011 - 030 031 - 050 051 - 070

8 CANALI

MODE 8 Ch	FUNCTION	DMX Value
1	RED 1 0~100%	000 - 255
2	GREEN 1 0~100%	000 - 255
3	BLUE 1 0~100%	000 - 255
4	WHITE 1 0~100%	000 - 255

MODE 14 Ch	FUNCTION	DMX Value
11	R: 0% / G: 100-0% / B: 100%	071 - 090
	R: 0-100% / G: 0% / B: 100%	091 - 110
	R: 100% / G: 0% / B: 100-0%	111 - 130
	R: 100% / G: 0-100% / B: 0-100%	131 - 150
	R: 100-0% / G: 100-0% / B: 100%	151 - 170
	R: 100% / G: 100% / B: 100% / W: 100%	171 - 200
	Color temperature 1	201 - 205
	Color temperature 2	206 - 210
	Color temperature 3	211 - 215
	Color temperature 4	216 - 220
	Color temperature 5	221 - 225
	Color temperature 6	226 - 230
	Color temperature 7	231 - 235
	Color temperature 8	236 - 240
	Color temperature 9	241 - 245
	Color temperature 10	246 - 250
	Color temperature 11	251 - 255
12	AUTO PROGRAMS	
	No Function	000 - 010
	Auto Program 1	011 - 025
	Auto Program 2	026 - 050
	Auto Program 3	051 - 075
	Auto Program 4	076 - 100
	Auto Program 5	101 - 125
	Auto Program 6	126 - 150
	Auto Program 7	151 - 175
	Auto Program 8	176 - 200
	Auto Program 9	201 - 240
	Sound Show	241 - 255
13	AUTO SPEED	
	Speed slow to fast	000 - 255
	SOUND SENSITIVITY	
	Sound sensitivity OFF	000 - 010
	Control the sound sensitivity	011 - 255
14	DIM MODE	
	Preset dimmer speed from display menu	000 - 051
	Dimmer speed mode off	052 - 101
	Dimmer speed mode1 (fast speed)	102 - 152
	Dimmer speed mode2 (middle speed)	153 - 203
	Dimmer speed mode3 (slow speed)	204 - 255