

## CANALI DMX

## 7 CANALI

MODE 7 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255
2	<b>WHITE 1</b> 0~100%	000 - 255
3	<b>WHITE 2</b> 0~100%	000 - 255
4	<b>STROBE</b> No Function Strobe slow to fast	000 - 010 011 - 255
5	<b>AUTO PROGRAMS</b> No Function Auto Program 1 Auto Program 2 Auto Program 3 Auto Program 4 Auto Program 5 Auto Program 6	000 - 010 011 - 040 041 - 080 081 - 120 121 - 170 171 - 220 221 - 255
6	<b>AUTO SPEED</b> 0~100%	000 - 255
7	<b>DIMMER SPEED</b> Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode 1 (fast speed) Dimmer speed mode 2 (middle speed) Dimmer speed mode 3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255

## 2 CANALI

MODE 2 Ch	FUNCTION	DMX Value
1	<b>WHITE 1</b> 0~100%	000 - 255
2	<b>WHITE 2</b> 0~100%	000 - 255

## 1 CANALE

MODE 1 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255

## 4 CANALI

MODE 4 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255
2	<b>WHITE 1</b> 0~100%	000 - 255
3	<b>WHITE 2</b> 0~100%	000 - 255
4	<b>STROBE</b> No Function Strobe slow to fast	000 - 010 011 - 255