

## DMX CHARTS

## 5 CHANNELS

MODE 5 Ch	FUNCTION	DMX Value
1	<b>RED</b> 0~100%	000 - 255
2	<b>GREEN</b> 0~100%	000 - 255
3	<b>BLUE</b> 0~100%	000 - 255
4	<b>WHITE</b> 0~100%	000 - 255
5	<b>Dimmer Speed Mode</b> Preset dimmer speed from display menù Dimmer speed mode off Dimmer speed mode1 (1s) Dimmer speed mode2 (2s) Dimmer speed mode3 (3s) Dimmer speed mode4 (5s) Dimmer speed mode5 (10s) Dimmer speed mode6 (20s)	000 - 010 011 - 045 046 - 080 081 - 115 116 - 150 151 - 185 186 - 220 221 - 255

## 7 CHANNELS

MODE 7 Ch	FUNCTION	DMX Value
1	<b>RED</b> 0~100%	000 - 255
2	<b>GREEN</b> 0~100%	000 - 255
3	<b>BLUE</b> 0~100%	000 - 255
4	<b>WHITE</b> 0~100%	000 - 255
5	<b>Dimmer</b> 0~100%	000 - 255
6	<b>Strobe</b> No Function Strobe slow to fast	000 - 010 011 - 255
7	<b>Dimmer Speed Mode</b> Preset dimmer speed from display menù Dimmer speed mode off Dimmer speed mode1 (1s)	000 - 010 011 - 045 046 - 080

## 7 CHANNELS

MODE 7 Ch	FUNCTION	DMX Value
7	Dimmer speed mode2 (2s) Dimmer speed mode3 (3s) Dimmer speed mode4 (5s) Dimmer speed mode5 (10s) Dimmer speed mode6 (20s)	081 - 115 116 - 150 151 - 185 186 - 220 221 - 255

## 8 CHANNELS

MODE 8 Ch	FUNCTION	DMX Value
1	<b>RED</b> 0~100%	000 - 255
2	<b>GREEN</b> 0~100%	000 - 255
3	<b>BLUE</b> 0~100%	000 - 255
4	<b>WHITE</b> 0~100%	000 - 255
5	<b>Dimmer</b> 0~100%	000 - 255
6	<b>Dimmer Fine</b> 0~100%	000 - 255
7	<b>Strobe</b> No Function Strobe slow to fast	000 - 010 011 - 255
8	<b>Dimmer Speed Mode</b> Preset dimmer speed from display menù Dimmer speed mode off Dimmer speed mode1 (1s) Dimmer speed mode2 (2s) Dimmer speed mode3 (3s) Dimmer speed mode4 (5s) Dimmer speed mode5 (10s) Dimmer speed mode6 (20s)	000 - 010 011 - 045 046 - 080 081 - 115 116 - 150 151 - 185 186 - 220 221 - 255

## 9 CHANNELS

MODE 9 Ch	FUNCTION	DMX Value
1	<b>RED</b> 0~100%	000 - 255
2	<b>GREEN</b> 0~100%	000 - 255
3	<b>BLUE</b> 0~100%	000 - 255
4	<b>WHITE</b> 0~100%	000 - 255
5	<b>Strobe</b> No Function Strobe slow to fast	000 - 010 011 - 255
6	<b>RGB/Auto Program</b> No Function Auto program 1 Auto program 2 Auto program 3 Auto program 4 Auto program 5 Auto program 6 Auto program 7 Auto program 8 Auto program 9 Auto program 10 Auto program 11 Auto program 12 Auto program 13	000 - 010 011 - 030 031 - 050 051 - 070 071 - 090 091 - 110 111 - 130 131 - 150 151 - 170 171 - 190 191 - 210 211 - 230 231 - 250 251 - 255
7	<b>Auto speed</b> Auto speed slow to fast	000 - 255
8	<b>Dimmer</b> 0~100%	000 - 255
9	<b>Dimmer Speed Mode</b> Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (1s) Dimmer speed mode2 (2s) Dimmer speed mode3 (3s) Dimmer speed mode4 (5s) Dimmer speed mode5 (10s) Dimmer speed mode6 (20s)	000 - 010 011 - 045 046 - 080 081 - 115 116 - 150 151 - 185 186 - 220 221 - 255

## 49 CHANNELS

MODE 49 Ch	FUNCTION	DMX Value
1	<b>RED 1</b> 0~100%	000 - 255
2	<b>GREEN 1</b> 0~100%	000 - 255
3	<b>BLUE 1</b> 0~100%	000 - 255
4	<b>WHITE 1</b> 0~100%	000 - 255
5	<b>RED 2</b> 0~100%	000 - 255
6	<b>GREEN 2</b> 0~100%	000 - 255
7	<b>BLUE 2</b> 0~100%	000 - 255
8	<b>WHITE 2</b> 0~100%	000 - 255
....	.....	.....
41	<b>RED 11</b> 0~100%	000 - 255
42	<b>GREEN 11</b> 0~100%	000 - 255
43	<b>BLUE 11</b> 0~100%	000 - 255
44	<b>WHITE 11</b> 0~100%	000 - 255
45	<b>RED 12</b> 0~100%	000 - 255
46	<b>GREEN 12</b> 0~100%	000 - 255
47	<b>BLUE 12</b> 0~100%	000 - 255
48	<b>WHITE 12</b> 0~100%	000 - 255
49	<b>Dimmer Speed Mode</b> Preset dimmer speed from display menu Dimmer speed mode off49 Dimmer speed mode1 (1S) Dimmer speed mode2 (2S) Dimmer speed mode3 (3S) Dimmer speed mode4 (5S) Dimmer speed mode5 (10S) Dimmer speed mode6 (20S)	000 - 010 011 - 045 046 - 080 081 - 115 116 - 150 151 - 185 186 - 220 221 - 255

## 51 CHANNELS

MODE	FUNCTION	DMX Value
51 Ch		
1	<b>RED 1</b> 0~100%	000 - 255
2	<b>GREEN 1</b> 0~100%	000 - 255
3	<b>BLUE 1</b> 0~100%	000 - 255
4	<b>WHITE 1</b> 0~100%	000 - 255
5	<b>RED 2</b> 0~100%	000 - 255
6	<b>GREEN 2</b> 0~100%	000 - 255
7	<b>BLUE 2</b> 0~100%	000 - 255
8	<b>WHITE 2</b> 0~100%	000 - 255
....	.....	.....
41	<b>RED 11</b> 0~100%	000 - 255
42	<b>GREEN 11</b> 0~100%	000 - 255
43	<b>BLUE 11</b> 0~100%	000 - 255
44	<b>WHITE 11</b> 0~100%	000 - 255
45	<b>RED 12</b> 0~100%	000 - 255
46	<b>GREEN 12</b> 0~100%	000 - 255
47	<b>BLUE 12</b> 0~100%	000 - 255
48	<b>WHITE 12</b> 0~100%	000 - 255
49	<b>Dimmer</b> 0~100%	000 - 255
50	<b>Strobe</b> No Function Strobe slow to fast	000 - 010 011 - 255

## 51 CHANNELS

MODE	FUNCTION	DMX Value
51 Ch		
51	<b>Dimmer Speed Mode</b>	
	Preset dimmer speed from display menu	000 - 010
	Dimmer speed mode off49	011 - 045
	Dimmer speed mode1 (1S)	046 - 080
	Dimmer speed mode2 (2S)	081 - 115
	Dimmer speed mode3 (3S)	116 - 150
	Dimmer speed mode4 (5S)	151 - 185
	Dimmer speed mode5 (10S)	186 - 220
	Dimmer speed mode6 (20S)	221 - 255