

CANALI DMX

4 CANALI

MODE 4 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	WHITE 0~100%	000 - 255

7 CANALI

MODE 7 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	WHITE 0~100%	000 - 015 016 - 255
5	DIMMER 0~100%	000 - 255
6	STROBE No Function Strobe slow to fast	000 - 015 016 - 255
7	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255

9 CANALI

MODE 9 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	WHITE 0~100%	000 - 255
5	COLOR MACROS No Function Color Macro	000 - 015 016 - 255
6	RGB/AUTO SPEED Speed slow to fast	000 - 255
	STROBE No Function Strobe slow to fast	000 - 015 016 - 255
	SOUND SENSITIVITY Sound sensitivity OFF Control the sound sensitivity	000 - 010 011 - 255
7	RGB/AUTO PROGRAM No Function Pulse effect 0%-100% Pulse effect 100%-0% Pulse effect 100%-0%-100% Auto program 1 Auto program 2 Auto program 3 Auto program 4 Auto program 5 Auto program 6 Auto program 7 Auto program 8 Auto program 9 Auto program 10 Auto program 11 Auto program 12 Auto program 13 Auto program 14 Sound program	000 - 031 032 - 063 064 - 095 096 - 114 115 - 122 123 - 130 131 - 138 139 - 146 147 - 154 155 - 162 163 - 170 171 - 178 179 - 186 187 - 194 195 - 202 203 - 210 211 - 218 219 - 226 227 - 255

LUMIPIX 12UQPRO

17 CANALI

MODE 9 Ch	FUNCTION	DMX Value
8	DIMMER 0~100%	000 - 255
9	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255

12 CANALI

MODE 12 Ch	FUNCTION	DMX Value
1	RED 1 0~100%	000 - 255
2	GREEN 1 0~100%	000 - 255
3	BLUE 1 0~100%	000 - 255
4	WHITE 1 0~100%	000 - 255
5	RED 2 0~100%	000 - 255
6	GREEN 2 0~100%	000 - 255
7	BLUE 2 0~100%	000 - 255
8	WHITE 2 0~100%	000 - 255
9	RED 3 0~100%	000 - 255
10	GREEN 3 0~100%	000 - 255
11	BLUE 3 0~100%	000 - 255
12	WHITE 3 0~100%	000 - 255

MODE 17 Ch	FUNCTION	DMX Value
1	RED 1 0~100%	000 - 255
2	GREEN 1 0~100%	000 - 255
3	BLUE 1 0~100%	000 - 255
4	WHITE 1 0~100%	000 - 255
5	RED 2 0~100%	000 - 255
6	GREEN 2 0~100%	000 - 255
7	BLUE 2 0~100%	000 - 255
8	WHITE 2 0~100%	000 - 255
9	RED 3 0~100%	000 - 255
10	GREEN 3 0~100%	000 - 255
11	BLUE 3 0~100%	000 - 255
12	WHITE 3 0~100%	000 - 255
13	COLOR MACROS No Function Color Macro	000 - 015 016 - 255
14	RGB/AUTO SPEED Speed slow to fast	000 - 255
	STROBE No Function Strobe slow to fast	000 - 015 016 - 255
	SOUND SENSITIVITY Sound sensitivity OFF Control the sound sensitivity	000 - 010 011 - 255

17 CANALI

MODE 17 Ch	FUNCTION	DMX Value
15	RGB/AUTO PROGRAM	
	No Function	000 - 031
	Pulse effect 0%-100%	032 - 063
	Pulse effect 100%-0%	064 - 095
	Pulse effect 100%-0%-100%	096 - 114
	Auto program 1	115 - 122
	Auto program 2	123 - 130
	Auto program 3	131 - 138
	Auto program 4	139 - 146
	Auto program 5	147 - 154
	Auto program 6	155 - 162
	Auto program 7	163 - 170
	Auto program 8	171 - 178
	Auto program 9	179 - 186
	Auto program 10	187 - 194
	Auto program 11	195 - 202
	Auto program 12	203 - 210
	Auto program 13	211 - 218
	Auto program 14	219 - 226
	Sound program	227 - 255
16	DIMMER 0~100%	000 - 255
17	DIMMER SPEED MODE	
	Preset dimmer speed from display menu	000 - 051
	Dimmer speed mode off	052 - 101
	Dimmer speed mode1 (fast speed)	102 - 152
	Dimmer speed mode2 (middle speed)	153 - 203
	Dimmer speed mode3 (slow speed)	204 - 255