





DMX CONTROL

AIR5FAN				
WASH	FX	PIX-FX	AIR5FAN FUNCTION	DMX Value
17CH	27CH	43CH		
1	1	1	PAN Pan coarse	000 - 255
2	2	2	PAN FINE Pan fine	000 - 255
3	3	3	TILT Tilt coarse	000 - 255
4	4	4	TILT FINE Tilt fine	000 - 255
5	5	5	MOVMENT SPEED Fastest to slowest Movement with Blackout	000 - 250 251 - 255
6	6	6	PAN CONTINUOUS No function Forwards Pan rotation from fast to slow No rotation Backwards Pan rotation from slow to fast	000 - 003 004 - 127 128 - 131 132 - 255
7	7	7	TILT CONTINUOUS No function Forwards Pan rotation from fast to slow No rotation Backwards Pan rotation from slow to fast	000 - 003 004 - 127 128 - 131 132 - 255
8	8	8	SHUTTER Shutter closed Strobe effect slow to fast No function (shutter open) Pulse-effect in sequences Random strobe effect (pixels) Random strobe effect (fixture) No function (shutter open)	000 - 010 011 - 082 083 - 093 094 - 163 164 - 174 175 - 244 245 - 255
9	9	9	DIMMER Dimmer 0% ~ 100%	000 - 255
	10	10	DIMMER FADE 0% to 100%	000 - 255
10	11	11	VIRTUAL COLOR FUNCTION Normal Function White presets Forward Spin Reverse Spin Continuous TBD	000 - 015 016 - 031 032 - 047 048 - 063 064 - 079 080 - 255
11	12	12	VIRTUAL COLOR 1 White Presets White 2000K ~ 2700K White 2700K ~ 3200K White 3200K ~ 4200K White 4200K ~ 5600K White 5600K ~ 8000K White 8000K ~ 10000K Forward Spin Rainbow Effect (Slow to Fast) Reverse Spin Rainbow Effect (Slow to Fast)	000 - 055 056 - 095 096 - 135 136 - 175 176 - 215 216 - 255 000 - 255 000 - 255

WASH	FX	PIX-FX	AIR5FAN FUNCTION	DMX Value
17CH	27CH	43CH		
11	12	12	Continuous & Color Bounce Black Red Green Blue White Pastel Red Pastel Green Pastel Blue Cyan Magenta Yellow Light Yellow Light Blue Light Magenta Full White Full White ~ White 3200K White 3200K ~ White 4200K White 4200K ~ White 5600K	000 - 000 001 - 013 014 - 027 028 - 041 042 - 055 056 - 069 070 - 083 084 - 097 098 - 111 112 - 125 126 - 139 140 - 153 154 - 167 168 - 181 182 - 195 196 - 225 226 - 235 236 - 255
12	13		RED 0~100% 	000 - 255
13	14		GREEN 0~100% 	000 - 255
14	15		BLUE 0~100% 	000 - 255
15	16		WHITE 0~100% 	000 - 255
16	17	13	ZOOM Big to Small	000 - 255
	18	14	PATTERN On Pattern Pattern control Pattern Effect 1~22 Random Pattern Effect 1~22	000 - 015 016 - 031 032 - 229 230 - 255
	19	15	PATTERN SPEED Pattern control Picture Effect 1-250 Pattern Effect Static indexing Forward Slow to fastest Stop Reverse Slow to fastest	003 - 252 000 - 037 038 - 144 145 - 148 149 - 255
	20	16	Dimmer Transition Dimmer 0% ~ 100%	000 - 255
	21	17	FOREGROUND NO Function Foreground color (same as CONTINUOUS PRESETS)	000 - 015 016 - 255
	22	18	FOREGROUND DIMMER Dimmer 0% ~ 100%	000 - 255

AIR5FAN

WASH	FX	PIX-FX	AIR5FAN FUNCTION	DMX Value
17CH	27CH	43CH		
	23	19	FOREGROUND Shutter Shutter closed Strobe effect slow to fast No function (shutter open) Random strobe effect slow to fast No function (shutter open)	000 - 010 011 - 163 164 - 174 175 - 244 245 - 255
	24	20	BACKGROUND No Function Background color (same as CONTINUOUS PRESETS)	000 - 015 016 - 255
	25	21	BACKGROUND DIMMER Dimmer 0% ~ 100%	000 - 255
	26	22	BACKGROUND Shutter Shutter closed Strobe effect slow to fast No function (shutter open) Random strobe effect slow to fast No function (shutter open)	000 - 010 011 - 163 164 - 174 175 - 244 245 - 255
17	27	23	CONTROL Normal Reset All Pan&Tilt Reset TBD Other Reset Display Off Display On TBD TBD Hibernation TBD	000 - 007 008 - 015 016 - 023 024 - 047 048 - 055 056 - 063 064 - 071 072 - 079 080 - 087 088 - 095 096 - 255
		24	RED 1 0~100%	000 - 255
		25	GREEN 1 0~100%	000 - 255
		26	BLUE 1 0~100%	000 - 255
		27	WHITE 1 0~100%	000 - 255
		
		40	RED 5 0~100%	000 - 255
		41	GREEN 5 0~100%	000 - 255
		42	BLUE 5 0~100%	000 - 255
		43	WHITE 5 0~100%	000 - 255