

## DMX CONTROL

## 1 Ch

MODE 1 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255

## 2 Ch

MODE 2 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255
2	<b>STROBE</b> No function (shutter open) Strobe effect slow to fast No function (shutter open) Random strobe effect slow to fast No function (shutter open)	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255

## 5 Ch

MODE 5 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255
2	<b>STROBE</b> No function (shutter open) Strobe effect slow to fast No function (shutter open) Random strobe effect slow to fast No function (shutter open)	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255
3	<b>AUTO PROGRAMM</b> NO Function Auto program 1 Auto program 2 Auto program 3 Auto program 4	000 - 010 011 - 070 071 - 130 131 - 190 191 - 255
4	<b>AUTO PROGRAMM SPEED</b> Slow to Fast	000 - 255
5	<b>DIMMER SPEED</b> Preset from display menu Mode off Mode1 (fast speed) Mode2 (middle speed) Mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255