

DMX CONTROL

MODE 4 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	WHITE 0~100%	000 - 255

MODE 6 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	STROBE No function Strobe Slow to Fast	000 - 010 011 - 255

MODE 10 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255

MODE 10 Ch	FUNCTION	DMX Value
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	STROBE No function Strobe Slow to Fast	000 - 010 011 - 255
7	COLOR MACRO No function R 100%, G 0~100%, B 0% R 100%~0, G 100%, B 0% R 0%, G 100%, B 0~100% R 0%, G 100%~0, B 100% R 0~100%, G 0%~0, B 100% R 100%, G 0%, B 100%~0% R 100%, G 0~100%, B 0~100% R 100%~0, G 100%~0, B 100% R 100%, G 100%, B 100%, W 100% White Presets 1 White Presets 2 White Presets 3 White Presets 4 White Presets 5 White Presets 6 White Presets 7 White Presets 8 White Presets 9 White Presets 10 White Presets 11	000 - 010 011 - 030 031 - 050 051 - 070 071 - 090 091 - 110 111 - 130 131 - 150 151 - 170 171 - 200 201 - 205 206 - 210 211 - 215 216 - 220 221 - 225 226 - 230 231 - 235 236 - 240 241 - 245 246 - 250 251 - 255
8	AUTO PROGRAMS No function Auto Program 1 Auto Program 2 Auto Program 3 Auto Program 4 Auto Program 5	000 - 051 052 - 101 102 - 152 153 - 203 204 - 254 255
9	AUTO SPEED Auto Speed slow to Fast	000 - 255
10	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255