

DMX CHARTS

Channel	1 CH	2 CH	5 CH
1	DIMMER	DIMMER	DIMMER
2		STROBE	STROBE
3			AUTO PROGRAMS
4			AUTO SPEED
5			DIMMER SPEED

1 CH	2 CH	5 CH	Function	DMX Value	Default
1	1	1	DIMMER 0~100%	000 ÷ 255	000
	2	2	STROBE No function Strobe from slow to fast	000 ÷ 011 011 ÷ 255	255
		3	AUTO PROGRAMS Auto Program 1 Auto Program 2 Auto Program 3 Auto Program 4	000 ÷ 010 011 ÷ 070 071 ÷ 130 131 ÷ 190 191 ÷ 255	000
		4	AUTO SPEED 0~100%	000 ÷ 255	000
		5	DIMMER SPEED Present dimmer speed from display menu Dimmer speed mode off Dimmer speed mode 1 (fast speed) Dimmer speed mode 2 (middle speed) Dimmer speed mode 3 (slow speed)	000 ÷ 051 052 ÷ 101 102 ÷ 152 153 ÷ 203 204 ÷ 255	255