

## DMX CONTROL

### 5 CANALI

MODE 5 Ch	FUNCTION	DMX Value
1	<b>RED</b> 0~100%	000 - 255
2	<b>GREEN</b> 0~100%	000 - 255
3	<b>BLUE</b> 0~100%	000 - 255
4	<b>WHITE</b> 0~100%	000 - 255
5	<b>ZOOM</b> 0~100%	000 - 255

### 6 CANALI

MODE 6 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255
2	<b>RED</b> 0~100%	000 - 255
3	<b>GREEN</b> 0~100%	000 - 255
4	<b>BLUE</b> 0~100%	000 - 255
5	<b>WHITE</b> 0~100%	000 - 255
6	<b>STROBE</b> No Function Slow to fast	000 - 010 011 - 255

### 11 CANALI

MODE 11 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255
2	<b>RED</b> 0~100%	000 - 255
3	<b>GREEN</b> 0~100%	000 - 255
4	<b>BLUE</b> 0~100%	000 - 255
5	<b>WHITE</b> 0~100%	000 - 255
6	<b>COLOR</b> No Function Color Macros	000 - 015 016 - 255
7	<b>STROBE</b> No Function Slow to fast	000 - 010 011 - 255
8	<b>PROGRAMS</b> No Function 0~100% 100%-0 100% -0-100% Colors Fade 4Colors snap 15Colors snap Sound Control	000 - 031 032 - 063 064 - 095 096 - 127 128 - 159 160 - 191 192 - 223 224 - 255
9	<b>PROGRAMS SPEED</b> Speed slow to fast  <b>SOUND SENSITIVITY</b> Sound sensitivity OFF Control the sound sensitivity	000 - 255  000 - 010 011 - 255
10	<b>DIMMER MODE</b> Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255
11	<b>ZOOM</b> 0~100%	000 - 255