

## DMX CONTROL

## 5 CHANNEL

MODE 5 Ch	FUNCTION	DMX Value
1	<b>RED</b> 0~100%	000 - 255
2	<b>GREEN</b> 0~100%	000 - 255
3	<b>BLUE</b> 0~100%	000 - 255
4	<b>WHITE</b> 0~100%	000 - 255
5	<b>DIMMER SPEED MODE</b> Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000-051 052-101 102-152 153-203 204-255

## 7 CHANNEL

MODE 7 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255
2	<b>RED</b> 0~100%	000 - 255
3	<b>GREEN</b> 0~100%	000 - 255
4	<b>BLUE</b> 0~100%	000 - 255
5	<b>WHITE</b> 0~100%	000 - 255
6	<b>STROBE</b> No function Strobe Slow to Fast	000 - 010 011 - 255
7	<b>DIMMER SPEED MODE</b> Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000-051 052-101 102-152 153-203 204-255

## 10 CHANNEL

MODE 10 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255
2	<b>RED</b> 0~100%	000 - 255
3	<b>GREEN</b> 0~100%	000 - 255
4	<b>BLUE</b> 0~100%	000 - 255
5	<b>WHITE</b> 0~100%	000 - 255
6	<b>STROBE</b> No function Strobe Slow to Fast	000 - 010 011 - 255
7	<b>COLOR MACRO</b> No Function R 100%, G 0~100%, B 0 % R 100%~0 %, G 100%, B 0 % R 0 %, G 100%, B 0~100% R 0 %, G 100~0 %, B 100% R 0~100%, G 0 %, B 100% R 100%, G 0 %, B 100~0 % R 100%, G 0~100%, B 0~100% R 100~0 %, G 100~0 %, B 100% R 100%, G 100%, B 100%, W 100% 2800k 3000k 3200k 4000k 5600k 6000k 6500k 7000k 8000k 9000k 10000k	000 - 010 011 - 030 031 - 050 051 - 070 071 - 090 091 - 110 111 - 130 131 - 150 151 - 170 171 - 200 201 - 205 206 - 210 211 - 215 216 - 220 221 - 225 226 - 230 231 - 235 236 - 240 241 - 245 246 - 250 251 - 255

## 10 CHANNEL

MODE 10 Ch	FUNCTION	DMX Value
8	<b>EFFECTS</b>	
	NO Function	000-010
	Effect 1	011-037
	Effect 2	038-064
	Effect 3	065-091
	Effect4	092-118
	Effect5 (Effects1- 4)	119-145
	Effect 6	146-172
	Effect 7	173-199
9	Effect 8	200-226
	Effect 9 (Effects6- 8)	227-255
10	<b>EFFECTS SPEED</b>	
	Effects speed slow to fast	000 - 255
	<b>DIMMER SPEED MODE</b>	
	Preset dimmer speed from display menu	000 - 051
	Dimmer speed mode off	052 - 101
	Dimmer speed mode 1 (fast speed)	102 - 152
	Dimmer speed mode 2 (middle speed)	153 - 203
	Dimmer speed mode 3 (slow speed)	204 - 255

## 13 CHANNEL

MODE 13 Ch	FUNCTION	DMX Value
1	<b>RED 1</b> 0~100%	000 - 255
2	<b>GREEN 1</b> 0~100%	000 - 255
3	<b>BLUE 1</b> 0~100%	000 - 255
4	<b>WHITE 1</b> 0~100%	000 - 255
5	<b>RED 2</b> 0~100%	000 - 255
6	<b>GREEN 2</b> 0~100%	000 - 255
7	<b>BLUE 2</b> 0~100%	000 - 255
8	<b>WHITE 2</b> 0~100%	000 - 255
9	<b>RED 3</b> 0~100%	000 - 255
10	<b>GREEN 3</b> 0~100%	000 - 255
11	<b>BLUE 3</b> 0~100%	000 - 255
12	<b>WHITE 3</b> 0~100%	000 - 255
13	<b>DIMMER SPEED MODE</b>	
	Preset dimmer speed from display menu	000-051
	Dimmer speed mode off	052-101
	Dimmer speed mode1 (fast speed)	102-152
	Dimmer speed mode2 (middle speed)	153-203
	Dimmer speed mode3 (slow speed)	204-255

## 17 CHANNEL

MODE 17 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255
2	<b>STROBE 1</b> No function Strobe Slow to Fast	000 - 010 011 - 255
3	<b>STROBE 2</b> No function Strobe Slow to Fast	000 - 010 011 - 255
4	<b>STROBE 3</b> No function Strobe Slow to Fast	000 - 010 011 - 255
5	<b>RED 1</b> 0~100%	000 - 255
6	<b>GREEN 1</b> 0~100%	000 - 255
7	<b>BLUE 1</b> 0~100%	000 - 255
8	<b>WHITE 1</b> 0~100%	000 - 255
9	<b>RED 2</b> 0~100%	000 - 255
10	<b>GREEN 2</b> 0~100%	000 - 255
11	<b>BLUE 2</b> 0~100%	000 - 255
12	<b>WHITE 2</b> 0~100%	000 - 255
13	<b>RED 3</b> 0~100%	000 - 255
14	<b>GREEN 3</b> 0~100%	000 - 255
15	<b>BLUE 3</b> 0~100%	000 - 255
16	<b>WHITE 3</b> 0~100%	000 - 255
17	<b>DIMMER SPEED MODE</b> Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000-051 052-101 102-152 153-203 204-255