

## DMX CONTROL

27 ch	25 ch	23 ch	FUNCTION	DMX Value
1	1	1	<b>PAN</b>	000 - 255
2	2	2	<b>PAN Fine</b>	000 - 255
3	3	2	<b>TILT</b>	000 - 255
4	4	4	<b>TILT Fine</b>	000 - 255
5	5	5	<b>PAN/TILT Speed</b>	000 - 255
6	6	6	<b>DIMMER</b>	000 - 255
7	7		<b>DIMMER Fine</b>	000 - 255
8	8	7	<b>SHUTTER</b> Shutter closed No function (shutter open) Shutter effect slow to fast No function (shutter open) Pulse-effect in sequences No function (shutter open) Random strobe effect slow to fast No function (shutter open)	000 - 031 032 - 063 064 - 095 096 - 127 128 - 159 160 - 191 192 - 223 224 - 255
9			<b>COLOR Mode</b> Color wheels standard (default) Color wheels move continues	000 - 127 128 - 255
10	9	8	<b>COLOR1 (wheels standard)</b> Open Color1-1(UV) Color1-1 and Color1-2(UV and BLU) Color1-2(BLU)	000 - 020 021 - 040 041 - 060 061 - 255
			<b>COLOR1 (wheels move continues)</b> Move from Open to Color1-2(BLU) continues	000 - 255
11	10	9	<b>COLOR2 (wheels standard)</b> Open Color2-1(ORANGE) Color2-1 and Color2-2(ORANGE and RED) Color2-2(RED)	000 - 020 021 - 040 041 - 060 061 - 255
			<b>COLOR2 (wheels move continues)</b> Move from Open to Color2-2(RED) continues	000 - 255
12	11	10	<b>COLOR3 (wheels standard)</b> Open Color3-1(COLOR TEMPERATURE ORANGE FILTER) Color3-1 and Color3-2(COLOR TEMPERATURE ORANGE FILTER and GREEN) Color3-2(GREEN)	000 - 020 021 - 040 041 - 060 061 - 255
			<b>COLOR3 (wheels move continues)</b> Move from Open to Color3-2(GREEN) continues	000 - 255
13	12	11	<b>CYAN</b> 0~100%	000 - 255
14	13	12	<b>MAGENTA</b> 0~100%	000 - 255
15	14	13	<b>YELLOW</b> 0~100%	000 - 255

27 ch	25 ch	23 ch	FUNCTION	DMX Value
16	15	14	<b>ROTATING GOBO WHEEL</b> Open Position 1 Position 2 Position 3 Position 4 Position 5 Position 6 Position 7 Position 1 Shaking slow to fast Position 2 Shaking slow to fast Position 3 Shaking slow to fast Position 4 Shaking slow to fast Position 5 Shaking slow to fast Position 6 Shaking slow to fast Position 7 Shaking slow to fast Fast to Slow(Forward Spin) Stop (Stop Rotation) Slow to Fast(Revers Spin)	000 - 005 006 - 010 011 - 015 016 - 020 021 - 025 026 - 030 031 - 035 036 - 040 041 - 055 056 - 070 071 - 085 086 - 100 101 - 115 116 - 130 131 - 145 146 - 199 200 - 201 202 - 255
17	16	15	<b>GOBO ROTATION</b> Positioning from 0 - 360 degrees (Indexing) Fast to Slaw Stop Slow to Fast	000 -191 192 - 221 222 - 225 226 - 255
18			<b>GOBO ROTATION FINE</b> Positioning (Indexing Fine)	000 - 255
19	17	16	<b>FIXED GOBO</b> Open Position 1 Position 2 Position 3 Position 4 Position 5 Position 6 Position 7 Position 8 Position 1 Shaking slow to fast Position 2 Shaking slow to fast Position 3 Shaking slow to fast Position 4 Shaking slow to fast Position 5 Shaking slow to fast Position 6 Shaking slow to fast Position 7 Shaking slow to fast Position 8 Shaking slow to fast Fast to Slaw (Forward Spin) Stop (Stop Rotation) Slow to Fast (Revers Spin)	000 - 005 006 - 009 010 - 013 014 - 017 018 - 021 022 - 025 026 - 029 030 - 033 034 - 037 038 - 051 052 - 065 066 - 079 080 - 093 094 - 107 108 - 121 122 - 135 136 - 149 150 - 201 202 - 203 204 - 255

27 ch	25 ch	23 ch	FUNCTION	DMX Value
20	18		<b>PRISM</b> Prism Off Prism Insert	000 - 127 128 - 255
21	19	17	<b>PRISM ROT</b> Prism Off Index Fast to Slow Stop Slow to Fast	000 - 000 001 - 127 128 - 189 190 - 193 194 - 255
22	20	18	<b>FROST</b> Frost 0->100%	000-255
23	21	19	<b>FOCUS</b> Focus	000-255
24	22	20	<b>FOCUS FINE</b> Focus Fine	000-255
25	23	21	<b>ZOOM</b> Zoom	000-255
26	24	22	<b>IRIS</b> Iris 0->100% Jump Open Fast to Slow Jump Close Slow to Fast	000 - 191 192 - 223 224 - 255
27	25	23	<b>CONTROL</b> No function Enable blackout while Pan/Tilt move (Hold 3 Second) Disable blackout while Pan/Tilt move (Hold 3 Second) Enable blackout while color change (Hold 3 Second) Disable blackout while color change (Hold 3 Second) Enable blackout while gobo change (Hold 3 Second) Disable blackout while gobo change (Hold 3 Second) Pan Reset (Hold 3 Second) Tilt Reset (Hold 3 Second) Cyan&Color1 Reset (Hold 3 Second) Magenta&Color2 Reset (Hold 3 Second) Yellow&Color3 Reset (Hold 3 Second) Gobo1 Reset (Hold 3 Second) Gobo2 Reset (Hold 3 Second) Prism Reset (Hold 3 Second) Focus Reset (Hold 3 Second) Zoom Reset (Hold 3 Second) Frost Reset (Hold 3 Second) Iris Reset (Hold 3 Second) No function Reset all (Hold 3 Second) No function	000 - 039 040 - 049 050 - 059 060 - 069 070 - 079 080 - 089 090 - 099 100 - 109 110 - 119 120 - 129 130 - 139 140 - 149 150 - 159 160 - 169 170 - 179 180 - 189 190 - 199 200 - 209 210 - 219 220 - 229 230 - 239 240 - 255