

DMX CHARTS

Channel		EASY 1 CH	BASIC 2 CH 1	BASIC 2 CH 2	BASIC 3 CH	STANDARD 5 CH
1		DIMMER	DIMMER	DIMMER	DIMMER	DIMMER
2			DIMMER FINE	STROBE	DIMMER FINE	STROBE
3					STROBE	AUTO PROGRAMS
4						AUTO SPEED
5						DIMMER SPEED MODE

EASY 1 CH	BASIC 2 CH 1	BASIC 2 CH 2	BASIC 3 CH	STANDARD 5 CH	Function	DMX Value	Default
1	1	1	1	1	DIMMER 0~100%	000 ÷ 255	000
	2		2		DIMMER FINE 0~100%	000 ÷ 255	000
		2	3	2	STROBE No funtion Strobe slow to fast	000 ÷ 010 011 ÷ 255	255
				3	AUTO PROGRAMS No Function Auto Program 1 Auto Program 2 Auto Program 3 Auto Program 4	000 ÷ 010 011 ÷ 070 071 ÷ 130 131 ÷ 190 191 ÷ 255	000
				4	AUTO SPEED Auto speed slow to fast	000 ÷ 255	000
				5	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 ÷ 051 052 ÷ 101 102 ÷ 152 153 ÷ 203 204 ÷ 255	255