

DMX CHARTS

Channel	5 Ch	7 Ch	10 Ch
1	RED	DIMMER	DIMMER
2	GREEN	RED	RED
3	BLUE	GREEN	GREEN
4	WHITE	BLUE	BLUE
5	DIMMER SPEED MODE	WHITE	WHITE
6		STROBE	STROBE
7		DIMMER SPEED MODE	COLOR MACRO
8			EFFECTS
9			EFFECTS SPEED
10			DIMMER SPEED MODE

5 Ch	7 Ch	10 Ch	FUNCTION	DMX Value	Default
	1	1	DIMMER 0~100%	000 - 255	000
1	2	2	RED 0~100%	000 - 255	255 000 (for 5 Ch)
2	3	3	GREEN 0~100%	000 - 255	255 000 (for 5 Ch)
3	4	4	BLUE 0~100%	000 - 255	255 000 (for 5 Ch)
4	5	5	WHITE 0~100%	000 - 255	255 000 (for 5 Ch)
	6	6	STROBE No function Strobe Slow to Fast	000 - 010 011 - 255	000
		7	COLOR MACRO No Function R 100%, G 0~100%, B 0% R 100%~0%, G 100%, B 0% R 0%, G 100%, B 0~100% R 0% G 100%~0% B 100% R 0%~100% G 0% B 100% R 100% G 0% B 100%~0% R 100% G 0%~100% B 0%~100% R 100%~0% G 100%~0% B 100% R 100% G 100% B 100% W100% 2800k 3000k 3200k 4000k 5600k 6000k 6500k 7000k 8000k 9000k 10000k	000 - 010 011 - 030 031 - 050 051 - 070 071 - 090 091 - 110 111 - 130 131 - 150 151 - 170 171 - 200 201 - 205 206 - 210 211 - 215 216 - 220 221 - 225 226 - 230 231 - 235 236 - 240 241 - 245 246 - 250 251 - 255	000
5	7		DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255	000
		8	EFFECTS No Function Effect 1 Effect 2 Effect 3 Effect4 Effect5 (Effects1- 4) Effect 6 Effect 7 Effect 8 Effect 9 (Effects6- 8)	000 - 010 011 - 037 038 - 064 065 - 091 092 - 118 119 - 145 146 - 172 173 - 199 200 - 226 227 - 255	000
		9	EFFECTS SPEED Effects speed slow to fast	000 - 255	000
		10	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode 1 (fast speed) Dimmer speed mode 2 (middle speed) Dimmer speed mode 3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255	000