

# DMX CHARTS

Channel	UNO	DUO	BASIC	STANDARD	EXTENDED
1	DIMMER	DIMMER	DIMMER	DIMMER	DIMMER
2		CCT	WARM WHITE	DIMMER FINE	DIMMER FINE
3			COLD WHITE	STROBE	STROBE
4				CCT	CCT
5				CCT FINE	CCT FINE
6					CROSSFADE
7					WARM WHITE
8					WARM WHITE FINE
9					COLD WHITE
10					COLD WHITE FINE
11					FUNCTION

UNO	DUO	BASIC	STANDARD	EXTENDED	Function	DMX Value	Default
1	1	1	1	1	<b>DIMMER</b> 0~100%	000 ÷ 255	000
			2	2	<b>DIMMER FINE</b> 0~100%	000 ÷ 255	000
			3	3	<b>STROBE</b> Close Strobe from slow to fast Open Pulse in from slow to fast Open Pulse out from slow to fast Open Randon from slow to fast Open	000 ÷ 001 002 ÷ 062 063 ÷ 064 065 ÷ 125 126 ÷ 127 128 ÷ 188 189 ÷ 190 191 ÷ 251 252 ÷ 255	255
	2		4	4	<b>CCT</b> Lineary From 2700k To 5600k	000 ÷ 255	000
			5	5	<b>CCT FINE</b> Lineary From 2700k To 5600k	000 ÷ 255	000
				6	<b>CROSSFADE</b> 0~100%	000 ÷ 255	255
		2		7	<b>WARM WHITE</b> 0~100%	000 ÷ 255	255
				8	<b>WARM WHITE FINE</b> 0~100%	000 ÷ 255	255

UNO	DUO	BASIC	STANDARD	EXTENDED	Function	DMX Value	Default
		3		9	<b>COLD WHITE</b> 0~100%	000 ÷ 255	255
				10	<b>COLD WHITE FINE</b> 0~100%	000 ÷ 255	255
				11	<b>FUNCTION</b> No Function / Safe Display Backlight On Display Backlight 10 s Display Backlight 20 s Display Backlight 30 s Display Flip Regular Display Flip Top Down Key Lock ON Key Lock OFF Dimmer Mode Linear Dimmer Mode S-Curve Dimmer Mode Square Law Dimmer Mode Inverse Square Law Dimmer Speed Auto Dimmer Speed Slow Dimmer Speed Medium Dimmer Speed Fast White Calibration OFF White Calibration MANUAL LED Frequency 600 Hz LED Frequency 1200 Hz LED Frequency 2000 Hz LED Frequency 4000 Hz LED Frequency 6000 Hz LED Frequency 25 kHz DMX Lost Blackout DMX Lost Hold DMX Lost Stand Alone Fan Mode AUTO Fan Mode SILENT Fan Mode HIGH Fan Mode OFF Stand Alone Master Stand Alone Slave Stand Alone Effect Stand Alone CCT Stand Alone WW+CW Stand Alone Fixed Color Stand Alone White Preset Stand Alone Manual Color RESERVED FACTORY DEFAULT OF ALL CONTROLLED FUNCTION	000 ÷ 001 002 ÷ 003 004 ÷ 005 006 ÷ 007 008 ÷ 009 010 ÷ 011 012 ÷ 013 014 ÷ 015 016 ÷ 017 018 ÷ 019 020 ÷ 021 022 ÷ 023 024 ÷ 025 026 ÷ 027 028 ÷ 029 030 ÷ 031 032 ÷ 033 034 ÷ 035 036 ÷ 037 038 ÷ 039 040 ÷ 041 042 ÷ 043 044 ÷ 045 046 ÷ 047 048 ÷ 049 050 ÷ 051 052 ÷ 053 054 ÷ 055 056 ÷ 057 058 ÷ 059 060 ÷ 061 062 ÷ 063 064 ÷ 065 066 ÷ 067 068 ÷ 069 070 ÷ 071 072 ÷ 073 074 ÷ 075 076 ÷ 077 078 ÷ 079 080 ÷ 253 254 ÷ 255	000