

DMX CONTROL

MODE 4 Ch	FUNCTION	DMX Value
1	WHITE 1 0~100%	000 - 255
2	WHITE 2 0~100%	000 - 255
3	WHITE 3 0~100%	000 - 255
4	WHITE 4 0~100%	000 - 255

MODE 6 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	WHITE 1 0~100%	000 - 255
3	WHITE 2 0~100%	000 - 255
4	WHITE 3 0~100%	000 - 255
5	WHITE 4 0~100%	000 - 255
6	STROBE No Function Slow to fast	000 - 010 011 - 255

MODE 9 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	WHITE 1 0~100%	000 - 255
3	WHITE 2 0~100%	000 - 255
4	WHITE 3 0~100%	000 - 255
5	WHITE 4 0~100%	000 - 255
6	STROBE No Function Slow to fast	000 - 010 011 - 255
7	AUTO PROGRAMS No function Chase 1 Chase 2 Chase 3 Chase 4 Chase 5 Chase 6	000-010 011-040 041-080 081-120 121-170 171-220 221-255
8	AUTO SPEED Slow to fast	000 - 255
9	DIMMER SPEED Default speed Dimmer off Dimmer 1 Dimmer 2 Dimmer 3	000-051 052-101 102-150 151-203 204-255