

DMX CONTROL

10 Ch

Ch	Function in 10 Ch mode	Value
1	DIMMER 000 - 100%	000 - 255
2	RED 000 - 100%	000 - 255
3	GREEN 000 - 100%	000 - 255
4	BLUE 000 - 100%	000 - 255
5	WHITE 0 - 100%	000 - 255
6	STROBE No Function 0-30Hz	000 - 010 011 - 255
7	COLOR MACRO+WHITE BALANCE No function Red 100%/Green 0-100%/Blue 0% Red 100-0%/Green 100%/Blue 0% Red 0%/Green 100%/Blue 0-100% Red 0%/Green 100-0%/Blue 100% Red 0-100%/Green 0%/Blue 100% Red 100%/Green 0%/Blue 100-0% Red 100%/Green 0-100%/Blue 0-100% Red 100-0%/Green 100-0%/Blue 100% Red 100%/Green 100%/Blue 100%/White 100% White 1 White 2 White 3 White 4 White 5 White 6 White 7 White 8 White 9 White 10 White 11	000 - 010 011 - 030 031 - 050 051 - 070 071 - 090 091 - 110 111 - 130 131 - 150 151 - 170 171 - 200 201 - 205 206 - 210 211 - 215 216 - 220 221 - 225 226 - 230 231 - 235 236 - 240 241 - 245 246 - 250 251 - 255
8	AUTO PROGRAMS No function Auto Program 1 Auto Program 2 Auto Program 3 Auto Program 4 Auto Program 5	000 - 051 052 - 101 102 - 152 153 - 203 204 - 254 255

Ch	Function in 10 Ch mode	Value
9	AUTO SPEED (Only when CH 8 has Auto 01-05 activated)	000 - 255
10	DIMMER SPEED Preset dimmer speed from display menu Linear dimmer (DMX OFF) Non Linear dimming curve1 (fastest DIM1) Non Linear dimming curve2 (DIM2) Non Linear dimming curve 3 (Slowest DIM3)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255

4 Ch

Ch	Function in 4 Ch mode	Value
1	RED 000 - 100%	000 - 255
2	GREEN 000 - 100%	000 - 255
3	BLUE 000 - 100%	000 - 255
4	WHITE 000 - 100%	000 - 255

6 Ch

Ch	Function in 6 Ch mode	Value
1	DIMMER 000 - 100%	000 - 255
2	RED 000 - 100%	000 - 255
3	GREEN 000 - 100%	000 - 255
4	BLUE 000 - 100%	000 - 255
5	WHITE 0 - 100%	000 - 255
6	STROBE No Function 0-30Hz	000 - 010 011 - 255