

DMX CONTROL

1 CHANNEL

MODE 1 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255

2 CHANNELS

MODE 2 Ch	FUNCTION	DMX Value
1	WHITE 1 0~100%	000 - 255
2	WHITE 2 0~100%	000 - 255

4 CHANNELS

MODE 4 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	WHITE 1 0~100%	000 - 255
3	WHITE 2 0~100%	000 - 255
4	STROBE No Function Strobe slow to fast	000 - 010 011 - 255

7 CHANNELS

MODE 7 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	WHITE 1 0~100%	000 - 255
3	WHITE 2 0~100%	000 - 255
4	STROBE No Function Strobe slow to fast	000 - 010 011 - 255
5	AUTO PROGRAMS No Function Auto Program 1 Auto Program 2 Auto Program 3 Auto Program 4 Auto Program 5 Auto Program 6	000 - 010 011 - 040 041 - 080 081 - 120 121 - 170 171 - 220 221 - 255
6	AUTO SPEED Speed Slow to Fast	000 - 255
7	DIMMER SPEED Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode 1 (fast speed) Dimmer speed mode 2 (middle speed) Dimmer speed mode 3 (slow speed)	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255