

## CANALI DMX

### 10 CANALI

MODE 10 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255
2	<b>RED</b> 0~100%	000 - 255
3	<b>GREEN</b> 0~100%	000 - 255
4	<b>BLUE</b> 0~100%	000 - 255
5	<b>WHITE</b> 0~100%	000 - 255
6	<b>STROBE</b> No function Slow to fast	000 - 010 011 - 255
7	<b>COLOR MACRO + WHITE BALANCE</b> No function R:100% / G:0~100% / B:0 R:100%~0 / G:100% / B:0 R:0 / G:100% / B:0~100% R:0 / G:100%~0 / B:100% R:0~100% / G:0 / B:100% R:100% / G:0 / B:100%~0 R:100% / G:0~100% / B:0~100% R:100%~0 / G:100%~0 / B:100% R:100% / G:100% / B:100% / W:100% White1 White 2 White 3 White 4 White 5 White 6 White 7 White 8 White 9 White 10 White 11	000-010 011-030 031-050 051-070 071-090 091-110 111-130 131-150 151-170 171-200 201-205 206-210 211-215 216-220 221-225 226-230 231-235 236-240 241-245 246-250 251-255
8	<b>AUTO PROGRAMS</b> No Function Auto Program 1 Auto Program 2 Auto Program 3 Auto Program 4 Auto Program 5	000 - 051 052 - 101 102 - 152 153 - 203 204 - 254 255

MODE 10 Ch	FUNCTION	DMX Value
9	<b>AUTO SPEED</b> Slow to fast	000 - 255
10	<b>DIMMER SPEED</b> Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000-051 052-101 102-152 153-203 204-255

### 6 CANALI

MODE 6 Ch	FUNCTION	DMX Value
1	<b>DIMMER</b> 0~100%	000 - 255
2	<b>RED</b> 0~100%	000 - 255
3	<b>GREEN</b> 0~100%	000 - 255
4	<b>BLUE</b> 0~100%	000 - 255
5	<b>WHITE</b> 0~100%	000 - 255
6	<b>STROBE</b> No function Slow to fast	000 - 010 011 - 255

### 4 CANALI

MODE 4 Ch	FUNCTION	DMX Value
1	<b>RED</b> 0~100%	000 - 255
2	<b>GREEN</b> 0~100%	000 - 255
3	<b>BLUE</b> 0~100%	000 - 255
4	<b>WHITE</b> 0~100%	000 - 255