

DMX CONTROL

5 CHANNELS

MODE 5 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	WHITE 0~100%	000 - 255
5	Dimmer Speed Mode Preset dimmer speed from display menù Dimmer speed mode off Dimmer speed mode1 (1s) Dimmer speed mode2 (2s) Dimmer speed mode3 (3s) Dimmer speed mode4 (5s) Dimmer speed mode5 (10s) Dimmer speed mode6 (20s)	000 - 010 011 - 045 046 - 080 081 - 115 116 - 150 151 - 185 186 - 220 221 - 225

7 CANALI

MODE 7 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	WHITE 0~100%	000 - 255
5	Dimmer 0~100%	000 - 255
6	Strobe No Function Strobe slow to fast	000 - 010 011 - 255
7	Dimmer Speed Mode Preset dimmer speed from display menù Dimmer speed mode off Dimmer speed mode1 (1s)	000 - 010 011 - 045 046 - 080

7 CHANNELS

MODE 7 Ch	FUNCTION	DMX Value
7	Dimmer speed mode2 (2s) Dimmer speed mode3 (3s) Dimmer speed mode4 (5s) Dimmer speed mode5 (10s) Dimmer speed mode6 (20s)	081 - 115 116 - 150 151 - 185 186 - 220 221 - 225

9 CHANNELS

MODE 9 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	WHITE 0~100%	000 - 255
5	Strobe No Function Strobe slow to fast	000 - 010 011 - 255
6	RGB/Auto Program No Function Auto program 1 Auto program 2 Auto program 3 Auto program 4 Auto program 5 Auto program 6 Auto program 7 Auto program 8 Auto program 9 Auto program 10 Auto program 11 Auto program 12 Auto program 13	000 - 010 011 - 030 031 - 050 051 - 070 071 - 090 091 - 110 111 - 130 131 - 150 151 - 170 171 - 190 191 - 210 211 - 230 231 - 250 251 - 255
7	Auto speed Auto speed slow to fast	000 - 255
8	Dimmer 0~100%	000 - 255

LUMIPIX 12QTOUR

9	Dimmer Speed Mode	000 - 010
	Preset dimmer speed from display menu	011 - 045
	Dimmer speed mode off	046 - 080
	Dimmer speed mode1 (1s)	081 - 115
	Dimmer speed mode2 (2s)	116 - 150
	Dimmer speed mode3 (3s)	151 - 185
	Dimmer speed mode4 (5s)	186 - 220
	Dimmer speed mode5 (10s)	221 - 225
	Dimmer speed mode6 (20s)	

49 CHANNELS

MODE	FUNCTION	DMX Value
49 Ch		
1	RED 1 0~100%	000 - 255
2	GREEN 1 0~100%	000 - 255
3	BLUE 1 0~100%	000 - 255
4	WHITE 1 0~100%	000 - 255
5	RED 2 0~100%	000 - 255
6	GREEN 2 0~100%	000 - 255
7	BLUE 2 0~100%	000 - 255
8	WHITE 2 0~100%	000 - 255
....
41	RED 11 0~100%	000 - 255
42	GREEN 11 0~100%	000 - 255
43	BLUE 11 0~100%	000 - 255
44	WHITE 11 0~100%	000 - 255
45	RED 12 0~100%	000 - 255

49 CHANNELS

MODE	FUNCTION	DMX Value
49 Ch		
46	GREEN 12 0~100%	000 - 255
47	BLUE 12 0~100%	000 - 255
48	WHITE 12 0~100%	000 - 255
49	Dimmer Speed Mode Preset dimmer speed from display menu Dimmer speed mode off49 Dimmer speed mode1 (1S) Dimmer speed mode2 (2S) Dimmer speed mode3 (3S) Dimmer speed mode4 (5S) Dimmer speed mode5 (10S) Dimmer speed mode6 (20S)	000 - 010 011 - 045 046 - 080 081 - 115 116 - 150 151 - 185 186 - 220 221 - 225

LUMIPIX 12QTOUR

51 CANALI

MODE	FUNCTION	DMX Value
51 Ch		
1	RED 1 0~100%	000 - 255
2	GREEN 1 0~100%	000 - 255
3	BLUE 1 0~100%	000 - 255
4	WHITE 1 0~100%	000 - 255
5	RED 2 0~100%	000 - 255
6	GREEN 2 0~100%	000 - 255
7	BLUE 2 0~100%	000 - 255
8	WHITE 2 0~100%	000 - 255
....
41	RED 11 0~100%	000 - 255
42	GREEN 11 0~100%	000 - 255
43	BLUE 11 0~100%	000 - 255
44	WHITE 11 0~100%	000 - 255
45	RED 12 0~100%	000 - 255
46	GREEN 12 0~100%	000 - 255
47	BLUE 12 0~100%	000 - 255
48	WHITE 12 0~100%	000 - 255
49	Dimmer 0~100%	000 - 255
50	Strobe No Function Strobe slow to fast	000 - 010 011 - 255

51 CANALI

MODE	FUNCTION	DMX Value
51 Ch		
51	Dimmer Speed Mode Preset dimmer speed from display menu Dimmer speed mode off49 Dimmer speed mode1 (1S) Dimmer speed mode2 (2S) Dimmer speed mode3 (3S) Dimmer speed mode4 (5S) Dimmer speed mode5 (10S) Dimmer speed mode6 (20S)	000 - 010 011 - 045 046 - 080 081 - 115 116 - 150 151 - 185 186 - 220 221 - 225