


DIAMOND37

MOVING HEAD

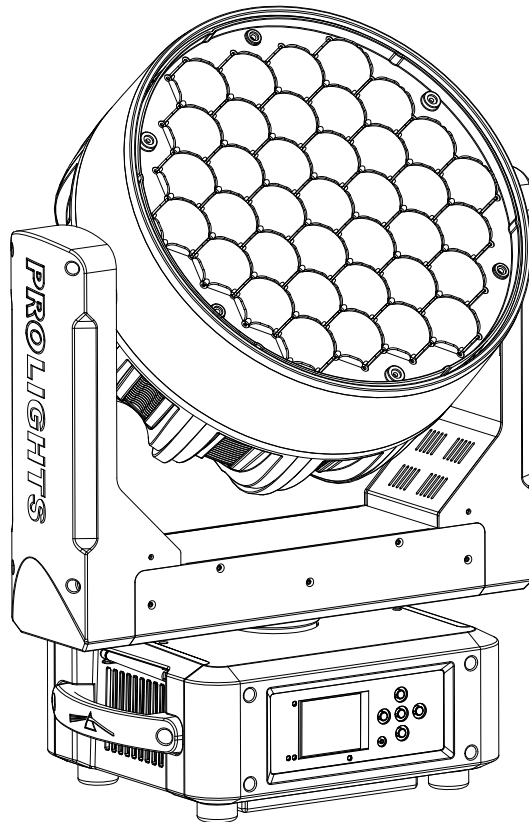

USER MANUAL
MANUALE UTENTE

All rights reserved by Music & Lights S.r.l. No part of this instruction manual may be reproduced in any form or by any means for any commercial use.

In order to improve the quality of products, Music&Lights S.r.l. reserves the right to modify the characteristics stated in this instruction manual at any time and without prior notice.

All revisions and updates are available in the 'manuals' section on site www.musiclights.it

TABLE OF CONTENTS

Safety

General instructions	2
Warnings and installation precautions	2

1 Introduction

1.1 Description	3
1.2 Technical specifications	3
1.3 Operating elements and connections	6

2 Installation

2.1 Mounting	7
--------------------	---

3 Functions and settings

3.1 Operation	8
3.2 Basic	8
3.3 Menu structure	9
3.4 Slave Receive mode	12
3.5 Operation in automatic mode	12
3.6 Scenes Record mode	13
3.7 Music mode	14
3.8 Sensitivity microphone	14
3.9 Linking	14
3.10 DMX mode	14
3.11 DMX configuration	15
3.12 DMX addressing	15
3.13 Connection of the DMX line	16
3.14 Construction of the DMX termination	16
3.15 DMX control	17
3.16 Wireless control settings	24
3.17 Ethernet settings	24
3.18 Fixture settings	24
3.19 Lamp settings	25
3.20 Display settings	25
3.21 Fixture information	26
3.22 Reset functions	26
3.23 Special functions	27

4 Maintenance

4.1 Maintenance and cleaning the unit	30
4.2 Fuse replacement	30
4.3 Trouble shooting	31

Packing content

- DIAMOND37
- Mount bracket
- Power supply cable and signal cable
- Safety rope
- User manual



WARNING! Before carrying out any operations with the unit, carefully read this instruction manual and keep it with care for future reference. It contains important information about the installation, usage and maintenance of the unit.



SAFETY

General instruction

- The products referred to in this manual conform to the European Community Directives and are therefore marked with **CE**.
- The unit is supplied with hazardous network voltage (230V~). Leave servicing to skilled personnel only. Never make any modifications on the unit not described in this instruction manual, otherwise you will risk an electric shock.
- Connection must be made to a power supply system fitted with efficient earthing (Class I appliance according to standard EN 60598-1). It is, moreover, recommended to protect the supply lines of the units from indirect contact and/or shorting to earth by using appropriately sized residual current devices.
- The connection to the main network of electric distribution must be carried out by a qualified electrical installer. Check that the main frequency and voltage correspond to those for which the unit is designed as given on the electrical data label.
- This unit is not for home use, only professional applications.
- Never use the fixture under the following conditions:
 - in places wet;
 - in places subject to vibrations or bumps;
 - in places with an ambient temperature of over 45°C.
- Make certain that no inflammable liquids, water or metal objects enter the fixture.
- Do not dismantle or modify the fixture.
- All work must always be carried out by qualified technical personnel. Contact the nearest sales point for an inspection or contact the manufacturer directly.
- If the unit is to be put out of operation definitively, take it to a local recycling plant for a disposal which is not harmful to the environment.



Warnings and installation precautions

- If this device will be operated in any way different to the one described in this manual, it may suffer damage and the guarantee becomes void. Furthermore, any other operation may lead to dangers like short circuit, burns, electric shock, etc.
- Before starting any maintenance work or cleaning the projector, cut off power from the main supply.
- Always additionally secure the projector with the safety rope. When carrying out any work, always comply scrupulously with all the regulations (particularly regarding safety) currently in force in the country in which the fixture's being used.
- For inside use only. Not designed for outside use.
- The minimum distance between the fixture and surrounding walls must be more than 50 cm and the air vents at the housing must not be covered in any case.
- Install the fixture in a well ventilated place.
- Keep any inflammable material at a safe distance from the fixture.
- The maximum temperature that can be reached on the external surface of the fitting, in a thermally steady state, is high. After power off, please cool down over 15 minutes.
- Shields, lenses or ultraviolet screens shall be changed if they have become damaged to such an extent that their effectiveness is impaired.
- The lamp (LED) shall be changed if it has become damaged or thermally deformed.
- Never look directly at the light beam. Please note that fast changes in lighting, e. g. flashing light, may trigger epileptic seizures in photosensitive persons or persons with epilepsy.

- 1 - INTRODUCTION

1.1 DESCRIPTION

DIAMOND37 is an hybrid luminaire offering first WBFX technology in the Prolights range. DIAMOND37 WBFX technology establishes a new concept of versatility offering three operating modes: high performance Washlight with advanced color calibration , punchy Beam light and amazing FX graphic generator, revealing itself as a true creative tool for the LDs.

DIAMOND37 is equipped with 37x15W RGBW/Full Color Osram Ostar LEDs driven to 1A and it is the brightest LED fixture in its category offering one of the highest lumen/W ratio in the industry, through the combination of high-end LED source, new optic design ,and the most advanced liquid-cooling system and PSU managment on the maket.

A 1:11 Fast-Zoom system offers a fully variable beam of 6°-66°, remaining even in the whole range and making this fixture useful in both indoor venues as TV studios and music hall and outdoor large environments as stadium and arenas. The “Wash-mode” features a perfect color calibration system and homogeneous light distribution through the application of reflex-technique where color are pre-mixed in the internal optical channels.

The “Beam-mode” enters in action when DIAMOND37 is zoomed to 6° featuring a parallel beam and the fixture becomes an ultra-bright mid-air effect light. The “FX-mode” is obtained through a state of the art combination between the honey-comb gapless optic design, pixel control of every individual LED and the advanced firmware features.

DIAMOND37 benefits from multiple control options via DMX, Art-Net and Wireless DMX connection (optional); it offers several DMX mode with multiple pre-built static and dynamic patterns which can be controlled on different layers and variable in speed and position also in the basic DMX mode with low channels requirements.

Extreme speed and precision of movements is guaranteed by the ultra-lightweight chassis and by usage of special motors, allowing DIAMOND37 to be fast, reactive and precise in its movements. SHINE series electronic design offers advanced features as colorful high-definition LCD display with multi-language Menu, battery backup, RDM, hibernation, color bounce, advanced diagnostic, dimmer control and color management system.

1.2 TECHNICAL SPECIFICATIONS

LIGHT SOURCE

- Source: 37x15W RGBW Osram Ostar LED
- Luminous Flux: 18000lm
- Lux: (6°) 15530 - (66°) 5200lux @5m
- Source Life Expectancy: >50.000 h

OPTICS

- Zoom: 6-66° Motorised linear zoom
- Lens Type: Honey-Comb gapless plano convex optics

COLOR SYSTEM

- Color Mixing: RGBW/FC
- CTC: CTC control through independent DMX channel
- White Presets: 2700~9000K
- Color Wheel: Virtual color wheel with presets
- Macros: Several pre-build pixel macros with adjustable speed

DYNAMIC EFFECTS

- Pixel Patterns: Preprogrammed dynamic and static patterns
- FX Generator: Adjustable foreground/background color, index, speed, direction

BODY

- Pan Angle: 630°
- Tilt Angle: 265°
- Pan/Tilt Resolution: 8/16 bit
- Feedback: Automatic repositioning after accidental movement
- Body: Aluminium structure with hi-resistance polycarbonate cover
- Body Color: Black

CONTROL

- Protocols: DMX512, RDM, Art-Net
- Dmx Channels: 19/22/41/170ch
- Pixel Control: Pixel2Pixel control
- W-DMX: Included, Wireless Solution receiver
- RDM: RDM ready for fixture remote monitor and settings
- Display: LCD high resolution color display
- Firmware Upgrade: Yes, via USB-DMX interface (UPBOX2) not included
- Hibernation: Power Safe Mode when lost DMX
- Master/Slave: for synchronized operation of more units linked in a chain

ELECTRONICS


- Dimmer: Linear 0~100% electronic dimmer
- Strobe/Shutter: 1-25 Hz, electronic
- Battery Backup: Battery backup for user operation without connecting to the main power
- Operating Temperature: -10° / 45°
- Flicker: Flicker free operation

ELECTRICAL


- Power Supply: 100-240V – 50/60Hz
- Power Consumption (at 230V): 520W

PHYSICAL

- Signal Connection: 5p in/out, RJ45 in/out
- Power Connection: PowerCON TRUE1 in
- IP: 20
- Cooling: Combination of liquid cooling system and low noise fan
- Suspension And Fixing: Any position with “quick-lock” omega brackets
- Dimensions (WxHxD): 420x336x475mm
- Weight: 16kg

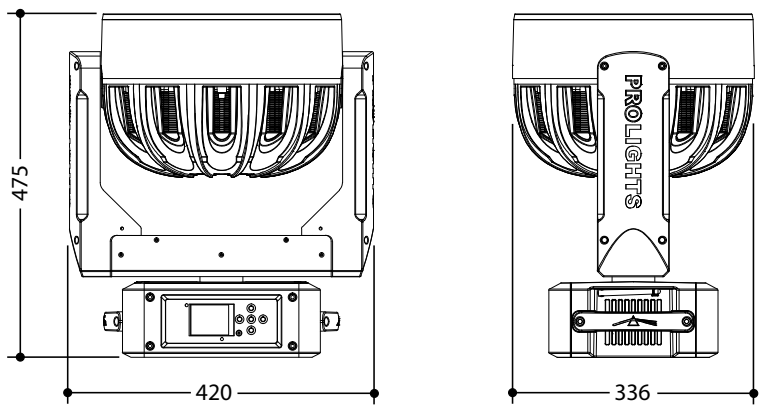




Technical drawing

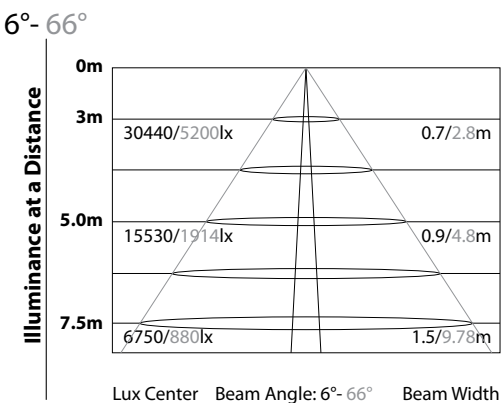

Photometric data

Fig.1

1.3 OPERATING ELEMENTS AND CONNECTIONS

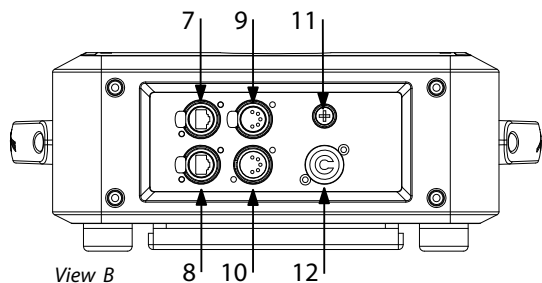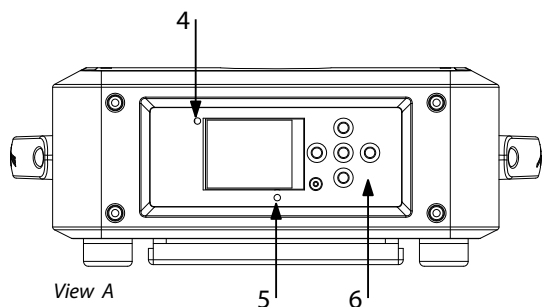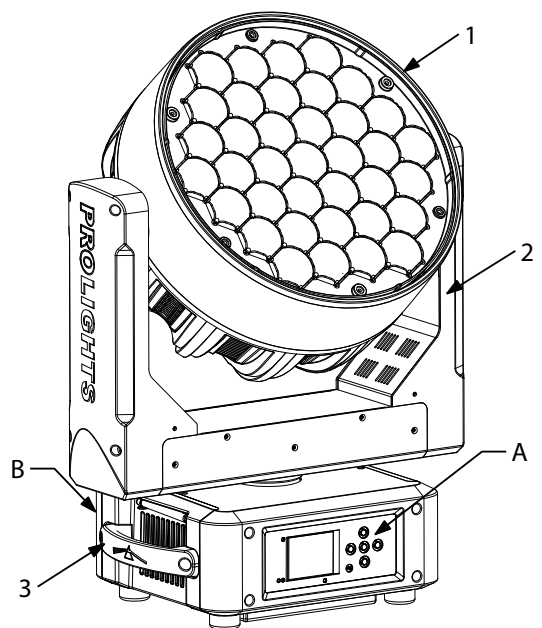

1. MOVING HEAD
2. ROTARY ARM
3. HANDLE
4. LED INDICATOR "W-DMX"
5. MICROPHONE
6. CONTROL PANEL with LCD display and 5 button used to access the control panel functions and manage them.
7. EtherCON connector Signal IN/OUT
8. EtherCON connector Signal IN/OUT
9. DMX OUT (5-pole XLR):
1 = ground, 2 = DMX-, 3 = DMX+, 4 N/C, 5 N/C
10. DMX IN (5-pole XLR):
1 = ground, 2 = DMX-, 3 = DMX+, 4 N/C, 5 N/C
11. POWER IN (PowerCON IN):
for connection to a socket (100-240V~/50-60Hz) via the supplied mains cable.
12. MAIN FUSE HOLDER: replace a burnt-out fuse by one of the same type only.

- 2 - INSTALLATION

2.1 MOUNTING

The DIAMOND37 may be set up on a solid and even surface. By means of the fixing facilities of the base plate, the unit can also be mounted upside down to a cross arm. The base plate is shown in fig.3. For fixing, stable mounting clips are required. According to the figure, the bolts of the brackets are placed into the openings provided in the base plate and turned clockwise until they lock (to the stop). Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. The mounting place must be of sufficient stability and be able to support a weight of 10 times of the unit's weight. When carrying out any installation, always comply scrupulously with all the regulations (particularly regarding safety) currently in force in the country in which the fixture's being used. Always additionally secure the projector with the safety rope from falling down. For this purpose, fasten the safety rope at a suitable position so that the maximum fall of the projector will be 20 cm.

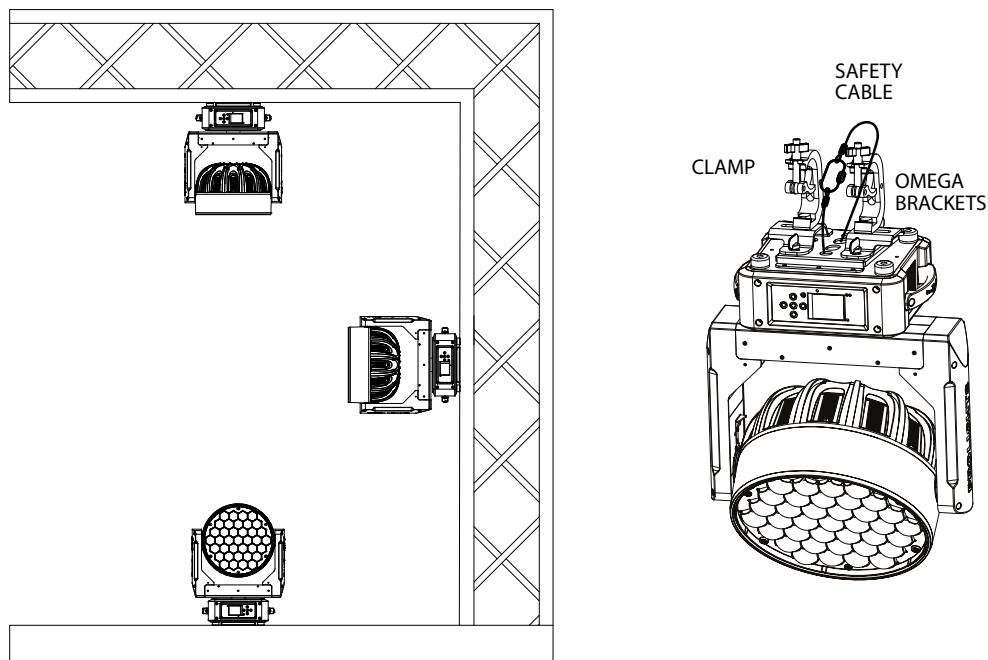


Fig.3


- 3 - FUNCTIONS AND SETTINGS

3.1 OPERATION

Connect the supplied main cable to a socket (100-240V~/50-60Hz). The unit will run built-in program to reset all motors to their home position. Shortly after that the DIAMOND37 is ready for operation. To switch off, disconnect the mains plug from the socket. For a more convenient operation it is recommended to connect the unit to a socket which can be switched on and off via light switch.

3.2 BASIC

The DIAMOND37 has a LCD display and 5 button used to access the control panel functions and manage them (fig.4).

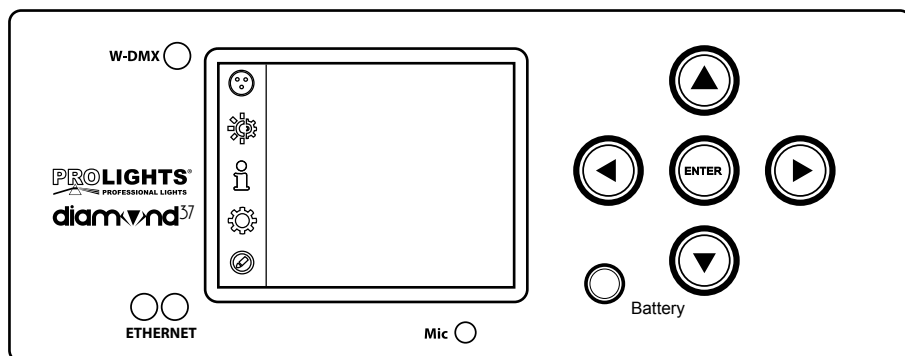

◀ LEFT

Return to the top level

▶ RIGHT

Commute from units, tens, hundred in the menu

▲ UP

Increases the value displayed or passes to the previous item in a menu

▼ DOWN


Decreases the value displayed or passes to the next item in the menu

ENTER


Confirms the displayed value, or activates the displayed function, or enters the successive menu

BATTERY

Used to activate the backup battery. It allows to switching display interface without main power

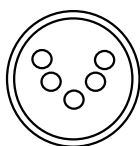


CONNECT

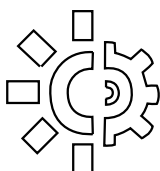

LIGHT



INFORMATION

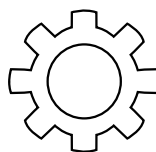

SET



PROGRAM

Fig.4 - Functions of the buttons and display icons

3.3 MENU STRUCTURE

MENU				
1	Connect	⇒ DMX Address	⇒ Value (1-512)	
		Wireless DMX	⇒ Value (1-512)	
		Art-Net	⇒ Value (1-491)	
2	Light	⇒ Max Temperature	⇒ Value (60°-139° C)	
		Lamp Adjust	⇒ Control	⇒ Value (000-255)
			Pan	⇒ Value (000-255)
			Pan Fine	⇒ Value (000-255)
			Tilt	⇒ Value (000-255)
			Tilt Fine	⇒ Value (000-255)
			Pan&Tilt Speed	⇒ Value (000-255)
			Pan&Tilt Fun	⇒ Value (000-255)
			Shutter Fun	⇒ Value (000-255)
			Shutter	⇒ Value (000-255)
			Dimmer	⇒ Value (000-255)
			Color Function	⇒ Value (000-255)
			Virtual Color1	⇒ Value (000-255)
			Virtual Color2	⇒ Value (000-255)
			Red-All	⇒ Value (000-255)
			Green-All	⇒ Value (000-255)
			Blue-All	⇒ Value (000-255)
			White-All	⇒ Value (000-255)
			Zoom	⇒ Value (000-255)
			Foreground	⇒ Value (000-255)
			Background	⇒ Value (000-255)
			Pattern	⇒ Value (000-255)
			Pattern Speed	⇒ Value (000-255)
			Pattern Byte 1	⇒ Value (000-255)
			Pattern Byte 2	⇒ Value (000-255)
			Pattern Byte 3	⇒ Value (000-255)
			Pattern Byte 4	⇒ Value (000-255)
			Pattern Byte 5	⇒ Value (000-255)
			Pattern Byte 7	⇒ Value (000-255)
			Pattern Byte 8	⇒ Value (000-255)
			Pattern Byte 9	⇒ Value (000-255)

Pattern Byte 10	⇒	Value (000-255)
Pattern Byte 11	⇒	Value (000-255)
Pattern Byte 12	⇒	Value (000-255)
Pattern Byte 13	⇒	Value (000-255)
Pattern Byte 14	⇒	Value (000-255)
Pattern Byte 15	⇒	Value (000-255)
Pattern Byte 16	⇒	Value (000-255)
Pattern Byte 17	⇒	Value (000-255)
Pattern Byte 18	⇒	Value (000-255)
Pattern Byte 19	⇒	Value (000-255)

3	Information	⇒	Time Info. Temperature Fans Speed Channel Value Error Message Fixture Model Software Ver.
---	--------------------	---	---

4	Set	⇒	Reset	⇒	All Pan & Tilt Others
			Movement	⇒	Pan Reverse ⇒ ON/OFF Tilt Reverse ⇒ ON/OFF Pan Degree ⇒ 540/630 Encoders ⇒ ON/OFF Pan/Tilt Mode ⇒ Standard/Smooth
			UI Set	⇒	Mic Sens. ⇒ Value (00-99%) No Signal ⇒ Close/Hold/Auto/Music Temperature C/F ⇒ Celsius/Fahrenheit Fans Mode ⇒ Auto Speed/High Speed Zoom Mode ⇒ Mode 1, Mode 2 Hibernation ⇒ Not Hibernation/Min (01-99) Backlight ⇒ Always On/Min (01-99) Flip Display ⇒ ON/OFF Display Bright ⇒ Value (00-31) Brand Show ⇒ ON/OFF Key Lock ⇒ ON/OFF Language ⇒ EN/FR/SP...

Users	⇒	User Mode	⇒	Standard/Extended1/Extended2/Basic/...
		Edit User	⇒	Max Channel/Control/Pan/Pan Fine/Tilt/Tilt Fine...
Fixture Set	⇒	Theatre Mode	⇒	On/Off
		Frequency	⇒	60Hz... (1200Hz)
Calibration	⇒	Password	⇒	050 (insert to unlock the following settings)
		Pan	⇒	Value (-128-127)
		Tilt	⇒	Value (-128-127)
		Red-All	⇒	Value (-128-127)
		Green-All	⇒	Value (-128-127)
		Blue-All	⇒	Value (-128-127)
Fixture ID	⇒	Name	⇒	Fixture ID Name
		Rdm Mode	⇒	Mode 1, Mode 2
		Password	⇒	050 (insert to unlock the following settings)
		PID Code	⇒	00001
Wireless Set	⇒	DMX On Cable	⇒	ON/OFF
		Reset Connect	⇒	ON/OFF
Ethernet Set	⇒	IP Address	⇒	X.X.X.X
		IP Mask	⇒	X.X.X.X
		Universe	⇒	00000
Reload Default	⇒	Basic Reload	⇒	ON/OFF
		Program Reload	⇒	ON/OFF
		Password	⇒	050 (insert to unlock the following settings)
		Private Reload	⇒	ON/OFF
		All Reload	⇒	ON/OFF

5	Program	⇒	Play	⇒	DMX Receive	
					Slave Receive	⇒ Part 1 Receive/Part 2 Receive/Part 3 Receive
					Sequence	⇒ Alone/Master
					Music	⇒ Alone/Master
	Select Chase	⇒		Chase Part 1	⇒	Chase 1 - Chase 8
				Chase Part 2	⇒	Chase 1 - Chase 8
				Chase Part 3	⇒	Chase 1 - Chase 8
	Edit Chases	⇒		Edit Chase 1	⇒	Chase Test/ Step 1 - Step 64
				Edit Chase ...	⇒	Chase Test/ Step 1 - Step 64
				Edit Chase 8	⇒	Chase Test/ Step 1 - Step 64
	Edit Scenes	⇒		Edit Scenes 001	⇒	Control/.../Fade Time/Scene Time/External Input
				Edit Scenes ...	⇒	Control/Pan/Pan Fine/Tilt/Tilt Fine...
				Edit Scenes 250	⇒	Control/Pan/Pan Fine/Tilt/Tilt Fine...
	Scenes Record	⇒		Sc XX - Sc XX		

3.4 SLAVE RECEIVE MODE

This mode will allow you to link up the units together without a controller. Choose a unit to function as the Master. The unit must be the first unit in line; other units will work as slave with the same effect.

A Master unit can send up to 3 different data groups to the Slave units, i.e. a Master unit can start 3 different Slave units, which run 3 different programs. The Master unit sends the 3 program parts in a continuous loop.

The Slave unit receives data from the Master unit according to the group which the Slave unit was assigned to.

For example, if a slave device is set to Receive Part 1, the Master unit Slave unit will send the automated Chase Part 1; if set to Receive Part 2, the Chase Part 2 Slave units will receive from the Master.

To set the drive as a slave, proceed as follows:

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the **Program** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, and then select **Play** and press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, and select **Slave Receive** and press ENTER to confirm.
- Press the UP/DOWN button to select the different modes of operation **Part 1 Receive/Receive Part 2/Part 3 Receive**, and then press the ENTER button to confirm your choice.
- Press the LEFT button repeatedly to exit the menu and save changes.

Select the desired program on the master unit (described in section 3.5).

Use the DMX connectors of the DIAMOND37 and an XLR cable to form a chain of units. Under certain conditions and lengths you want to make a termination as shown on page 17.

3.5 OPERATIONS IN AUTOMATIC MODE

The unit independently runs through its show. Before you send an automatic program you need to set the drive as Master/Alone:

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the **Program** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **Play** and press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **Sequence** and press ENTER to confirm your choice.
- Press the UP/DOWN button to select the mode of operation:
 - **Master**, if the unit is connected in series with other units and it acts as the Master;
 - **Alone**, if the unit is not connected to other units.
- Press the ENTER button to confirm your choice.
- Press the LEFT button repeatedly to exit the menu and save changes.

The unit will go into automatic mode by executing the program automatically.

Select Chase

The function **Select Chase** lets you choose the automatic program to actually run.

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the **Program** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **Select Chase** and press the ENTER button to enter the next menu.

- Press the UP/DOWN button to scroll through the menu, then select **Chase Part 1/Chase Part 2/Chase Part 3** and press ENTER to confirm.
- Press the UP/DOWN button to select **Chase1-Chase8**, and press the ENTER button to confirm.
- Press the LEFT button repeatedly to exit the menu and save changes.

Edit Chases

The function **Edit Chases** allows you to create automatic pre-programmed show.

The automatic programs **Chase Part1/2/3** are each divided into **Chase1-Chase8**. Each Chase can be composed of **1-64 step** that can be configured through the following procedure:

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the **Program** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **Edit Chases** and press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **Edit Chase 1 - Edit Chase 8**, then press the ENTER button to confirm.
- Press the UP/DOWN button to select the **Step 01 - Step 64**, and press ENTER to confirm.
- Press the UP/DOWN button to select the **Scene** you want to set for the Step chosen, and then press ENTER to confirm.
- Press the LEFT button repeatedly to exit the menu and save changes.

Edit Scenes

The function **Edit Scenes** allows you to create individual scenes to be included in the Chase Step.

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the **Program** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **Edit Scenes** and press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **Edit Scene 001 - Edit Scene 250**, then press the ENTER button to confirm.
- Press the UP/DOWN button to select the desired function you want to edit (Control, Pan, Tilt, etc..), Then press the ENTER button to confirm.
- Press the UP/DOWN button to change the value of the function, then press the ENTER button to confirm.
- Press the LEFT button repeatedly to exit the menu and save changes.

3.6 SCENES RECORD MODE

DIAMOND37 is equipped with a built-in DMX recorder by which you can transmit the programmed scenes from your DMX-controller to the device. Proceed as follows to store the sequence of scenes in the unit.

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll through the menu, select the **Program** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **Scenes Record** and press the ENTER button to enter the next menu.
- Press the UP/DOWN button to adjust the scene at the beginning and end to be inserted in the automatic program, then press the ENTER button to confirm.
- Press the LEFT button repeatedly to exit the menu and save changes.

When recalling scenes from the controller will automatically be transmitted to the device.

3.7 MUSIC MODE

In music mode, via its integrated microphone, the unit can be controlled by music with a clear rhythm in the bass range. If the music control should not work optimally, increase the volume or reduce the distance between the sound source and the light effect unit or alternatively increase the sensitivity of the microphone.

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the **Program** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **Play** and press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **Music** and press ENTER to confirm.
- Press the UP/DOWN button to select the mode of operation:
 - **Master**, if the mobile head is connected in series to other units, and it performs the Master function;
 - **Alone**, if the fixture is not connected to other units.
- Press the ENTER button to confirm your choice.
- Press the LEFT button repeatedly to exit the menu and save changes.

The unit will go into music mode by executing an automatic program to the rhythm of music.

3.8 SENSITIVITY MICROPHONE

Select this function to set the value of the sensitivity of the microphone for use with a music control:

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the **Set** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **UI Set**, and press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, then select **MicSens.** and press ENTER to confirm.
- Press the UP/DOWN button to adjust the level of sensitivity of the microphone, and then press the ENTER button to confirm your choice.
- Press the LEFT button repeatedly to exit the menu and save changes.

3.9 LINKING

Several units may be interconnected in order to control all further slave units to the same effect of the master unit.

1. Connect the DMX OUT of the master unit via 5-pole XLR cable to the DMX IN of the first slave unit.
2. Connect the DMX OUT of the first slave unit to the DMX IN of the second slave unit, etc. until all units are connected in a chain.

3.10 DMX MODE

To enter the DMX mode, follow these steps:

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the **Connect** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select the **DMX Address** and press the ENTER key.
- Press the arrow keys to select the desired value (**001-512**).
- Press the ENTER key to confirm the setting.
- Press the LEFT button repeatedly to exit the menu and save changes.

3.11 DMX CONFIGURATION

The DIAMOND37 has 4 DMX channel configurations which can be accessed from the control panel.

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the **Set** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **Users** and press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **User Mode** and press ENTER to confirm your choice.
- Use the UP/DOWN button to select the desired DMX channel configuration (**Standard**, **Extended1**, **Extended2**, **Basic**, **User**), then press the ENTER button to confirm your choice.
- Press the LEFT button repeatedly to exit the menu and save changes.

The tables on page 18 show the mode of operation and their values DMX.

The unit is equipped with 5-pole XLR connections.

Edit User

The **Edit User**, in the same menu, allows you to create a profile of personalized functions. You can change the parameters of the various functions (Control, Pan, Tilt, etc.). Once you’ve created your custom profile, you can use it by selecting the USER mode as described above.

3.12 DMX ADDRESSING

For operation via light control unit with DMX512 protocol, is sufficient connect the controller to DIA-MOND37. To able to operate the DIAMOND37 with a light controller, adjust the DMX start address for the first a DMX channel. If e. g. address 33 on the controller is provided for controlling the function of the first DMX channel, adjust the start address 33 on the DIAMOND37. The other functions of the light effect panel are then automatically assigned to the following addresses.

An example with the start address 33 is shown below:

Number of DMX channels	Start address (example)	DMX Address occupied	Next possible start address for unit No. 1	Next possible start address for unit No. 2	Next possible start address for unit No. 3
19	33	33-51	52	71	90


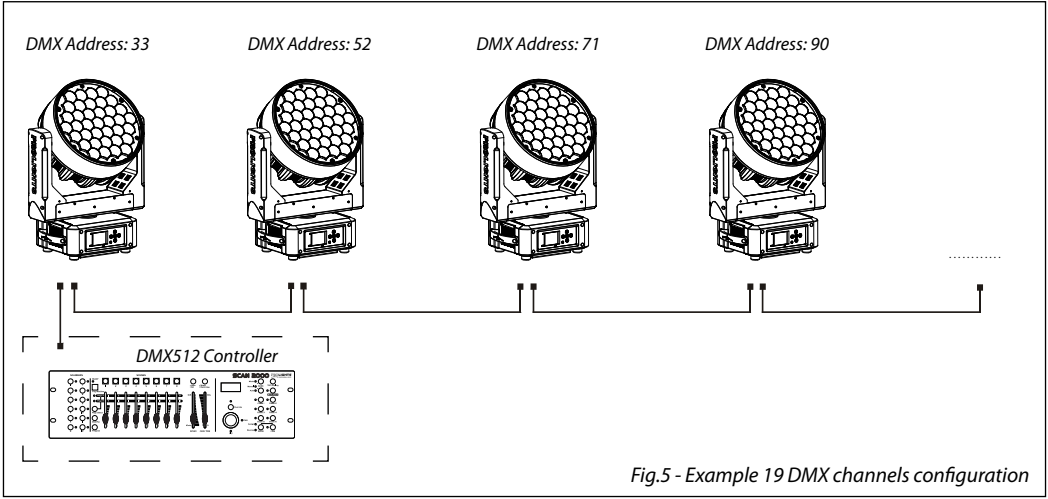


Fig.5 - Example 19 DMX channels configuration

3.13 CONNECTION OF THE DMX LINE

DMX connection employs standard XLR connectors. Use shielded pair-twisted cables with 120Ω impedance and low capacity.
The following diagram shows the connection mode:

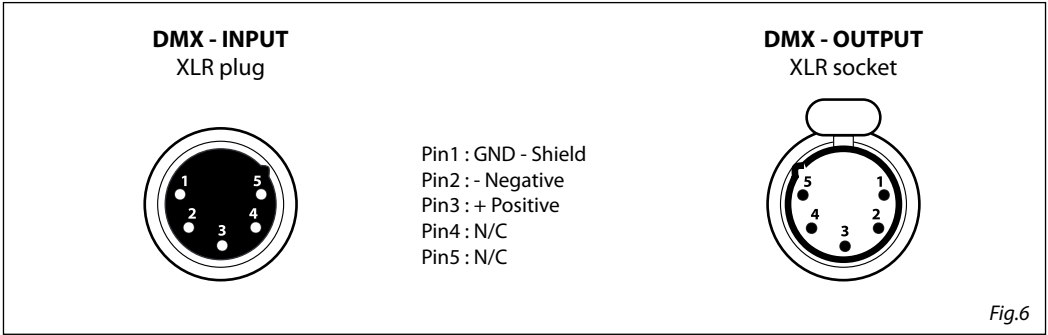

ATTENTION

The screened parts of the cable (sleeve) must never be connected to the system's earth, as this would cause faulty fixture and controller operation.

Over long runs can be necessary to insert a DMX level matching amplifier.


For those connections the use of balanced microphone cable is not recommended because it cannot transmit control DMX data reliably.

- Connect the controller DMX input to the DMX output of the first unit.
- Connect the DMX output to the DMX input of the following unit. Connect again the output to the input of the following unit until all the units are connected in chain.
- When the signal cable has to run longer distance is recommended to insert a DMX termination on the last unit.

3.14 CONSTRUCTION OF THE DMX TERMINATION

The termination avoids the risk of DMX 512 signals being reflected back along the cable when they reach the end of the line: under certain conditions and with certain cable lengths, this could cause them to cancel the original signals.

The termination is prepared by soldering a 120Ω 1/4 W resistor between pins 2 and 3 of the 5-pin male XLR connector, as shown in figure.

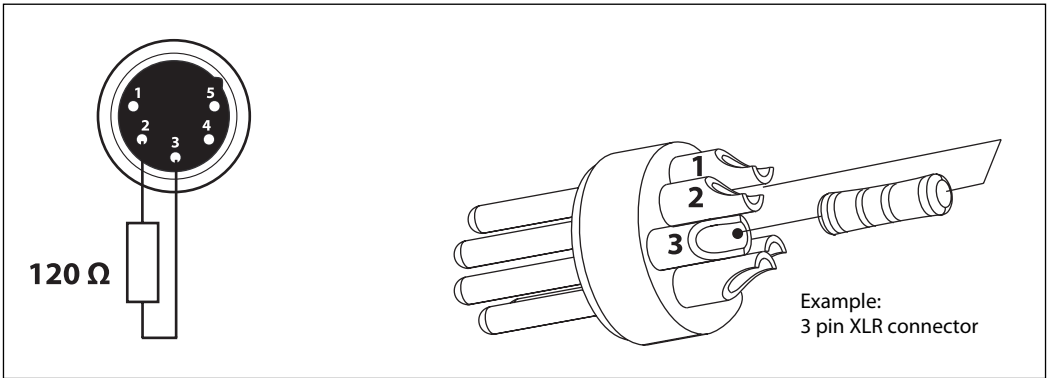

3.15 DMX CONTROL

STAND	EXT-1	EXT-2	BAS	FUNCTION	DMX Value
22 Ch	41 Ch	170 Ch	19 Ch		
1	1	1	1	PAN 0~100%	000 - 255
2	2	2		PAN FINE 0~100%	000 - 255
3	3	3	2	TILT 0~100%	000 - 255
4	4	4		TILT FINE 0~100%	000 - 255
5	5	5	3	MOVEMENT SPEED Fast to slow	000 - 255
6	6	6		MOVEMENT FUNCTION Normal Movement with backout TBD	000 - 015 016 - 031 032 - 255
7	7	7	4	SHUTTER FUNCTION Normal Shutter Functions Pulse-effect Forward Pulse-effect Reverse Random strobe TBD	000 - 015 016 - 031 032 - 047 048 - 063 064 - 255
8	8	8	5	SHUTTER Normal Shutter Functions Close Strobe Rate (slow to fast) Open Pulse-effect Forward Close Strobe Rate (slow to fast) Open Pulse-effect Reverse Close Strobe Rate (slow to fast) Open Random Strobe Close Strobe Rate (slow to fast) Open Shutter closed Shutter closed No function (shutter open) Strobe effect slow to fast	000 - 031 032 - 223 224 - 255 000 - 031 032 - 223 224 - 255 000 - 031 032 - 223 224 - 255 000 - 031 032 - 223 224 - 255 000 - 031 032 - 063 064 - 095


STAND	EXT-1	EXT-2	BAS	FUNCTION	DMX Value
22 Ch	41 Ch	170 Ch	19 Ch		
8	8	8	5	No function (shutter open) Pulse-effect in sequences No function (shutter open) Random strobe effect slow to fast No function (shutter open)	096 - 127 128 - 159 160 - 191 192 - 223 224 - 255
9	9	9	6	DIMMER Dimmer (close to open)	000 - 255
10	10	10	7	VIRTUAL COLOR FUNCTION On Function CTC Function Forward Spin Reverse Spin Continuous Color Bounce TBD	000 - 015 016 - 031 032 - 047 048 - 063 064 - 079 080 - 111 112 - 255
11	11	11	8	VIRTUAL COLOR 1 CTC Function Color Temperature Correction 2000K->2700K White 3200K White 4200K White 5600K White 8000K Forward Spin Rainbow Effect (Slow to Fast) Reverse Spin Rainbow Effect (Slow to Fast) Continuous & Color Bounce Black Red Green Blue White Red=0, Green->up, Blue=full, White=0 Red=0, Green=full, Blue->down, White=0 Red->up, Green=full, Blue=0, White=0 Red=full, Green->down, Blue=0, White=0 Red=full, Green=0, Blue->up, White=0 Red->down, Green=0, Blue=full, White=0	000 - 223 224 - 231 232 - 239 240 - 247 248 - 255 000 - 255 000 - 255 000 - 000 001 - 001 002 - 002 003 - 003 004 - 004 005 - 046 047 - 088 089 - 130 131 - 172 173 - 214 215 - 255
12	12	12	9	VIRTUAL COLOR 2 (Only on Color Bounce) Color Bounce Black Red	000 - 000 001 - 001

STAND	EXT-1	EXT-2	BAS	FUNCTION	DMX Value
22 Ch	41 Ch	170 Ch	19 Ch		
12	12	12	9	Green Blue White Red=0, Green->up, Blue=full, White=0 Red=0, Green=full, Blue->down, White=0 Red->up, Green=full, Blue=0, White=0 Red=full, Green->down, Blue=0, White=0 Red=full, Green=0, Blue->up, White=0 Red->down, Green=0, Blue=full, White=0	002 - 002 003 - 003 004 - 004 005 - 046 047 - 088 089 - 130 131 - 172 173 - 214 215 - 255
13	13	13	10	RED-ALL 0~100%	000 - 255
14	14	14	11	GREEN-ALL 0~100%	000 - 255
15	15	15	12	BLUE-ALL 0~100%	000 - 255
16	16	16	13	WHITE-ALL 0~100%	000 - 255
17	17	17	14	ZOOM small angle -> big angle	000 - 255
18	18	18	15	FOREGROUND No Color Red Green Blue White Yellow Magenta Cian Full Color	000 - 015 016 - 031 032 - 047 048 - 063 064 - 079 080 - 095 096 - 111 112 - 127 128 - 255
19	19	19	16	BACKGROUND No Color Red Green Blue White Yellow Magenta Cian Full Color	000 - 015 016 - 031 032 - 047 048 - 063 064 - 079 080 - 095 096 - 111 112 - 127 128 - 255
20	20	20	17	PATTERNS Static Pattern Dinamic Pattern 1 Dinamic Pattern 2	000 - 031 032 - 039 040 - 047

STAND	EXT-1	EXT-2	BAS	FUNCTION	DMX Value
22 Ch	41 Ch	170 Ch	19 Ch		
20	20	20	17	PATTERNS	
				Dinamic Pattern 3	048 - 055
				Dinamic Pattern 4	056 - 063
				Dinamic Pattern 5	064 - 071
				Dinamic Pattern 6	072 - 079
				Dinamic Pattern 7	080 - 087
				Dinamic Pattern 8	088 - 095
				Dinamic Pattern 9	096 - 103
				Dinamic Pattern 10	104 - 111
				Dinamic Pattern 11	112 - 119
				Dinamic Pattern 12	120 - 127
				Dinamic Pattern 13	128 - 135
				Dinamic Pattern 14	136 - 143
				Dinamic Pattern 15	144 - 151
				Dinamic Pattern 16	152 - 159
				Dinamic Pattern 17	160 - 167
				Dinamic Pattern 18	168 - 175
				Dinamic Pattern 19	176 - 183
				Dinamic Pattern 20	184 - 191
				Dinamic Pattern 21	192 - 199
				Dinamic Pattern 22	200 - 207
				Dinamic Pattern 23	208 - 215
				Dinamic Pattern 24	216 - 223
				Dinamic Pattern 25	224 - 231
				Dinamic Pattern 26	232 - 239
				Dinamic Pattern 27	240 - 247
				Dinamic Pattern 28	248 - 255
21	21	21	18	PATTERN SPEED	
				When pattern is in Static Pattern Mode	
				Scroll	000 - 255
				When pattern is in Dinamic Pattern Mode	
				Stop	000 - 003
				Forward Slow to Fast	004 - 127
				Stop	128 - 131
				Reverse Slow to Fast	132 - 255
	22			PATTERN BYTE 1	
				Direct access to Pattern of LED1 & LED2	000 - 255
				Bit0=LED1 Red Switch	000 - 001
				Bit1=LED1 Green Switch	000 - 002
				Bit2=LED1 Blue Switch	000 - 004
				Bit3=LED1 White Switch	000 - 008
				Bit4=LED2 Red Switch	000 - 016
				Bit5=LED2 Green Switch	000 - 032
				Bit6=LED2 Blue Switch	000 - 064
				Bit7=LED2 White Switch	000 - 128

STAND	EXT-1	EXT-2	BAS	FUNCTION	DMX Value
22 Ch	41 Ch	170 Ch	19 Ch		
	23			PATTERN BYTE 2 Direct access to Pattern of LED3 & LED4	000 - 255
	24			PATTERN BYTE 3 Direct access to Pattern of LED5 & LED6	000 - 255
	25			PATTERN BYTE 4 Direct access to Pattern of LED7 & LED8	000 - 255
	26			PATTERN BYTE 5 Direct access to Pattern of LED9 & LED10	000 - 255
	27			PATTERN BYTE 6 Direct access to Pattern of LED11 & LED12	000 - 255
	28			PATTERN BYTE 7 Direct access to Pattern of LED13 & LED14	000 - 255
	29			PATTERN BYTE 8 Direct access to Pattern of LED15 & LED16	000 - 255
	30			PATTERN BYTE 9 Direct access to Pattern of LED17 & LED18	000 - 255
	31			PATTERN BYTE 10 Direct access to Pattern of LED19 & LED20	000 - 255
	32			PATTERN BYTE 11 Direct access to Pattern of LED21 & LED22	000 - 255
	33			PATTERN BYTE 12 Direct access to Pattern of LED23 & LED24	000 - 255
	34			PATTERN BYTE 13 Direct access to Pattern of LED25 & LED26	000 - 255
	35			PATTERN BYTE 14 Direct access to Pattern of LED27 & LED28	000 - 255
	36			PATTERN BYTE 15 Direct access to Pattern of LED29 & LED30	000 - 255
	37			PATTERN BYTE 16 Direct access to Pattern of LED31 & LED32	000 - 255
	38			PATTERN BYTE 17 Direct access to Pattern of LED33 & LED34	000 - 255
	39			PATTERN BYTE 18 Direct access to Pattern of LED35 & LED36	000 - 255
	40			PATTERN BYTE 19 Direct access to Pattern of LED37	000 - 255
		22		RED PIXEL 1 LED Off LED On	000 - 127 128 - 255
		23		GREEN PIXEL 1 LED Off LED On	000 - 127 128 - 255

STAND	EXT-1	EXT-2	BAS	FUNCTION	DMX
22 Ch	41 Ch	170 Ch	19 Ch		Value
		24		BLUE PIXEL 1 LED Off LED On	000 - 127 128 - 255
		25		WHITE PIXEL 1 LED Off LED On	000 - 127 128 - 255
		
		166		RED PIXEL 37 LED Off LED On	000 - 127 128 - 255
		167		GREEN PIXEL 37 LED Off LED On	000 - 127 128 - 255
		168		BLUE PIXEL 37 LED Off LED On	000 - 127 128 - 255
		169		WHITE PIXEL 37 LED Off LED On	000 - 127 128 - 255
22	41	170	19	CONTROL Normal Reset All Pan&Tilt Reset TBD Other Reset Display Off Display On TBD TBD Hibernation TBD	000 - 007 008 - 015 016 - 023 024 - 047 048 - 055 056 - 063 064 - 071 072 - 079 080 - 087 088 - 095 096 - 255

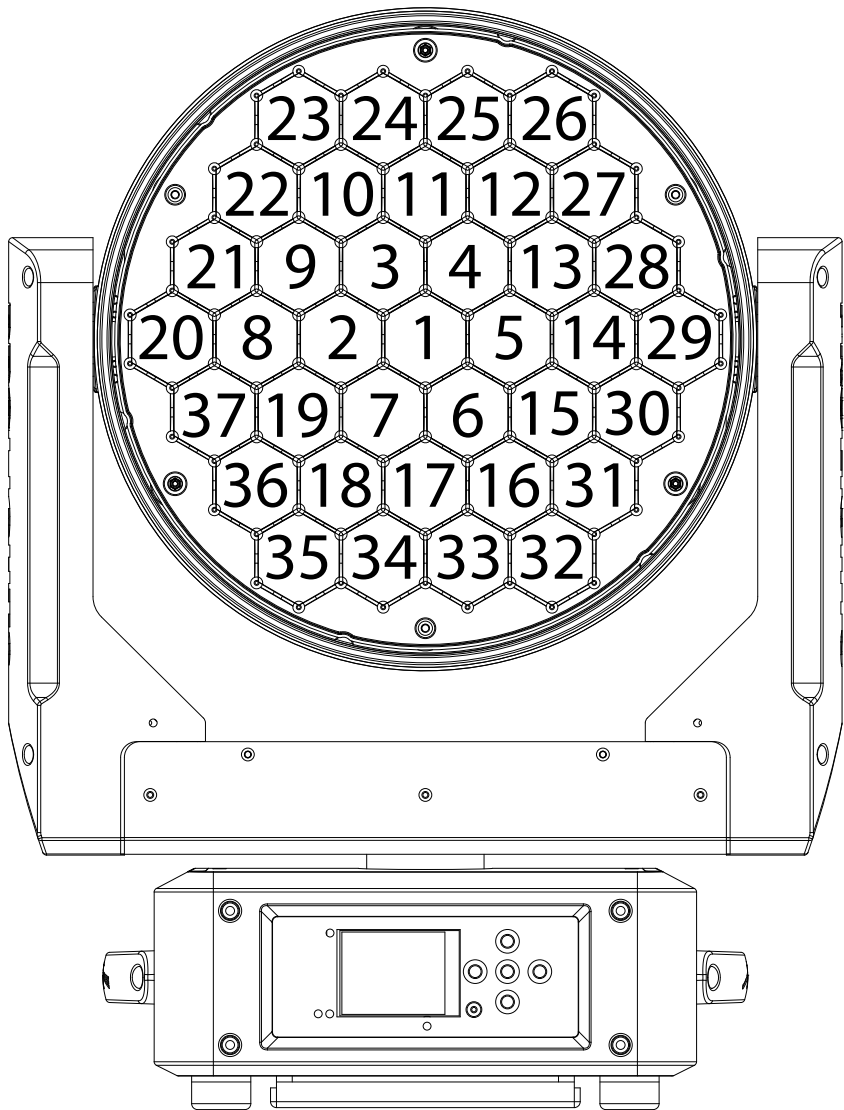*Fig.8 - LEDs numbering*

3.16 WIRELESS CONTROL SETTINGS

To enable wireless control mode, proceed as follows:

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the **Connect** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **Wireless DMX** and press ENTER.
- Press the UP/DOWN and LEFT/RIGHT buttons to select the desired value (**001-512**).
- Press the ENTER key to confirm the setting.

To change the settings of wireless control, proceed as follows:

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the **Set** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **Wireless Set**, and press the ENTER button to enter the next menu.
- Press the UP/DOWN button to select the option proposed and press the ENTER button to confirm your choice.
 - **DMX On Cable** - Disable/enable the DMX signal cable. Select OFF to deactivate or ON to activate the function.
 - **Reset Connect** - Reset the wireless connection of the unit. Select OFF to deactivate or ON to activate the function.
- Press the ENTER button to confirm your choice.
- Press the LEFT button repeatedly to exit the menu and save changes.

3.17 ETHERNET SETTINGS

To enable wireless control mode, proceed as follows:

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the **Connect** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **Art-Net** and press ENTER.
- Press the UP/DOWN and LEFT/RIGHT buttons to select the desired value (**001-491**).
- Press the ENTER key to confirm the setting.

To change the settings of ethernet, proceed as follows:

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the **Set** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **Ethernet Set**, and press the ENTER button to enter the next menu.
- Press the UP/DOWN button to select the option proposed and press the ENTER button to confirm your choice. To configure Artnet set the P Address, IP Mask and Universe values.
- Press the LEFT button repeatedly to exit the menu and save changes.

3.18 FIXTURE SETTINGS

You can change the parameters for the device by following these steps:

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the **Set** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, then select **Movement** and press the ENTER button to enter the next menu.

- Use the UP/DOWN button to select the option proposed and press the ENTER button to confirm the setting.
 - **Pan Reverse** - Pan rotation in the opposite direction. Select OFF to deactivate the function (normal setting); ON to activate the function (Pan Reverse).
 - **Tilt Reverse** - Used for reversing tilt movement. Select OFF to deactivate the function (normal setting); ON to activate the function (Tilt Reverse).
 - **Pan Degree** - Angle of Pan. Select 540° or 630° to set the maximum angle of rotation of the moving head.
 - **Encoders** - Reorganization Pan/Tilt position after rolling away. Select OFF to deactivate or ON to activate the function.
 - **Pan/Tilt Mode** - Type of movement of the moving head. Select Standard to obtain a fast and fluid movement of Pan/Tilt, Smooth for a slower and softer movement of Pan/Tilt.
- Press the ENTER button to confirm your choice.
- Press the LEFT button repeatedly to exit the menu and save changes.

3.19 LAMP SETTINGS

You can change the parameters of the device lamp by following these steps:

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the Lights icon, then press the ENTER button to enter the next menu.
- Press UP/DOWN to scroll through the menu, select one of the following settings and press the ENTER button to display it.
 - **Max Temperature** - Temperature operating limits. This function allows you to set the maximum temperature inside the projector, after which the lamp will automatically turn off. Press the arrow buttons to set the desired temperature (60° -139°). Temperatures of less than 90° C are not critical. We recommend that you enable this feature for temperatures higher than 90°.
 - **Lamp Adjust** - Adjusts the lamp. This function allows you to modify all the parameters of the lamp: **Control, Pan, Pan Fine, Tilt, Tilt Fine, Pan&Tilt Speed, Pan&Tilt Fun, Shutter Fun, Shutter, Dimmer, Color Function, Virtual Color1, Virtual Color2, Red-All, Green-All, Blue-All, White-All, Zoom, Foreground, Background, Pattern, Pattern Speed, Pattern Byte1, Pattern Byte2, Pattern Byte3, Pattern Byte4, Pattern Byte5, Pattern Byte6, Pattern Byte7, Pattern Byte8, ... , Pattern Byte19.** Press the UP/DOWN button to select one of the parameters and press ENTER to edit the value (000-255) through the UP/DOWN button.
- Press the ENTER button to confirm your choice.
- Press the LEFT button repeatedly to exit the menu and save changes.

3.20 DISPLAY SETTINGS

You can change the following parameters related to the display, following the same procedure:

- Press the ENTER button to access the main menu.
- Press the UP / DOWN keys to scroll the menu, select the Setup icon, then press the ENTER button to enter the next menu.
- Press UP / DOWN to scroll through the menu, then select UI Set, and press the ENTER button to enter the next menu.
- Press UP / DOWN to scroll through the menu, and then select one of the following settings for the display and press the ENTER key to display it.
 - **Back Light** - Backlight display Auto Off. This feature allows you to automatically turn off the backlight after a specified time that you can set using the arrow buttons. To have the display always on select **Always On** or set a value of 01-99 min to turn off the display after the amount of time you choose.
 - **Flip Display** - Orientation of the display. This function allows you to rotate the display 180° to get a

better view of the display when the unit is hanging upside down. Select ON to activate or OFF to disable this function.

- **Bright Display** - Backlight Brightness. Use the arrow buttons to select a value from 0-31.
- **Brand Show** - Displaying the brand. This function allows you to show the brand "PROLIGHTS" on the display. Select ON to activate or OFF to disable.
- **Key Lock** - Lock keys. With this function, you can lock the buttons on the control panel. If this function is activated, the keys are automatically locked. To disable or temporarily disable the key lock function, press the buttons in the following order to regain access to menu commands: UP, DOWN, LEFT, RIGHT, ENTER. Select ON to activate or OFF to disable.
- **Language select** - Select the display language. This function allows you to select the preferred menu language.
- Press the ENTER button to confirm your choice.
- Press the LEFT button repeatedly to exit the menu and save changes.

3.21 FIXTURE INFORMATION

To view all the information on the device, proceed as follows:

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the icon Information, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, then select one of the following information and press the ENTER button to display it.
 - **Time Information** - Through the Time Information function you can display the operating time of the projector.
 - **Lamp Info** - Through the Lamp Info function you can display the lamp information.
 - **Temperature** - Through the Temperature function can be displayed the temperature inside the fixture, near the lamp. The temperature can be displayed in degrees Celsius or Fahrenheit.
 - **Fans Speed** - Through the Fans Speed function you can show on display the fan speed present near the lamp. Velocity is expressed in RPM (revolutions per minute).
 - **Channel Value** - Channel Value function can be used to display the values of the channels by which the unit will operate when switched on.
 - **Error Message** - Through the Error Message function can be displayed any errors channels.
 - **Fixture Model** - Through the Fixture Model function can be displayed the model number and manufacturer.
 - **Software Version** - Through Software Version function you can display the currently installed software version.
- Press the LEFT button repeatedly to exit the menu.

3.22 RESET FUNCTIONS

You can start a preset program to restore the selected function:

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the Set icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select Reset and press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, then select the function you wish to reset between **All, Pan&Tilt and Others**.
- Press the ENTER button to confirm your choice and wait for the recovery of the selected function.

3.23 SPECIAL FUNCTIONS

For the DIAMOND37 you can access the following special functions:

No Signal

Select this feature to set the preferred mode of operation to be activated in case the drive is not present no DMX signal input:

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the **Set** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **UI Set**, and press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, then select **No Signal** and press ENTER to confirm.
- Press the UP/DOWN button to select the preferred mode of operation: **Close/Hold/Auto/Music**.
- Press the ENTER button to confirm your choice.
- Press the LEFT button repeatedly to exit the menu and save changes.

Fans Mode

Select this function to set the fans operation mode:

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the **Set** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **UI Set**, and press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, and then select **Fans Mode** and press ENTER to confirm.
- Press the UP/DOWN button to select **Auto Speed/High Speed**, press the ENTER button to confirm your choice.
- Press the LEFT button repeatedly to exit the menu and save changes.

Hibernation

Select this function to activate the standby mode. This function will be activated automatically after a period of inactivity, which is defined by the user. In standby mode, the lamp and all engines will not be fed if no signal is sent. The unit will automatically reset and will return to operation as soon as the DMX signal is sent.

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll through the menu, select the **Set** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **UI Set**, and press the ENTER button to enter the next menu.
- Press the UP/DOWN to scroll through the menu, select **Hibernation** and press ENTER to confirm.
- Select the desired time through the arrow keys or select **Not Hibernation** to disable this function, then press the ENTER button to confirm your choice.
- Press the LEFT button repeatedly to exit the menu and save changes.

Fixture ID and RDM

With this function you can call up various submenus via RDM.

This device is RDM ready. RDM stands for "Remote Device Management" and makes remote control of devices connected to the DMX-bus possible. Manual settings like adjusting the DMX starting address are no longer needed. This is especially useful when the device is installed in a remote area. RDM is integrated

in DMX without influencing the connections. The RDM-data is transmitted via the standard XLR-poles 1 and 2 – new DMX-cables are not necessary. RDM ready and conventional DMX devices can be operated in one DMX line. The RDM protocol sends own packages in the DMX512 data feed and does not influence conventional devices. If DMX splitters are used and RDM control is to be used, these splitters must support RDM. The number and type of RDM parameters depend on the RDM controller (not included) is used.

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the **Set** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, and then select the **Fixture ID** and press the ENTER button to enter the next menu.
- Press UP/DOWN button to scroll through the menu, then select **Password** and press ENTER to confirm.
- Use the arrow keys to enter the password **050** and press ENTER to confirm.
- Once you have entered your password, you can set the **PID Code**, necessary to control the unit with the RDM protocol. Press the UP/DOWN button to scroll through the menu, select PID Code and press ENTER to confirm.
- Use the arrow keys to enter the PID Code, then press the ENTER button to confirm your choice.
- Press the LEFT button repeatedly to exit the menu and save changes.

Calibration

Select this function to calibrate and adjust the wheels of the effects in their correct positions:

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button keys to scroll the menu, select the **Set** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, then select **Calibration** and press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, then select **Password** and press ENTER to confirm.
- Use the arrow keys to enter the password 050 and press ENTER to confirm.
- Once you have entered your password, you can set the values for **Pan, Tilt**. Press the UP/DOWN button to scroll through the menu, select one of the functions mentioned above and press ENTER to confirm your choice.
- Use the arrow buttons to enter the desired value, then press the ENTER button to confirm your choice.
- Press the LEFT button repeatedly to exit the menu and save changes.

Reload Default

Select this function to reset the unit to factory settings:

- Press the ENTER button to access the main menu.
- Press the UP/DOWN button to scroll the menu, select the **Set** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN button to scroll through the menu, select **Reload Default** and press the ENTER button to enter the next menu.
- Press the UP/DOWN button to select the favourite recovery mode **Basic Reload/Program Reload/Private Reload/All Reload**, then press the ENTER button to confirm.
- Press the UP/DOWN button to select **ON** or **OFF**, then press the ENTER button to confirm.

Temperature C/F

Select this function to set the temperature unit measurement shown on the display:

- Press the ENTER button to access the main menu.
- Press the UP/DOWN to scroll through the menu, select the **Set** icon, then press the ENTER button to enter the next menu.
- Press the UP/DOWN to scroll through the menu, select **UI Set**, and press the ENTER button to enter the

next menu.

- Press the UP/DOWN button to scroll through the menu, select **Temperature C/F** and press ENTER to confirm.
- Press the UP/DOWN button to select the unit of measure **Celsius/Fahrenheit** and press the ENTER button to confirm your choice.
- Press the LEFT button repeatedly to exit the menu and save changes.

- 4 - MAINTENANCE

4.1 MAINTENANCE AND CLEANING THE UNIT

- Make sure the area below the installation place is free from unwanted persons during setup.
- Switch off the unit, unplug the main cable and wait until the unit has cooled down.
- All screws used for installing the device and any of its parts should be tightly fastened and should not be corroded.
- Housings, fixations and installation spots (ceiling, trusses, suspensions) should be totally free from any deformation.
- When the lens is visibly damaged due to cracks or deep scratches, it must be replaced.
- The main cables must be in impeccable condition and should be replaced immediately even when a small problem is detected.
- In order to protect the device from overheating the cooling fans (if any), and ventilation openings should be cleaned monthly.

To ensure optimal operation and performance for a long time it is essential to periodically clean the parts subject to dust and grease deposits. The frequency with which the following operations are to be carried out depends on various factors, such as the amount of the effects and the quality of the working environment (air humidity, presence of dust, salinity, etc.). Use a soft cloth dampened with any detergent liquid for cleaning glass to remove the dirt from the reflectors, from the lenses and filters.

It is recommended that the projector undergoes an annual service by a qualified technician for special maintenance involving at least the following operations:

- General cleaning of internal parts..
- Restoring lubrication of all parts subject to friction, using lubricants specifically.
- General visual check of the internal components, cabling, mechanical parts, etc.
- Electrical, photometric and functional checks; eventual repairs.

Warning: we strongly recommend internal cleaning to be carried out by qualified personnel!

4.2 FUSE REPLACEMENT

1. Disconnect this product from the power outlet.
2. Using a screwdriver, unscrew the fuse holder cap from the housing.
3. Remove the blown fuse and replace with a good fuse of the same type and rating.
4. Screw the fuse holder cap back in place and reconnect power.

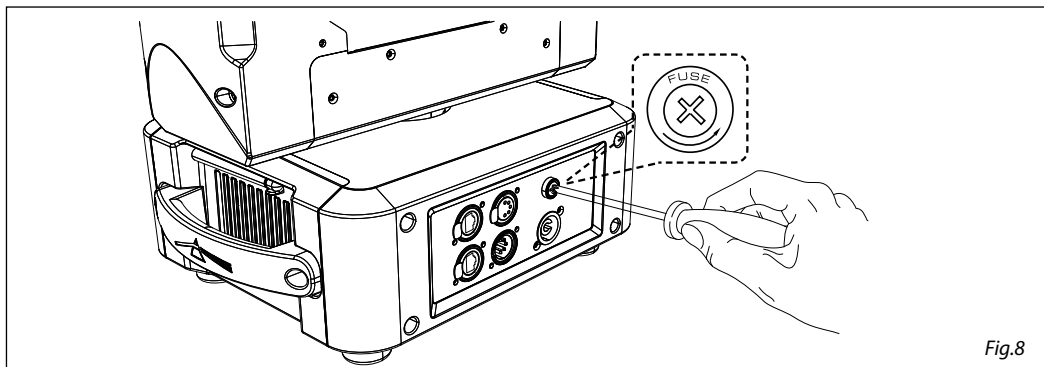


Fig.8

4.3 TROUBLESHOOTING

Problems	Possible causes	Checks and remedies
Fixture does not light up	<ul style="list-style-type: none"> • No mains supply • Dimmer fader set to 0 • All color faders set to 0 • Faulty LED • Faulty LED board 	<ul style="list-style-type: none"> • Check the power supply voltage • Increase the value of the dimmer channels • Increase the value of the color channels • Replace the LED board • Replace the LED board
General low light intensity	<ul style="list-style-type: none"> • Dirty lens assembly • Misaligned lens assembly 	<ul style="list-style-type: none"> • Clean the fixture regularly • Install lens assembly properly
Fixture does not power up	<ul style="list-style-type: none"> • No power • Loose or damaged power cord • Faulty internal power supply 	<ul style="list-style-type: none"> • Check for power on power outlet • Check power cord • Replace internal power supply
Fixture does not respond to DMX	<ul style="list-style-type: none"> • Wrong DMX addressing • Damaged DMX cables • Bouncing signals 	<ul style="list-style-type: none"> • Check control panel and unit addressing • Check DMX cables • Install terminator as suggested

Contact an authorized service center in case of technical problems or not reported in the table can not be resolved by the procedure given in the table.

Music & Lights S.r.l. si riserva ogni diritto di elaborazione in qualsiasi forma delle presenti istruzioni per l'uso.
La riproduzione - anche parziale - per propri scopi commerciali è vietata.

Al fine di migliorare la qualità dei prodotti, la Music&Lights S.r.l. si riserva la facoltà di modificare, in qualunque momento e senza preavviso, le specifiche menzionate nel presente manuale di istruzioni. Tutte le revisioni e gli aggiornamenti sono disponibili nella sezione 'Manuali' sul sito www.musiclights.it

INDICE**Sicurezza**

Avvertenze generali	4
Attenzioni e precauzioni per l'installazione	4

1 Introduzione

1.1 Descrizione	5
1.2 Specifiche tecniche	5
1.3 Elementi di comando e di collegamento	8

2 Installazione

2.1 Montaggio	9
---------------------	---

3 Funzioni e impostazioni

3.1 Funzionamento	10
3.2 Impostazione base	10
3.3 Struttura menu	11
3.4 Modalità Slave Receive	14
3.5 Operazioni in modalità automatica	14
3.6 Modalità Scenes Records	15
3.7 Modalità Musicale	15
3.8 Sensibilità microfono	16
3.9 Collegamento	16
3.10 Modalità DMX	16
3.11 Configurazioni canali DMX	16
3.12 Indirizzamento DMX	17
3.13 Collegamenti della linea DMX	18
3.14 Costruzione del terminatore DMX	18
3.15 Canali DMX	19
3.16 Impostazione controllo wireless	26
3.17 Impostazione ethernet	26
3.18 Impostazioni del proiettore	26
3.19 Impostazioni lampada	27
3.20 Impostazioni display	27
3.21 Informazioni sul dispositivo	28
3.22 Reset delle funzioni	28
3.23 Funzioni speciali	29

4 Manutenzione

4.1 Manutenzione e pulizia del sistema ottico	32
4.2 Sostituzione fusibile	32
4.3 Risoluzione dei problemi	33

Contenuto dell'imballo:

- DIAMOND37
- Staffa di fissaggio
- Cavo di segnale e alimentazione
- Cavo di sicurezza
- Manuale utente




ATTENZIONE! Prima di effettuare qualsiasi operazione con l'unità, leggere con attenzione questo manuale e conservarlo accuratamente per riferimenti futuri. Contiene informazioni importanti riguardo l'installazione, l'uso e la manutenzione dell'unità.



SICUREZZA

Avvertenze generali

- I prodotti a cui questo manuale si riferisce sono conformi alle Direttive della Comunità Europea e pertanto recano la sigla CE.
- Il dispositivo funziona con pericolosa tensione di rete 230V~. Non intervenire mai al suo interno al di fuori delle operazioni descritte nel presente manuale; esiste il pericolo di una scarica elettrica.
- È obbligatorio effettuare il collegamento ad un impianto di alimentazione dotato di un'efficiente messa a terra (apparecchio di Classe I secondo norma EN 60598-1). Si raccomanda, inoltre, di proteggere le linee di alimentazione delle unità dai contatti indiretti e/o cortocircuiti verso massa tramite l'uso di interruttori differenziali opportunamente dimensionati.
- Le operazioni di collegamento alla rete di distribuzione dell'energia elettrica devono essere effettuate da un installatore elettrico qualificato. Verificare che frequenza e tensione della rete corrispondono alla frequenza ed alla tensione per cui l'unità è predisposta, indicate sulla targhetta dei dati elettrici.
- L'unità non per uso domestico, solo per uso professionale.
- Evitare di utilizzare l'unità:
 - in luoghi soggetti a vibrazioni, o a possibili urti;
 - in luoghi a temperatura superiore ai 45°C.
- Evitare che nell'unità penetrino liquidi infiammabili, acqua o oggetti metallici.
- Non smontare e non apportare modifiche all'unità.
- Tutti gli interventi devono essere sempre e solo effettuati da personale tecnico qualificato. Rivolgersi al più vicino centro di assistenza tecnica autorizzato.
- Se si desidera eliminare il dispositivo definitivamente, consegnarlo  per lo smaltimento ad un'istituzione locale per il riciclaggio.

Attenzioni e precauzioni per l'installazione

- Se il dispositivo dovesse trovarsi ad operare in condizioni differenti da quelle descritte nel presente manuale, potrebbero verificarsi dei danni; in tal caso la garanzia verrebbe a decadere. Inoltre, ogni altra operazione potrebbe provocare cortocircuiti, incendi, scosse elettriche, rotture etc.
- Prima di iniziare qualsiasi operazione di manutenzione o pulizia sull'unità togliere la tensione dalla rete di alimentazione.
- È assolutamente necessario proteggere l'unità per mezzo di una fune di sicurezza. Nell'eseguire qualsiasi intervento attenersi scrupolosamente a tutte le normative (in materia di sicurezza) vigenti nel paese di utilizzo.
- Questo prodotto è solo per uso interno.
- La distanza minima tra il proiettore e le pareti circostanti deve essere superiore a 50 cm e non devono essere ostruite, in nessun caso, le aperture di aerazione.
- Installare l'unità in un luogo ben ventilato.
- Mantenere i materiali infiammabili ad una distanza di sicurezza dall'unità.
- La temperatura massima raggiungibile sulla superficie esterna dell'unità, in condizioni di regime termico, è elevata. Dopo lo spegnimento, attendere 15 minuti per il raffreddamento.
- I filtri, le lenti o gli schermi ultravioletti se danneggiati possono limitare la loro efficienza.
- I LED devono essere sostituiti se danneggiati o termicamente deformati.
- Non guardare direttamente il fascio luminoso. Tenete presente che i veloci cambi di luce possono provocare attacchi d'epilessia presso persone fotosensibili o epilettiche.

- 1 - INTRODUZIONE

1.1 DESCRIZIONE

DIAMOND37 è il primo proiettore ibrido Prolights ad offrire la tecnologia WBFX. Il concept WBFX di DIAMOND37 inaugura un nuovo significato di versatilità offrendo tre modalità di utilizzo a bordo del medesimo proiettore: Washlight ad alta luminosità ed intellegibilità cromatica, Beam dal fascio parallelo e denso, uno straordinario generatore FX; rivelandosi uno strumento volto alla creatività dei light-designer.

DIAMOND37 è equipaggiato con sorgente luminosa composta di 37x15W LED Osram Ostar RGBW/FullColor (1A) ed è tra i proiettori LED più luminosi della sua categoria, offrendo un rapporto lm/W tra i più alti sul mercato, grazie alla combinazione di LED ad alte performance, un gruppo ottico innovativo e l'applicazione delle più avanzate tecnologie di raffreddamento a liquido e gestione dello stadio di alimentazione presenti sul mercato.

Il sistema ottico Fast-Zoom con rapporto 1:11 riproduce un fascio variabile nel range 6°-66°, rimanendo uniforme nell'intera escursione e permettendo applicazioni sia in ambienti indoor come studi TV e music-hall che in ampi spazi outdoor come stadi ed arene.

La modalità "Wash-light" esprime un sistema di calibrazione colore avanzato ed una distribuzione omogenea dell'output su tutta la superficie di emissione, sfruttando la tecnologia reflex con colori premiscelati all'interno di canali ottici. La modalità "Beam" entra in azione quando DIAMOND37 è impiegato con zoom a 6°, riproducendo un fascio di luce parallelo per creare effetti a mezz'aria.

La modalità "FX" è ottenuta mediante la combinazione delle lenti a nido d'ape senza interspazi per potenziare l'interpolazione dei LED, controllo pixel di ogni singola sorgente LED e l'avanzato software a bordo per la generazione di effetti. DIAMOND37 è dotato di opzioni multiple di controllo tra cui il DMX, Art-Net e Wireless DMX (opzionale); è controllabile in diverse modalità DMX che offrono una vasta gamma di pixel macro statiche e dinamiche gestibili su livelli multipli e personalizzabili in frequenza, colore ed intensità, anche in modalità con numero ridotto di canali. L'estrema velocità e precisione nei movimenti è garantita dalla struttura del telaio ultra-leggero e dall'impiego di motori speciali, rendendolo comparabile alla velocità degli scanner.

Il design elettronico della nuova serie SHINE offre funzionalità avanzate come display a colori LCD ad alta risoluzione con menu multilingua, batteria tampone, RDM, hibernation, color bounce, diagnostica e controllo di temperatura avanzato.

1.2 SPECIFICHE TECNICHE

SORGENTE LUMINOSA

- Sorgente: 37x15W RGBW Osram Ostar LED
- Flusso luminoso: 18000lm
- Lux: (6°) 15530 - (66°) 5200lux @5m
- Durata media sorgente: >50.000 h

OTTICA

- Zoom: 6-66° Motorizzato, Lineare
- Tipo lente: Lenti pianoconvesse con trama a nido d'ape prive di interspa

SISTEMA COLORE

- Color Mixing: RGBW/FC
- CTC: CTC su canale DMX indipendente
- White Presets: 2700~9000K
- Ruota colori: Ruota colori virtuale con preset
- Macros: Pixel Macro con controllo di velocità e intensità

EFFETTI DINAMICI

- Pixel Pattern: Pattern dinamici e statici preprogrammati

- Generatore effetti: Regolazione foreground/background color, index, velocità, verso

CORPO

- Pan Angle: 630°
- Tilt Angle: 265°
- Risoluzione Pan/Tilt: 8/16 bit
- Feedback: Riposizionamento automatico in seguito a spostamenti accidentali
- Corpo: Struttura in alluminio con coperture in policarbonato ad alta resistenza
- Colore: Nero

CONTROLLO

- Protocolli: DMX512, RDM, Art-Net
- Canali DMX: 19/22/41/170ch
- Pixel Control: Controllo Pixel2Pixel
- W-DMX: Integrato, ricevitore ad antenna (2.4 GHz) by Wireless Solution Sweden
- RDM: RDM ready per controllo e impostazioni remote della fixture
- Display: Display a colori LCD ad alta risoluzione
- Upgrade Firmware: Sì, con interfaccia USB-DMX (UPBOX2) non inclusa
- Ibernazione: Attivazione automatica Power Safe Mode in assenza di segnale DMX
- Master/Slave: per il controllo di più unità collegate in catena

ELETTRONICA


- Dimmer: 0~100% lineare, Elettronico
- Strobo/Shutter: 1-25 Hz, elettronico
- Batteria di backup: Batteria tampone per l'accesso al menu anche senza alimentazione
- Temperatura d'esercizio: -10° / 45°
- Flicker: Flicker free

ALIMENTAZIONE

- Power Supply: 100-240V – 50/60Hz
- Potenza assorbita (a 230V): 520W

CARATTERISTICHE FISICHE

- Connessioni di segnale: 5p in/out, RJ45 in/out
- Connessioni di alimentazione: PowerCON TRUE1 in
- IP: 20
- Raffreddamento: Sistema di dissipazione a liquido
- Sospensione e fissaggio: Qualsiasi posizione con supporti omega (inclusi) "quicklock"
- Dimensioni (LxAxP): 420x336x475mm
- Peso: 16kg

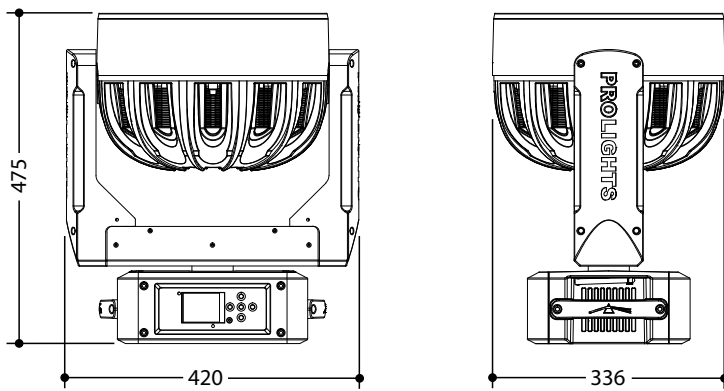

Disegno tecnico




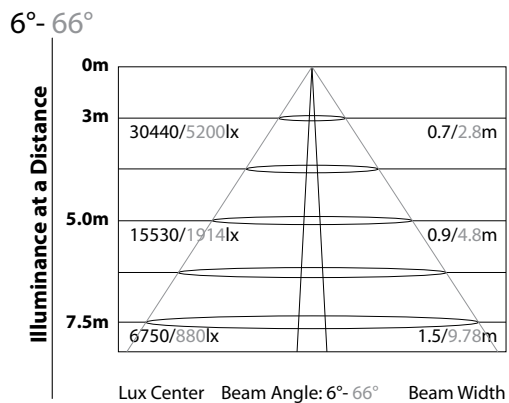


Diagramma di luminosità

Fig.1

1.3 ELEMENTI DI COMANDO E DI COLLEGAMENTO

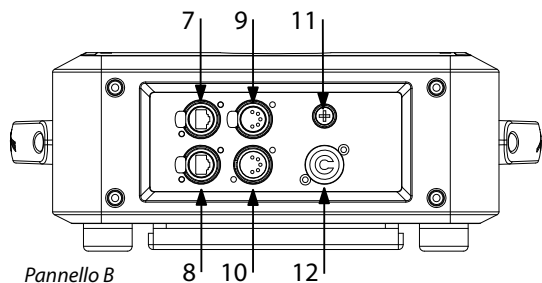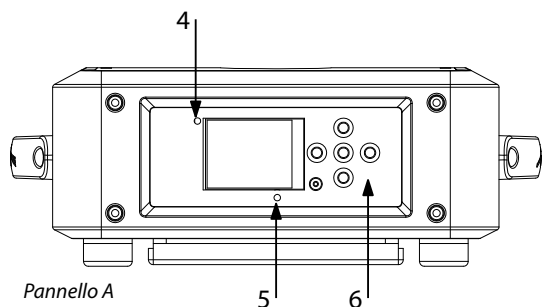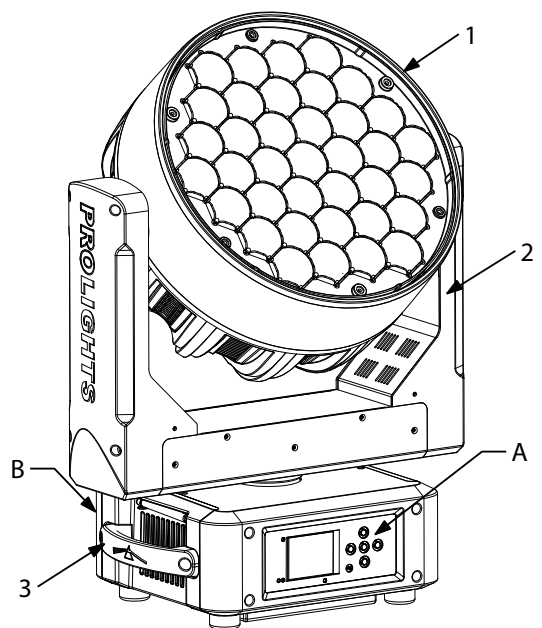

1. TESTA MOBILE
2. BRACCIO GIREVOLE
3. MANIGLIA PER TRASPORTO
4. INDICATORE LED "W-DMX"
5. MICROFONO
6. PANNELLO DI CONTROLLO con display LCD e 5 pulsanti per l'accesso e gestione delle diverse funzioni.
7. CONNETTORI EtherCON segnale IN/OUT
8. CONNETTORI EtherCON segnale IN/OUT
9. DMX OUT (XLR a 5 poli):
1 = massa, 2 = DMX -, 3 = DMX +, 4 N/C, 5 N/C
10. DMX IN (XLR a 5 poli):
1 = massa, 2 = DMX -, 3 = DMX +, 4 N/C, 5 N/C
11. POWER IN (PowerCON IN): per il collegamento ad una presa di rete (100-240V~/50-60Hz) tramite il cavo rete in dotazione.
12. PORTAFUSIBILE: sostituire un fusibile difettoso solo con uno dello stesso tipo.

Fig.2

- 2 - INSTALLAZIONE

2.1 MONTAGGIO

Il DIAMOND37 può essere collocato su un piano solido. Inoltre, grazie ai fori di fissaggio, l'unità può essere montata anche a testa in giù, su una traversa (fig.3). Per il fissaggio occorrono dei supporti robusti per il montaggio. Come si vede nell'illustrazione, i perni del sistema di aggancio rapido, dei supporti omega, sono da inserire nelle apposite sedi della piastra dove vengono bloccati con una rotazione in senso orario (fino all'arresto). Assicurarsi che l'unità sia saldamente fissata al fine di evitare vibrazioni e scivolamenti durante il funzionamento. L'area di collocazione deve avere una stabilità sufficiente e supportare almeno 10 volte il peso dell'unità. Inoltre assicurarsi di rispettare tutte le avvertenze in materia di sicurezza. È assolutamente necessario assicurare il proiettore contro la caduta utilizzando un cavo di sicurezza: in particolare collegare il cavo in un punto adatto in modo che la caduta del proiettore non possa superare i 20 cm.

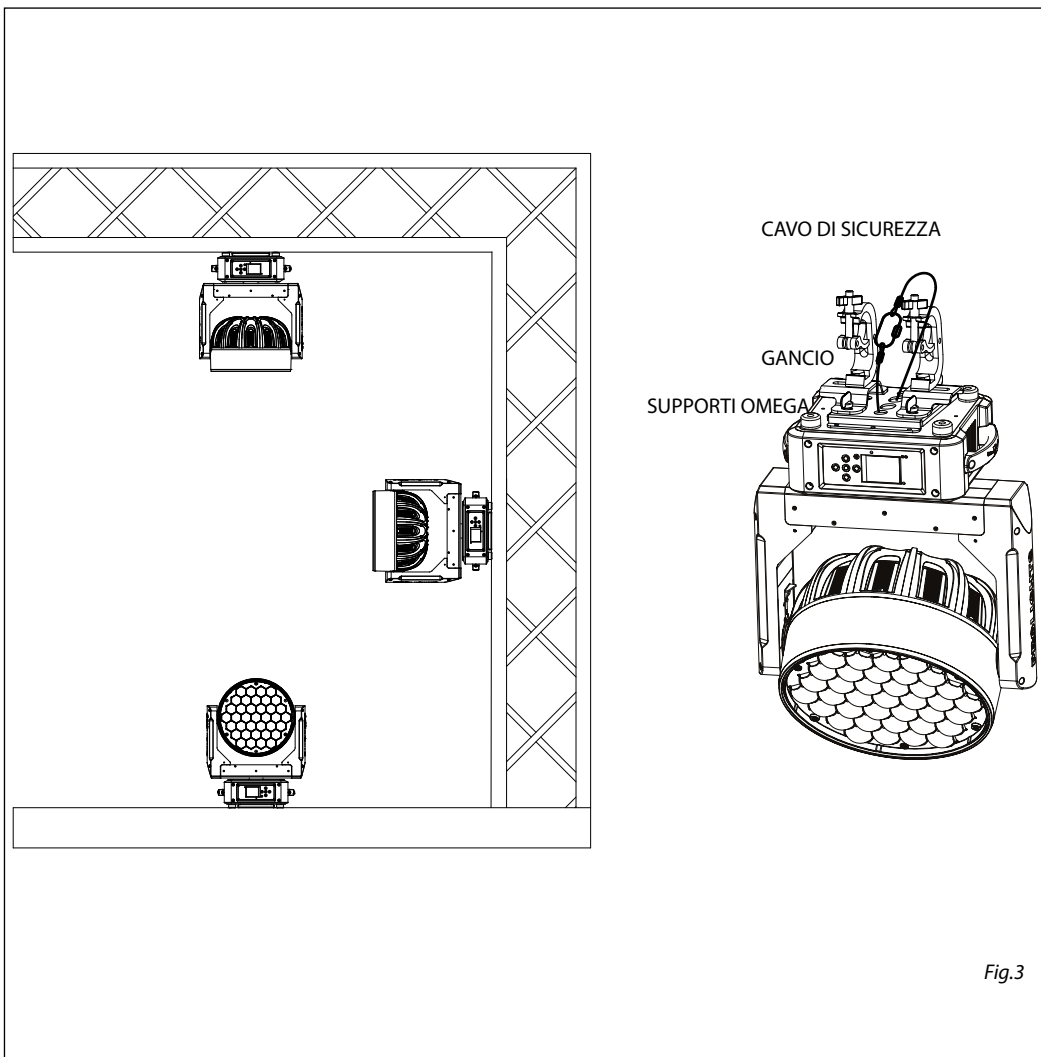


Fig.3


- 3 - FUNZIONI E IMPOSTAZIONI

3.1 FUNZIONAMENTO

Per accendere il DIAMOND37 inserire la spina del cavo di alimentazione in una presa di rete (100-240V~/50-60Hz). La testa mobile e tutti i motori di comando si mettono in una precisa posizione di partenza. Poco dopo l'unità è pronta. Per spegnere il DIAMOND37, staccare la spina dalla presa di rete. Per maggiore comodità è consigliabile collegare l'unità con una presa comandata da un interruttore.

3.2 IMPOSTAZIONE BASE

Il DIAMOND37 dispone di un display LCD e di 5 pulsanti per l'accesso alle funzioni del pannello di controllo e la loro gestione (fig.4).

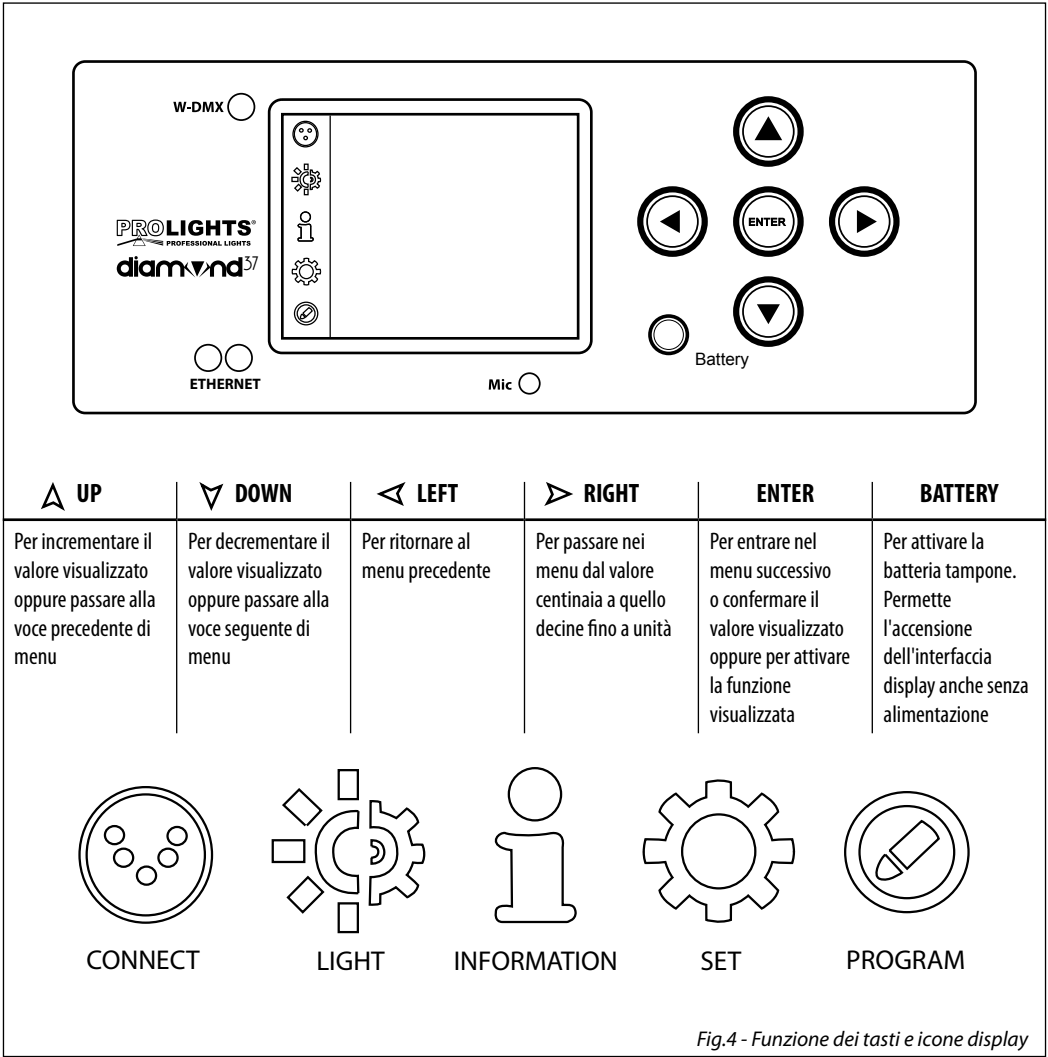

3.3 STRUTTURA MENU

MENU			
1	Connect	⇒ DMX Address	⇒ Value (1-512)
		Wireless DMX	⇒ Value (1-512)
		Art-Net	⇒ Value (1-491)
2	Light	⇒ Max Temperature	⇒ Value (60°-139° C)
		Lamp Adjust	⇒ Control
			⇒ Value (000-255)
		Pan	⇒ Value (000-255)
		Pan Fine	⇒ Value (000-255)
		Tilt	⇒ Value (000-255)
		Tilt Fine	⇒ Value (000-255)
		Pan&Tilt Speed	⇒ Value (000-255)
		Pan&Tilt Fun	⇒ Value (000-255)
		Shutter Fun	⇒ Value (000-255)
		Shutter	⇒ Value (000-255)
		Dimmer	⇒ Value (000-255)
		Color Function	⇒ Value (000-255)
		Virtual Color1	⇒ Value (000-255)
		Virtual Color2	⇒ Value (000-255)
		Red-All	⇒ Value (000-255)
		Green-All	⇒ Value (000-255)
		Blue-All	⇒ Value (000-255)
		White-All	⇒ Value (000-255)
		Zoom	⇒ Value (000-255)
		Foreground	⇒ Value (000-255)
		Background	⇒ Value (000-255)
		Pattern	⇒ Value (000-255)
		Pattern Speed	⇒ Value (000-255)
		Pattern Byte 1	⇒ Value (000-255)
		Pattern Byte 2	⇒ Value (000-255)
		Pattern Byte 3	⇒ Value (000-255)
		Pattern Byte 4	⇒ Value (000-255)
		Pattern Byte 5	⇒ Value (000-255)
		Pattern Byte 7	⇒ Value (000-255)
		Pattern Byte 8	⇒ Value (000-255)
		Pattern Byte 9	⇒ Value (000-255)

Pattern Byte 10	⇒	Value (000-255)
Pattern Byte 11	⇒	Value (000-255)
Pattern Byte 12	⇒	Value (000-255)
Pattern Byte 13	⇒	Value (000-255)
Pattern Byte 14	⇒	Value (000-255)
Pattern Byte 15	⇒	Value (000-255)
Pattern Byte 16	⇒	Value (000-255)
Pattern Byte 17	⇒	Value (000-255)
Pattern Byte 18	⇒	Value (000-255)
Pattern Byte 19	⇒	Value (000-255)

3	Information	⇒	Time Info. Temperature Fans Speed Channel Value Error Message Fixture Model Software Ver.
---	--------------------	---	---

4	Set	⇒	Reset	⇒	All Pan & Tilt Others
			Movement	⇒	Pan Reverse ⇒ ON/OFF Tilt Reverse ⇒ ON/OFF Pan Degree ⇒ 540/630 Encoders ⇒ ON/OFF Pan/Tilt Mode ⇒ Standard/Smooth
			UI Set	⇒	Mic Sens. ⇒ Value (00-99%) No Signal ⇒ Close/Hold/Auto/Music Temperature C/F ⇒ Celsius/Fahrenheit Fans Mode ⇒ Auto Speed/High Speed Zoom Mode ⇒ Mode 1, Mode 2 Hibernation ⇒ Not Hibernation/Min (01-99) Backlight ⇒ Always On/Min (01-99) Flip Display ⇒ ON/OFF Display Bright ⇒ Value (00-31) Brand Show ⇒ ON/OFF Key Lock ⇒ ON/OFF Language ⇒ EN/FR/SP...

Users	⇒	User Mode	⇒	Standard/Extended1/Extended2/Basic/...
		Edit User	⇒	Max Channel/Control/Pan/Pan Fine/Tilt/Tilt Fine...
Fixture Set	⇒	Theatre Mode	⇒	On/Off
		Frequency	⇒	60Hz... (1200Hz)
Calibration	⇒	Password	⇒	050 (insert to unlock the following settings)
		Pan	⇒	Value (-128-127)
		Tilt	⇒	Value (-128-127)
		Red-All	⇒	Value (-128-127)
		Green-All	⇒	Value (-128-127)
		Blue-All	⇒	Value (-128-127)
Fixture ID	⇒	Name	⇒	Fixture ID Name
		Rdm Mode	⇒	Mode 1, Mode 2
		Password	⇒	050 (insert to unlock the following settings)
		PID Code	⇒	00001
Wireless Set	⇒	DMX On Cable	⇒	ON/OFF
		Reset Connect	⇒	ON/OFF
Ethernet Set	⇒	IP Address	⇒	X.X.X.X
		IP Mask	⇒	X.X.X.X
		Universe	⇒	00000
Reload Default	⇒	Basic Reload	⇒	ON/OFF
		Program Reload	⇒	ON/OFF
		Password	⇒	050 (insert to unlock the following settings)
		Private Reload	⇒	ON/OFF
		All Reload	⇒	ON/OFF

5	Program	⇒	Play	⇒	DMX Receive		
					Slave Receive	⇒	Part 1 Receive/Part 2 Receive/Part 3 Receive
					Sequence	⇒	Alone/Master
					Music	⇒	Alone/Master
		⇒	Select Chase	⇒	Chase Part 1	⇒	Chase 1 - Chase 8
					Chase Part 2	⇒	Chase 1 - Chase 8
					Chase Part 3	⇒	Chase 1 - Chase 8
		⇒	Edit Chases	⇒	Edit Chase 1	⇒	Chase Test/ Step 1 - Step 64
					Edit Chase ...	⇒	Chase Test/ Step 1 - Step 64
					Edit Chase 8	⇒	Chase Test/ Step 1 - Step 64
		⇒	Edit Scenes	⇒	Edit Scenes 001	⇒	Control/.../Fade Time/Scene Time/External Input
					Edit Scenes ...	⇒	Control/Pan/Pan Fine/Tilt/Tilt Fine...
					Edit Scenes 250	⇒	Control/Pan/Pan Fine/Tilt/Tilt Fine...
		⇒	Scenes Record	⇒	Sc XX - Sc XX		

3.4 MODALITÀ SLAVE RECEIVE

Questa modalità consente di collegare in linea più unità senza un controller. La prima unità sarà impostata come Master e le altre funzioneranno come Slave con lo stesso effetto.

Inoltre, un'unità Master DIAMOND37 può inviare fino a 3 diversi gruppi di dati alle unità Slave, ossia può guidare 3 diverse unità Slave che eseguono 3 parti di programma differenti. L'unità Master invia le 3 parti del programma in un loop continuo mentre le unità Slave riceveranno i dati dall'unità Master in base al gruppo cui l'unità slave è stato assegnato.

Se ad esempio un'unità Slave è impostata su **Part 1 Receive**, l'unità Master invierà all'unità Slave il programma automatico **Chase Part 1**; se impostata su **Part 2 Receive**, l'unità Slave riceverà **Chase Part 2** dall'unità Master.

Per impostare l'unità come Slave procedere come segue:

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Program**, quindi premere il tasto ENTER per accedere al menu successivo **Play**.
- Premere il tasto ENTER e selezionare **Slave Receive** con il tasto UP/DOWN, quindi confermare la scelta con il tasto ENTER.
- Premere il tasto UP/DOWN per selezionare le diverse modalità di funzionamento **Part 1 Receive/Part 2 Receive/Part 3 Receive**, quindi premere il tasto ENTER per confermare la scelta.
- Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

Sull'unità master selezionare il programma desiderato come indicato al paragrafo 3.5.

Servirsi dei connettori DMX del DIAMOND37 e di un cavo XLR per formare una catena di unità. In certe condizioni e lunghezze si consiglia di effettuare una terminazione come mostrato a pagina 19.

3.5 OPERAZIONI IN MODALITÀ AUTOMATICA

L'unità può svolgere il suo programma Show autonomamente. Prima di inviare un programma automatico in esecuzione è necessario impostare l'unità come Master/Alone:

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Program**, quindi premere il tasto ENTER per accedere al menu successivo **Play**.
- Premere il tasto ENTER e selezionare **Sequence** con il tasto UP/DOWN, quindi confermare la scelta con il tasto ENTER.
- Premere il tasto UP/DOWN per selezionare la modalità di funzionamento:
 - **Master**, se l'unità è collegata in serie ad altre unità ed essa svolge la funzione di Master;
 - **Alone**, se l'unità non è collegata ad altre unità.
- Premere il tasto ENTER per confermare la scelta.
- Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

L'unità entrerà in modalità automatica mandando in esecuzione il programma automatico.

Select Chase

La funzione Select Chase permette di scegliere il programma automatico da mandare in esecuzione.

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Program**, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **Select Chase** e premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **Chase Part 1/Chase Part 2/Chase Part 3** e premere il tasto ENTER per confermare la scelta.
- Premere il tasto UP/DOWN per selezionare il **Chase1 - Chase8** preferito, quindi premere il tasto ENTER.
- Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

Edit Chases

La funzione **Edit Chases** permette di creare show automatici preprogrammati.

I programmi automatici **Chase Part1/2/3** sono suddivisi ognuno in **Chase1-Chase8**. Ogni Chase può essere composto da **1-64 step** che possono essere configurati attraverso la seguente procedura:

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Program**, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **Edit Chases** e premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **Edit Chase 1 - Edit Chase 8**, quindi premere il tasto ENTER per confermare.
- Premere il tasto UP/DOWN per selezionare lo **Step 01 - Step 64** desiderato, quindi premere il tasto ENTER.
- Premere il tasto UP/DOWN per selezionare la **Scene** desiderata da impostare per lo Step scelto, quindi premere ENTER per confermare.
- Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

Edit Scenes

La funzione **Edit Scenes** permette di creare scene individuali da includere negli Step delle Chase.

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Program**, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **Edit Scenes** e premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **Edit Scene 001 - Edit Scene 250**, quindi premere il tasto ENTER.
- Premere il tasto UP/DOWN per selezionare la funzione desiderata che si vuole modificare (Control, Pan, Tilt, ecc.), quindi premere il tasto ENTER.
- Premere il tasto UP/DOWN per modificare il valore della funzione, quindi premere il tasto ENTER per confermare.
- Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

3.6 MODALITÀ SCENES RECORD

DIAMOND37 è dotato di un registratore DMX integrato attraverso il quale è possibile trasmettere, dal vostro Controllor DMX al dispositivo, le scene programmate. Procedere come segue per memorizzare la sequenza di scene da mandare in esecuzione.

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Program**, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **Scenes Record** e premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per regolare la scena di inizio e quella di fine da inserire nel programma automatico, quindi premere il tasto ENTER per confermare.
- Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

Quando si richiamano le scene dal controllor, verranno automaticamente trasmesse al dispositivo.

3.7 MODALITÀ MUSICALE

Nella modalità musicale l'unità può essere comandata tramite la musica. In presenza di segnale musicale, con un determinato ritmo nei bassi e con volume sufficiente, tramite il microfono interno si comanda il senso e la velocità di rotazione nonché il cambio di colore. Se il comando musica non dovesse funzionare

perfettamente, aumentare il volume o ridurre la distanza fra sorgente audio e l'unità oppure alternativamente aumentare la sensibilità del microfono.

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Program**, quindi premere il tasto ENTER per accedere al menu successivo **Play**.
- Premere il tasto ENTER e selezionare **Music** con il tasto UP/DOWN, quindi confermare la scelta con il tasto ENTER.
- Premere il tasto UP/DOWN per selezionare la modalità di funzionamento:
 - **Master**, se l'unità è collegata in serie ad altre unità ed essa svolge la funzione di Master;
 - **Alone**, se l'unità non è collegata ad altre unità.
- Premere il tasto ENTER per confermare la scelta.
- Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

L'unità entrerà in modalità musicale mandando in esecuzione un programma automatico a ritmo di musica.

3.8 SENSIBILITÀ MICROFONO

Selezionare questa funzione per impostare il valore della sensibilità del microfono per il controllo tramite comando musicale:

- Premere il tasto ENTER per accedere al menu principale.
- Premere i tasti UP/DOWN per selezionare l'icona **Set**, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **UI Set** e premere il tasto ENTER per accedere al menu successivo **Mic Sens**.
- Premere il tasto ENTER e regolare il livello di sensibilità del microfono con il tasto UP/DOWN. Premere il tasto ENTER per confermare.
- Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

3.9 COLLEGAMENTO

Si possono collegare più unità affinché tutte le unità secondarie abbiano lo stesso effetto luce dell'unità principale (Master).

1. Collegare l'uscita DMX OUT dell'unità principale con l'ingresso DMX IN della prima unità secondaria servendosi di un cavo XLR a 5 poli.
2. Collegare l'uscita DMX OUT della prima unità secondaria con l'ingresso DMX IN della seconda unità secondaria ecc.

3.10 MODALITÀ DMX

Per entrare nella modalità DMX procedere nel seguente modo:

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Connect**, quindi premere il tasto ENTER per accedere al menu successivo **DMX Address**. Premere il tasto ENTER.
- Impostare con i tasti direzionali il valore desiderato (**001-512**). Premere il tasto ENTER per confermare.
- Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

3.11 CONFIGURAZIONI CANALI DMX

DIAMOND37 dispone di 4 configurazioni dei canali DMX a cui si può accedere dal pannello di controllo.

- Premere il tasto ENTER per accedere al menu principale.

- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Set**, quindi premere il tasto ENTER per accedere al menu successivo.
 - Premere il tasto UP/DOWN per selezionare **Users** e premere il tasto ENTER per accedere al menu successivo **User Mode**. Premere il tasto ENTER per confermare la scelta.
 - Attraverso il tasto UP/DOWN selezionare la configurazione dei canali DMX desiderata (**Standard**, **Extended1**, **Extended2**, **Basic**, **User**), quindi premere il tasto ENTER per confermare la scelta.
 - Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.
- Le tabelle a pagina 20 indicano le modalità di funzionamento e i relativi valori DMX. Come interfaccia DMX, l'unità possiede dei contatti XLR a 5 poli.

Edit User

La funzione **Edit User**, presente nello stesso menu, permette di creare un profilo di funzionamento personalizzato, variando a proprio piacimento i parametri delle varie funzioni (Control, Pan, Tilt, ecc). Una volta creato il proprio profilo personalizzato, è possibile utilizzarlo selezionando la modalità **USER** come descritto in precedenza.

3.12 INDIRIZZAMENTO DMX

Per il funzionamento tramite un'unità di comando luce con protocollo DMX512, è sufficiente collegare DIAMOND37 al controller. Il proiettore dispone di configurazione dei canali DMX a cui si può accedere dal pannello di controllo. Per poter comandare DIAMOND37 con un'unità di comando luce, occorre impostare l'indirizzo di start DMX per il primo canale DMX. Se, per esempio, sull'unità di comando è previsto l'indirizzo 33 per comandare la funzione del primo canale DMX, si deve impostare sul DIAMOND37 l'indirizzo di start 33. Le altre funzioni del pannello saranno assegnate automaticamente agli indirizzi successivi. Segue un esempio con indirizzo 33 di start:

Numero canali DMX	Indirizzo di start (esempio)	Indirizzo DMX occupati	Prossimo indirizzo di start possibile per unità n°1	Prossimo indirizzo di start possibile per unità n°2	Prossimo indirizzo di start possibile per unità n°3
19	33	33-51	52	71	90
22	33	33-54	55	77	99
41	33	33-73	74	115	156


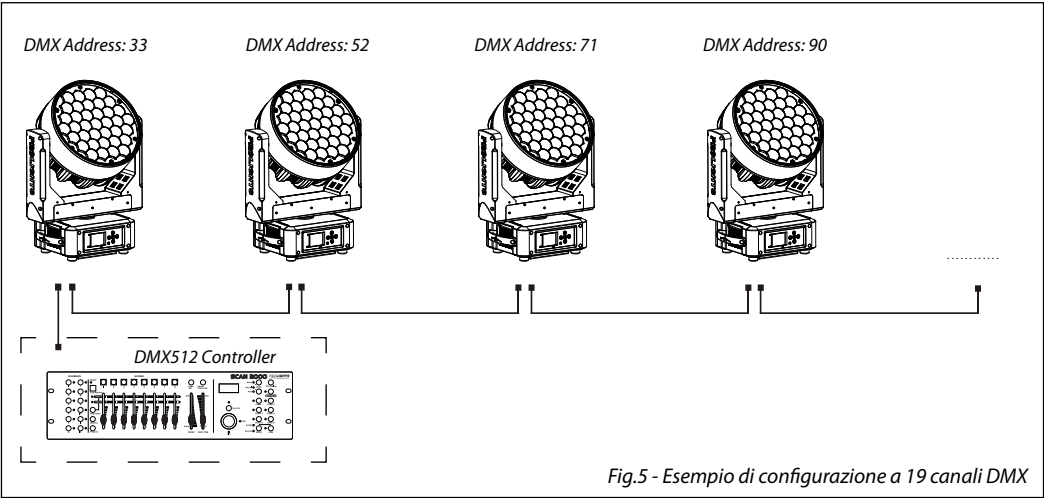


Fig.5 - Esempio di configurazione a 19 canali DMX

3.13 COLLEGAMENTI DELLA LINEA DMX

La connessione DMX è realizzata con connettori standard XLR. Utilizzare cavi schermati, 2 poli ritorti, con impedenza 120Ω e bassa capacità.

Per il collegamento fare riferimento allo schema di connessione riportato di seguito:

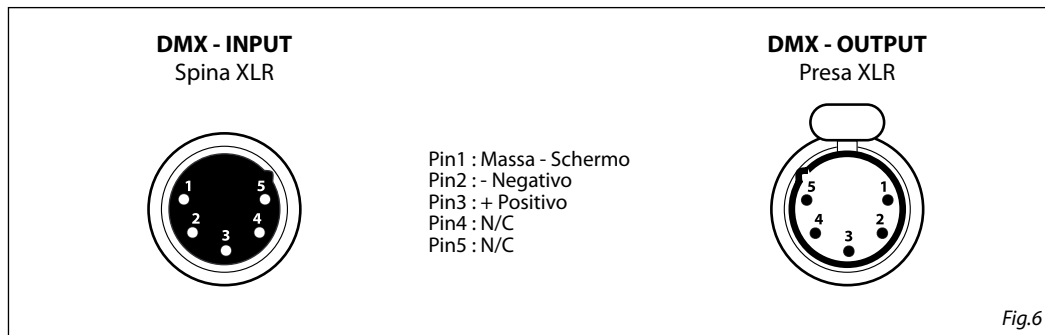

ATTENZIONE

La parte schermata del cavo (calza) non deve mai essere collegata alla terra dell'impianto; ciò comporterebbe malfunzionamenti delle unità e dei controller.

Per passaggi lunghi può essere necessario l'inserimento di un amplificatore DMX.


In tal caso, è sconsigliato utilizzare nei collegamenti cavo bilanciato microfonico poiché non è in grado di trasmettere in modo affidabile i dati di controllo DMX.

- Collegare l'uscita DMX del controller con l'ingresso DMX della prima unità;
- Collegare, quindi, l'uscita DMX con l'ingresso DMX della successiva unità; l'uscita di quest'ultima con l'ingresso di quella successiva e via dicendo finché tutte le unità sono collegate formando una catena.
- Per installazioni in cui il cavo di segnale deve percorrere lunghe distanze è consigliato inserire sull'ultima unità una terminazione DMX.

3.14 COSTRUZIONE DEL TERMINATORE DMX

La terminazione evita la probabilità che il segnale DMX 512, una volta raggiunta la fine della linea stessa venga riflesso indietro lungo il cavo, provocando, in certe condizioni e lunghezze, la sua sovrapposizione al segnale originale e la sua cancellazione.

La terminazione deve essere effettuata, sull'ultima unità della catena, con connettori XLR a 3/5 pin, saldando una resistenza di 120Ω (minimo 1/4W) tra i terminali 2 e 3, così come indicato in figura.

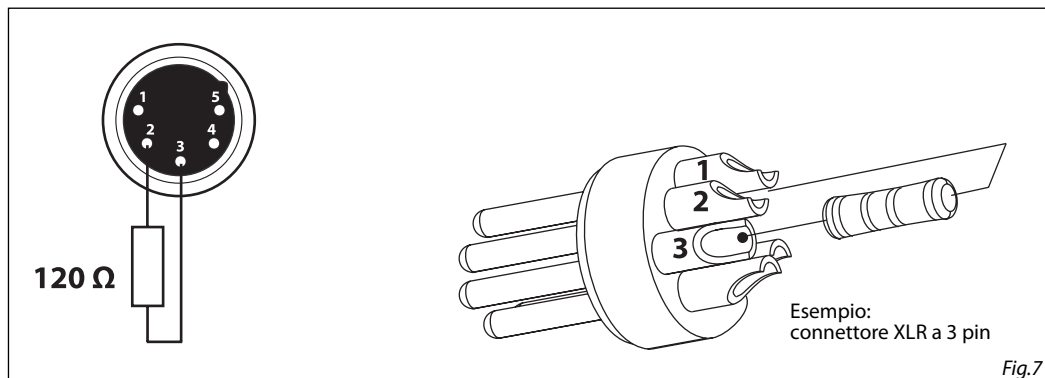

3.15 CANALI DMX

STAND	EXT-1	EXT-2	BAS	FUNCTION	DMX Value
22 Ch	41 Ch	170 Ch	19 Ch		
1	1	1	1	PAN 0~100%	000 - 255
2	2	2		PAN FINE 0~100%	000 - 255
3	3	3	2	TILT 0~100%	000 - 255
4	4	4		TILT FINE 0~100%	000 - 255
5	5	5	3	MOVEMENT SPEED Fast to slow	000 - 255
6	6	6		MOVEMENT FUNCTION Normal Movement with backout TBD	000 - 015 016 - 031 032 - 255
7	7	7	4	SHUTTER FUNCTION Normal Shutter Functions Pulse-effect Forward Pulse-effect Reverse Random strobe TBD	000 - 015 016 - 031 032 - 047 048 - 063 064 - 255
8	8	8	5	SHUTTER Normal Shutter Functions Close Strobe Rate (slow to fast) Open Pulse-effect Forward Close Strobe Rate (slow to fast) Open Pulse-effect Reverse Close Strobe Rate (slow to fast) Open Random Strobe Close Strobe Rate (slow to fast) Open Shutter closed Shutter closed No function (shutter open) Strobe effect slow to fast	000 - 031 032 - 223 224 - 255 000 - 031 032 - 223 224 - 255 000 - 031 032 - 223 224 - 255 000 - 031 032 - 223 224 - 255 000 - 031 032 - 063 064 - 095

STAND	EXT-1	EXT-2	BAS	FUNCTION	DMX Value
22 Ch	41 Ch	170 Ch	19 Ch		
8	8	8	5	No function (shutter open) Pulse-effect in sequences No function (shutter open) Random strobe effect slow to fast No function (shutter open)	096 - 127 128 - 159 160 - 191 192 - 223 224 - 255
9	9	9	6	DIMMER Dimmer (close to open)	000 - 255
10	10	10	7	VIRTUAL COLOR FUNCTION On Function CTC Function Forward Spin Reverse Spin Continuous Color Bounce TBD	000 - 015 016 - 031 032 - 047 048 - 063 064 - 079 080 - 111 112 - 255
11	11	11	8	VIRTUAL COLOR 1 CTC Function Color Temperature Correction 2000K->2700K White 3200K White 4200K White 5600K White 8000K Forward Spin Rainbow Effect (Slow to Fast) Reverse Spin Rainbow Effect (Slow to Fast) Continuous & Color Bounce Black Red Green Blue White Red=0, Green->up, Blue=full, White=0 Red=0, Green=full, Blue->down, White=0 Red->up, Green=full, Blue=0, White=0 Red=full, Green->down, Blue=0, White=0 Red=full, Green=0, Blue->up, White=0 Red->down, Green=0, Blue=full, White=0	000 - 223 224 - 231 232 - 239 240 - 247 248 - 255 000 - 255 000 - 255 000 - 000 001 - 001 002 - 002 003 - 003 004 - 004 005 - 046 047 - 088 089 - 130 131 - 172 173 - 214 215 - 255
12	12	12	9	VIRTUAL COLOR 2 (Only on Color Bounce) Color Bounce Black Red	000 - 000 001 - 001

STAND	EXT-1	EXT-2	BAS	FUNCTION	DMX Value
22 Ch	41 Ch	170 Ch	19 Ch		
12	12	12	9	Green Blue White Red=0, Green->up, Blue=full, White=0 Red=0, Green=full, Blue->down, White=0 Red->up, Green=full, Blue=0, White=0 Red=full, Green->down, Blue=0, White=0 Red=full, Green=0, Blue->up, White=0 Red->down, Green=0, Blue=full, White=0	002 - 002 003 - 003 004 - 004 005 - 046 047 - 088 089 - 130 131 - 172 173 - 214 215 - 255
13	13	13	10	RED-ALL 0~100%	000 - 255
14	14	14	11	GREEN-ALL 0~100%	000 - 255
15	15	15	12	BLUE-ALL 0~100%	000 - 255
16	16	16	13	WHITE-ALL 0~100%	000 - 255
17	17	17	14	ZOOM small angle -> big angle	000 - 255
18	18	18	15	FOREGROUND No Color Red Green Blue White Yellow Magenta Cian Full Color	000 - 015 016 - 031 032 - 047 048 - 063 064 - 079 080 - 095 096 - 111 112 - 127 128 - 255
19	19	19	16	BACKGROUND No Color Red Green Blue White Yellow Magenta Cian Full Color	000 - 015 016 - 031 032 - 047 048 - 063 064 - 079 080 - 095 096 - 111 112 - 127 128 - 255
20	20	20	17	PATTERNS Static Pattern Dinamic Pattern 1 Dinamic Pattern 2	000 - 031 032 - 039 040 - 047

STAND	EXT-1	EXT-2	BAS	FUNCTION	DMX Value
22 Ch	41 Ch	170 Ch	19 Ch		
20	20	20	17	PATTERNS	
				Dinamic Pattern 3	048 - 055
				Dinamic Pattern 4	056 - 063
				Dinamic Pattern 5	064 - 071
				Dinamic Pattern 6	072 - 079
				Dinamic Pattern 7	080 - 087
				Dinamic Pattern 8	088 - 095
				Dinamic Pattern 9	096 - 103
				Dinamic Pattern 10	104 - 111
				Dinamic Pattern 11	112 - 119
				Dinamic Pattern 12	120 - 127
				Dinamic Pattern 13	128 - 135
				Dinamic Pattern 14	136 - 143
				Dinamic Pattern 15	144 - 151
				Dinamic Pattern 16	152 - 159
				Dinamic Pattern 17	160 - 167
				Dinamic Pattern 18	168 - 175
				Dinamic Pattern 19	176 - 183
				Dinamic Pattern 20	184 - 191
				Dinamic Pattern 21	192 - 199
				Dinamic Pattern 22	200 - 207
				Dinamic Pattern 23	208 - 215
				Dinamic Pattern 24	216 - 223
				Dinamic Pattern 25	224 - 231
				Dinamic Pattern 26	232 - 239
				Dinamic Pattern 27	240 - 247
				Dinamic Pattern 28	248 - 255
21	21	21	18	PATTERN SPEED	
				When pattern is in Static Pattern Mode	
				Scroll	000 - 255
				When pattern is in Dinamic Pattern Mode	
				Stop	000 - 003
				Forward Slow to Fast	004 - 127
				Stop	128 - 131
				Reverse Slow to Fast	132 - 255
	22			PATTERN BYTE 1	
				Direct access to Pattern of LED1 & LED2	000 - 255
				Bit0=LED1 Red Switch	000 - 001
				Bit1=LED1 Green Switch	000 - 002
				Bit2=LED1 Blue Switch	000 - 004
				Bit3=LED1 White Switch	000 - 008
				Bit4=LED2 Red Switch	000 - 016
				Bit5=LED2 Green Switch	000 - 032
				Bit6=LED2 Blue Switch	000 - 064
				Bit7=LED2 White Switch	000 - 128

STAND	EXT-1	EXT-2	BAS	FUNCTION	DMX Value
22 Ch	41 Ch	170 Ch	19 Ch		
	23			PATTERN BYTE 2 Direct access to Pattern of LED3 & LED4	000 - 255
	24			PATTERN BYTE 3 Direct access to Pattern of LED5 & LED6	000 - 255
	25			PATTERN BYTE 4 Direct access to Pattern of LED7 & LED8	000 - 255
	26			PATTERN BYTE 5 Direct access to Pattern of LED9 & LED10	000 - 255
	27			PATTERN BYTE 6 Direct access to Pattern of LED11 & LED12	000 - 255
	28			PATTERN BYTE 7 Direct access to Pattern of LED13 & LED14	000 - 255
	29			PATTERN BYTE 8 Direct access to Pattern of LED15 & LED16	000 - 255
	30			PATTERN BYTE 9 Direct access to Pattern of LED17 & LED18	000 - 255
	31			PATTERN BYTE 10 Direct access to Pattern of LED19 & LED20	000 - 255
	32			PATTERN BYTE 11 Direct access to Pattern of LED21 & LED22	000 - 255
	33			PATTERN BYTE 12 Direct access to Pattern of LED23 & LED24	000 - 255
	34			PATTERN BYTE 13 Direct access to Pattern of LED25 & LED26	000 - 255
	35			PATTERN BYTE 14 Direct access to Pattern of LED27 & LED28	000 - 255
	36			PATTERN BYTE 15 Direct access to Pattern of LED29 & LED30	000 - 255
	37			PATTERN BYTE 16 Direct access to Pattern of LED31 & LED32	000 - 255
	38			PATTERN BYTE 17 Direct access to Pattern of LED33 & LED34	000 - 255
	39			PATTERN BYTE 18 Direct access to Pattern of LED35 & LED36	000 - 255
	40			PATTERN BYTE 19 Direct access to Pattern of LED37	000 - 255
		22		RED PIXEL 1 LED Off LED On	000 - 127 128 - 255
		23		GREEN PIXEL 1 LED Off LED On	000 - 127 128 - 255

STAND	EXT-1	EXT-2	BAS	FUNCTION	DMX Value
22 Ch	41 Ch	170 Ch	19 Ch		
		24		BLUE PIXEL 1 LED Off LED On	000 - 127 128 - 255
		25		WHITE PIXEL 1 LED Off LED On	000 - 127 128 - 255
		
		166		RED PIXEL 37 LED Off LED On	000 - 127 128 - 255
		167		GREEN PIXEL 37 LED Off LED On	000 - 127 128 - 255
		168		BLUE PIXEL 37 LED Off LED On	000 - 127 128 - 255
		169		WHITE PIXEL 37 LED Off LED On	000 - 127 128 - 255
22	41	170	19	CONTROL Normal Reset All Pan&Tilt Reset TBD Other Reset Display Off Display On TBD TBD Hibernation TBD	000 - 007 008 - 015 016 - 023 024 - 047 048 - 055 056 - 063 064 - 071 072 - 079 080 - 087 088 - 095 096 - 255

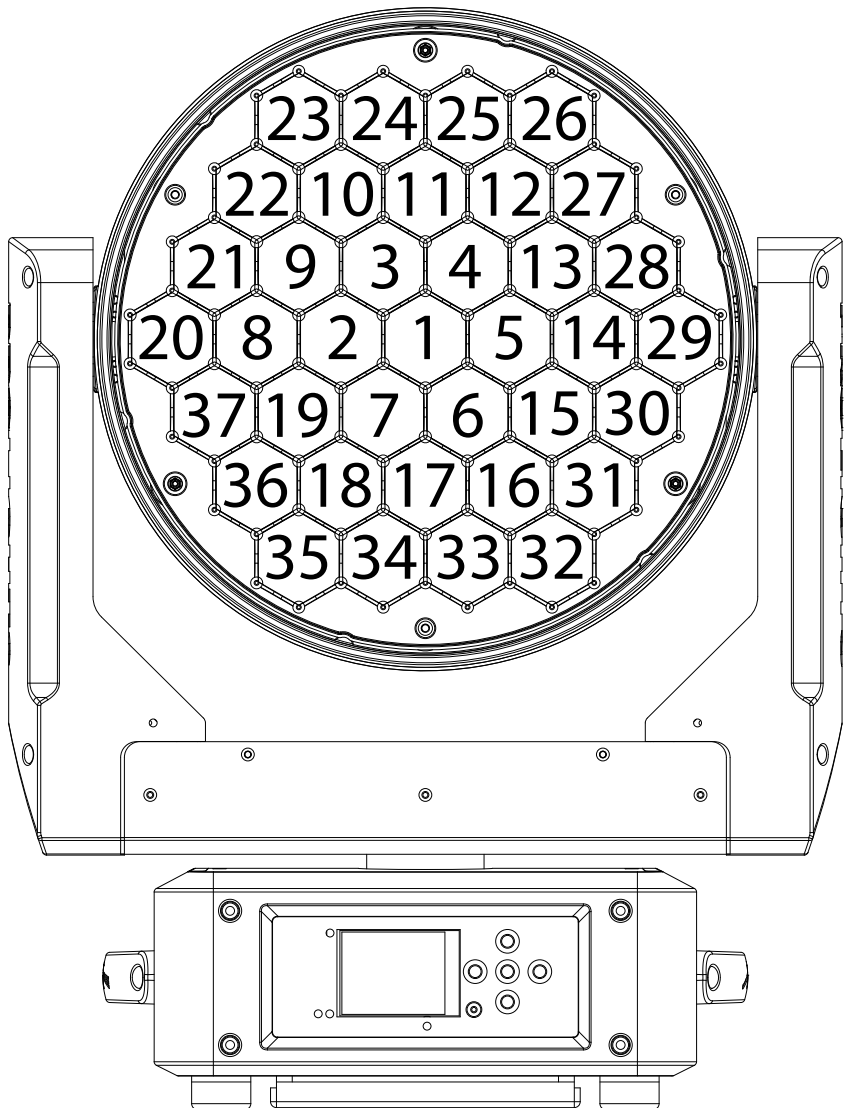


Fig.8 - Numerazione LED

3.16 IMPOSTAZIONE CONTROLLO WIRELESS

Per abilitare la modalità di controllo wireless procedere nel seguente modo:

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Connect**, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **Wireless DMX** e premere il tasto ENTER.
- Premere i tasti direzionali per selezionare il valore desiderato (**001-512**).
- Premere il tasto ENTER per confermare l'impostazione.

Per modificare le impostazioni di controllo wireless procedere nel seguente modo:

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona Set, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **Wireless Set** e premere il tasto ENTER per procedere.
- Selezionare l'opzione proposta con il tasto UP/DOWN e premere il tasto ENTER per confermare la scelta.
 1. **DMX On Cable** - Disabilita/abilita il segnale DMX via cavo. Selezionare **OFF** per disattivare la funzione oppure **ON** per attivare la funzione.
 2. **Reset Connect** - Reset della connessione wireless dell'unità. Selezionare **OFF** per disattivare la funzione oppure **ON** per attivare la funzione.
- Premere il tasto ENTER per confermare la scelta.
- Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

3.17 IMPOSTAZIONE ETHERNET

Per abilitare la modalità Art-Net procedere nel seguente modo:

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Connect**, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **Art-Net** e premere il tasto ENTER.
- Premere i tasti direzionali per selezionare il valore desiderato (**001-491**).
- Premere il tasto ENTER per confermare l'impostazione.

Per modificare le impostazioni ethernet procedere nel seguente modo:

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona Set, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **Ethernet Set** e premere il tasto ENTER per procedere.
- Selezionare l'opzione proposta con il tasto UP/DOWN e premere il tasto ENTER per confermare la scelta. Impostare i valori di IP Address, IP Mask e Universe per configurare Art-Net.

Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

3.18 IMPOSTAZIONI DEL PROIETTORE

È possibile modificare i parametri relativi al dispositivo procedendo nel seguente modo:

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Set**, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **Movement** e premere il tasto ENTER per procedere.
- Selezionare l'opzione proposta con il tasto UP/DOWN e premere il tasto ENTER per confermare.
 - **Pan Reverse** - Rotazione in senso opposto della testa mobile. **OFF** per disattivare la funzione (impostazione normale); **ON** per attivare la funzione (Pan Reverse).
 - **Tilt Reverse** - Inclinazione in senso opposto della testa mobile. **OFF** per disattivare la funzione (impo-

stazione normale), **ON** per attivare la funzione (Tilt Reverse).

- **Pan Degree** - Angolo di Pan. Selezionare **540°** oppure **630°** per impostare l'angolo massimo di rotazione della testa mobile.
- **Encoders** - Riassetto posizione Pan/Tilt dopo spostamento accidentale. Selezionare **OFF** per disattivare la funzione oppure **ON** per attivare la funzione.
- **Pan/Tilt Mode** - Tipo di movimento della testa mobile. Selezionare **Standard** per ottenere dei movimenti di Pan/Tilt fluidi e veloci, **Smooth** per avere dei movimenti di Pan/Tilt più lenti e morbidi.
- Premere il tasto ENTER per confermare la scelta.
- Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

3.19 IMPOSTAZIONI LAMPADA

È possibile modificare i parametri relativi alla lampada del dispositivo procedendo nel seguente modo:

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Light**, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare una delle seguenti impostazioni e premere il tasto ENTER per visualizzarla.
 - **Max Temperature** - Temperatura limite di funzionamento. Questa funzione permette di impostare la massima temperatura interna del proiettore, superata la quale la lampada del dispositivo si spegnerà automaticamente. Premere i tasti direzionali per impostare la temperatura desiderata nei limiti consentiti (60°-139°). Temperature interne inferiori ai 90° C non sono critiche. Si consiglia di attivare tale funzione per temperature superiori ai 90°.
 - **Lamp Adjust** - Regolazioni della lampada. Questa funzione consente di modificare tutti i parametri della lampada: **Control, Pan, Pan Fine, Tilt, Tilt Fine, Pan&Tilt Speed, Pan&Tilt Fun, Shutter Fun, Shutter, Dimmer, Color Function, Virtual Color1, Virtual Color2, Red-All, Green-All, Blue-All, White-All, Zoom, Foreground, Background, Pattern, Pattern Speed, Pattern Byte1, Pattern Byte2, Pattern Byte3, Pattern Byte4, Pattern Byte5, Pattern Byte6, Pattern Byte7, Pattern Byte8, ... , Pattern Byte19**. Premere i tasti UP/DOWN per selezionare uno dei parametri e premere ENTER per modificarne il valore (000-255) attraverso i tasti UP/DOWN.
- Premere il tasto ENTER per confermare la scelta.
- Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

3.20 IMPOSTAZIONI DISPLAY

È possibile modificare i seguenti parametri, relativi al display, seguendo la medesima procedura:

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Set**, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **UI Set** e premere il tasto ENTER per procedere.
- Premere il tasto UP/DOWN per selezionare una delle seguenti impostazioni relative al display e premere il tasto ENTER per visualizzarla.
 - **Backlight** - Retroilluminazione display Auto Off. Questa funzione permette di spegnere automaticamente la retroilluminazione del display dopo un determinato tempo che può essere impostato tramite i tasti direzionali. Per avere il display sempre acceso seleziona **Always On** oppure impostare un valore di 01-99 **min** per far spegnere il display una volta trascorso il tempo scelto, dopo l'uscita dal menu.
 - **Flip Display** - Orientamento del display. Questa funzione permette di ruotare il display di 180° per ottenere una migliore visualizzazione del display quando l'unità è appesa a testa in giù. Selezionare **ON** per attivare la funzione oppure **OFF** per disattivarla.
 - **Display Bright** - Intensità illuminazione. Usare i tasti direzionali per selezionare un valore da 0-31.

- **Brand Show** - Visualizzazione del brand. Questa funzione permette di scegliere se visualizzare o meno il brand "PROLIGHTS" sul display. Selezionare ON per attivare la funzione oppure OFF per disattivarla.
- **Key lock** - Blocco tasti. Con questa funzione è possibile bloccare i tasti del pannello di controllo, per evitare, ad esempio, manomissioni delle impostazioni. Se questa funzione viene attivata, i tasti vengono bloccati automaticamente. Per disattivare o temporaneamente o disattivare la funzione di blocco tasti, premere i tasti nel seguente ordine per riottenere l'accesso ai comandi di menu: SU, GIÙ, SINISTRA, DESTRA, ENTER. Selezionare ON per attivare la funzione oppure OFF per disattivarla.
- **Language select** - Selezione lingua display. Questa funzione permette di scegliere la lingua desiderata per il menu.
- Premere il tasto ENTER per confermare la scelta.
- Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

3.21 INFORMAZIONI SUL DISPOSITIVO

Per visualizzare tutte le informazioni sul dispositivo procedere nel seguente modo:

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per selezionare l'icona **Information**, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per scorrere nel menu, quindi selezionare una delle seguenti informazioni e premere il tasto ENTER per visualizzarla.
 - **Time Information** - Attraverso la funzione **Time information** è possibile visualizzare sul display il tempo di funzionamento del proiettore.
 - **Temperature** - Attraverso la funzione **Temperature** è possibile visualizzare sul display la temperatura presente all'interno della testa mobile, dove è situata la lampada. La temperatura può essere visualizzata in gradi Celsius o Fahrenheit (vedi pagina 31).
 - **Fans Speed** - Attraverso la funzione **Fans Speed** è possibile visualizzare sul display la velocità della ventola presente vicino la lampada. La misura della velocità è espressa in RPM (giri per minuto).
 - **Channel Value** - Attraverso la funzione **Channel Value** è possibile visualizzare sul display i valori dei canali con cui l'unità funzionerà una volta accesa.
 - **Error Message** - Attraverso la funzione **Error Message** è possibile visualizzare sul display gli eventuali errori dei canali.
 - **Fixture Model** - Attraverso la funzione **Fixture Model** è possibile visualizzare sul display il codice del modello e il nome del produttore.
 - **Software Version** - Attraverso la funzione **Software Version** è possibile visualizzare sul display la versione del software installata.
- Premere il tasto LEFT più volte per uscire dal menu.

3.22 RESET DELLE FUNZIONI

È possibile avviare un programma preimpostato per ripristinare la funzione selezionata:

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Set**, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **Reset** e premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per scorrere nel menu, quindi selezionare la funzione che si desidera resettare fra **All**, **Pan&Tilt** e **Others**.
- Premere il tasto ENTER per confermare la scelta ed attendere il ripristino della funzione selezionata.

3.23 FUNZIONI SPECIALI

Per DIAMOND37 è possibile accedere alle seguenti funzioni speciali:

No Signal

Selezionare questa funzione per impostare la modalità di funzionamento preferita da attivare nel caso in cui nell'unità non sia presente alcun segnale DMX di ingresso:

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Set**, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **UI Set** e premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per scorrere nel menu, quindi selezionare **No Signal** e premere il tasto ENTER per confermare.
- Premere il tasto UP/DOWN per selezionare la modalità di funzionamento preferita: **Close/Hold/Auto/Music**.
- Premere il tasto ENTER per confermare la scelta.
- Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

Fans Mode

Selezionare questa funzione per impostare la modalità di funzionamento delle ventole:

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Set**, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **UI Set** e premere il tasto ENTER per procedere.
- Premere il tasto UP/DOWN per scorrere nel menu, quindi selezionare **Fans Mode** e premere il tasto ENTER per confermare.
- Premere il tasto UP/DOWN per selezionare la modalità **Auto Speed/High Speed**, quindi premere il tasto ENTER per confermare la scelta.
- Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

Hibernation

Selezionare questa funzione per attivare la modalità standby nell'unità. Tale funzione si attiverà automaticamente dopo un periodo di inattività, definito dall'utente, senza segnale DMX in ingresso. Nella modalità standby la lampada e tutti i motori non verranno alimentati se nessun segnale viene inviato all'unità per un periodo definito dall'utente. L'unità farà un reset automatico e tornerà operativa non appena viene inviato il segnale DMX.

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Set**, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **UI Set** e premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per scorrere nel menu, quindi selezionare **Hibernation** e premere il tasto ENTER per confermare.
- Selezionare il tempo desiderato attraverso i tasti direzionali oppure selezionare **Not Hibernation** per disabilitare tale funzione, quindi premere il tasto ENTER per confermare la scelta.
- Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

Fixture ID e RDM

DIAMOND37 possiede la funzione di RDM (Remote Device Management) che rende possibile il controllo remoto di dispositivi connessi via DMX. Con questa funzione è possibile richiamare i vari sottomenu dell'unità.

Le impostazioni manuali, come ad esempio la regolazione dell'indirizzo DMX di partenza, non sono più necessarie. Questa funzione diventa particolarmente utile quando il dispositivo è installato in una zona remota. La tecnologia RDM si integra nel DMX senza influenzare la connessione. I dati RDM vengono trasmessi tramite lo standard XLR a poli 1 e 2. Per questo non sono necessari cavi DMX appositi. Tecnologia RDM e convenzionali dispositivi DMX possono operare in un'unica linea DMX. Se vengono utilizzati splitter DMX e viene usato un controller RDM, gli splitter devono supportare il protocollo RDM. Il numero e il tipo di parametri RDM dipendono dal controller (non incluso) utilizzato.

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Set**, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **Fixture ID** e premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per scorrere nel menu, quindi selezionare **Password** e premere il tasto ENTER per confermare.
- Tramite i tasti direzionali inserire la password **050** e premere il tasto ENTER per confermare.
- Una volta inserita la password è possibile impostare il PID Code, necessario per controllare l'unità con il protocollo RDM. Premere il tasto UP/DOWN per scorrere nel menu, quindi selezionare **PID Code** e premere il tasto ENTER per confermare.
- Attraverso i tasti direzionali inserire il PID Code, quindi premere il tasto ENTER per confermare la scelta.
- Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

Calibration

Selezionare questa funzione per calibrare e regolare le ruote degli effetti nelle loro posizioni corrette:

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Set**, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **Calibration** e premere il tasto ENTER per procedere.
- Premere il tasto UP/DOWN per scorrere nel menu, quindi selezionare **Password** e premere il tasto ENTER per confermare.
- Tramite i tasti direzionali inserire la password 050 e premere il tasto ENTER per confermare.
- Una volta inserita la password è possibile impostare i valori di **Pan**, **Tilt**. Premere il tasto UP/DOWN per scorrere nel menu, quindi selezionare una delle funzioni appena citate e premere il tasto ENTER per confermare la scelta.
- Attraverso i tasti direzionali inserire il valore desiderato, quindi premere il tasto ENTER per confermare la scelta.
- Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

Reload Default

Selezionare questa funzione per ripristinare l'unità alle impostazioni di fabbrica:

- Premere il tasto ENTER per accedere al menu principale.
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Set**, quindi premere il tasto ENTER per accedere al menu successivo.
- Premere il tasto UP/DOWN per selezionare **Reload Default** e premere il tasto ENTER per procedere.
- Premere il tasto UP/DOWN per selezionare la modalità di ripristino preferita **Basic Reload/Program Reload/Private Reload/All Reload**, quindi premere il tasto ENTER per confermare.
- Premere i tasti UP/DOWN per selezionare **ON** oppure **OFF**, quindi premere il tasto ENTER per confermare.

Temperature C/F

Selezionare questa funzione per impostare l'unità di misura della temperatura visualizzata sul display:

- Premere il tasto ENTER per accedere al menu principale.

-
- Premere il tasto UP/DOWN per scorrere nel menu, selezionare l'icona **Set**, quindi premere il tasto ENTER per accedere al menu successivo.
 - Premere il tasto UP/DOWN per selezionare **UI Set** e premere il tasto ENTER per procedere.
 - Premere il tasto UP/DOWN per scorrere nel menu, quindi selezionare **Temperature C/F** e premere il tasto ENTER per confermare.
 - Premere il tasto UP/DOWN per selezionare l'unità di misura **Celsius/Fahrenheit**, quindi premere il tasto ENTER per confermare la scelta.
 - Premere il tasto LEFT più volte per uscire dal menu e per salvare le modifiche apportate.

- 4 - MANUTENZIONE

4.1 MANUTENZIONE E PULIZIA DEL SISTEMA OTTICO

- Durante gli interventi, assicurarsi che l'area sotto il luogo di installazione sia libera da personale non qualificato.
- Spegnerne l'unità, scollegare il cavo di alimentazione ed aspettare finché l'unità non si sia raffreddata.
- Tutte le viti utilizzate per l'installazione dell'unità e le sue parti dovrebbero essere assicurate saldamente e non dovrebbero essere corrose.
- Alloggiamenti, elementi di fissaggio e di installazione (soffitto, truss, sospensioni) dovrebbero essere totalmente esenti da qualsiasi deformazione.
- Quando una lente ottica è visibilmente danneggiata a causa di rotture o graffi profondi, deve essere sostituita.
- I cavi di alimentazione devono essere in condizione impeccabile e dovrebbero essere sostituiti immediatamente nel momento in cui anche un piccolo problema viene rilevato.
- Al fine di proteggere l'unità da surriscaldamento, le ventole di raffreddamento (e nel caso) le aperture di ventilazione, devono essere pulite mensilmente.

Per mantenere funzionalità e rendimento ottimali per lungo tempo è indispensabile effettuare una pulizia periodica delle parti soggette all'accumulo di polveri e grassi. La frequenza con la quale effettuare le operazioni sotto indicate dipende da diversi fattori, quali la quantità di movimenti degli effetti e la qualità dell'ambiente di lavoro (umidità dell'aria, presenza di polvere, salsedine, ecc.). Per rimuovere lo sporco dal riflettore, dalle lenti e dai filtri usare un panno morbido inumidito di un qualsiasi liquido detergente per la pulizia del vetro. Annualmente si consiglia di sottoporre il proiettore a personale tecnico qualificato per una manutenzione straordinaria consistente almeno nelle seguenti operazioni:

- Pulizia generale delle parti interne.
- Ripristino della lubrificazione di tutte le parti soggette ad attrito tramite l'utilizzo di lubrificanti appropriati.
- Controllo visivo generale di componenti interni, cablaggio, parti meccaniche, ecc.
- Controlli elettrici, fotometrici e funzionali; eventuali riparazioni.

Attenzione: consigliamo che la pulizia interna sia eseguita da personale qualificato!

4.2 SOSTITUZIONE FUSIBILE

1. Assicurarsi di scollegare il cavo di alimentazione del proiettore prima di sostituire un fusibile bruciato.
2. Con un cacciavite, rimuovere il portafusibile dalla sua sede e il fusibile bruciato dal suo supporto; sostituire il fusibile con uno identico per tipologia e valore.
3. Inserire il portafusibile al suo posto e ricollegare l'alimentazione.

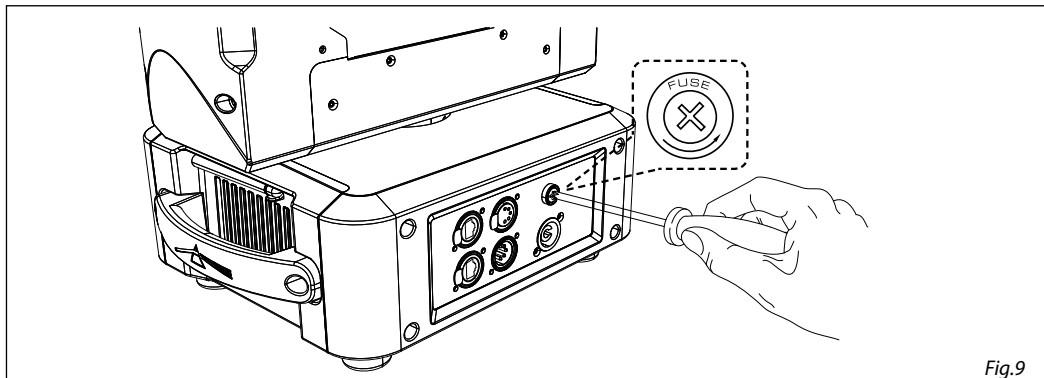


Fig.9

4.3 RISOLUZIONE DEI PROBLEMI

Anomalie	Possibili cause	Controlli e rimedi
Il proiettore non illumina	<ul style="list-style-type: none"> • Mancanza di alimentazione di rete • Dimmer impostato a 0 • Tutti i colori impostati a 0 • LED difettoso/i • Scheda LED difettosa 	<ul style="list-style-type: none"> • Verificare la presenza della tensione alimentazione • Incrementare i valori del canale dimmer • Incrementare i valori dei canali colori • Sostituire scheda LED • Sostituire scheda LED
Bassa intensità di luce generale	<ul style="list-style-type: none"> • Lenti sporche • Lente disallineata 	<ul style="list-style-type: none"> • Pulire il dispositivo regolarmente • Installare il gruppo ottico correttamente
Il proiettore non è alimentato	<ul style="list-style-type: none"> • Mancanza di alimentazione di rete • Cavo di alimentazione danneggiato • Alimentatore interno difettoso 	<ul style="list-style-type: none"> • Verificare la presenza della tensione alimentazione • Controllare il cavo di alimentazione • Sostituire l'alimentatore interno
Il proiettore non risponde al DMX	<ul style="list-style-type: none"> • Indirizzamento DMX errato • Cavo di segnale DMX difettoso • Rimbalzo segnale DMX 	<ul style="list-style-type: none"> • Controllare il pannello di controllo e l'indirizzamento delle unità • Controllare il cavo di segnale DMX • Installare una terminazione DMX come suggerito

Rivolgersi a un centro di assistenza tecnico autorizzato nel caso in cui il problema non sia riportato in tabella.

